

## Business Talk Mitel MiVoice 5000 IPBX

Versions concerned by this guide: R8.2, R8.1, R8.0

Information included in this document is dedicated to customer equipment (IPBX, TOIP ecosystems) connection to Business Talk service: it shall not be used for other goals or in another context.

Latest edition: 06/30/2025



## Contents

| 1 | Goal       | of this document  | 4  |
|---|------------|---|----|
| 2 | Certi      | fied architectures  | 5  |
|   | 2.1        | Introduction to architecture components and features  | 5  |
|   | 2.2        | Mivoice 5000 Direct SIP trunk architecture on Business VPN  | 5  |
|   | 2.3        | SIP trunk «Enterprise SBC» architecture on Business VPN   | 7  |
|   | 2.4        | SIP trunk « Mitel integrated SBC» architecture on Internet  | 9  |
|   |            | 2.4.1 Configuration models  | 10 |
|   |            | 2.4.2 Prerequisites   |    |
|   |            | 2.4.3 Publique IP address assignment  |    |
|   |            | 2.4.4 Public DNS record   |    |
|   |            | 2.4.5 Public DNS relay  |    |
|   |            | 2.4.6 NTP configuration   |    |
|   |            | 2.4.7 Firewall updates  |    |
|   |            | 2.4.8 Certificates  |    |
|   |            | 2.4.9 TLS v1.2 and TLS v1.3 cypher suites compliance  |    |
|   |            | 2.4.10 SRTP encryption on BTalk over Internet   |    |
| 3 | Doro       |   |    |
| J |            | meters to provide by customer to Orange Business for the connection to the service  |    |
|   | 3.1        | Mivoice 5000 direct SIP trunk architecture on Business VPN  |    |
|   | 3.2<br>3.3 | SIP trunk « SBC Enterprise» architecture on Business VPN  |    |
| 4 |            |   |    |
| 4 |            |   |    |
|   | 4.1        | Mitel Mivoice 5000 IPBX versions supported with BTalk/BTalk over Internet   |    |
| _ | 4.2        | Mitel Mivoice 5000 endpoints and applications supported with BTalk/BTalk over Internet  |    |
| 5 | Para       | meters to configure to connect Mivoice 5000 solution to BTalk on BVPN   |    |
|   | 5.1        | SIP trunk creation  |    |
|   | 5.2        | SIP trunk configuration   |    |
|   | 5.3        | Additional configuration: DCF parameters  |    |
|   | 5.4        | Coding laws configuration: network calls  |    |
| 6 | 5.5        | Coding laws configuration: If G729 codec only used for network calls  meters to configure to connect Mivoice 5000 solution to BTalk over Internet |    |
| O |            |   |    |
|   | 6.1        | Public DNS relay configuration  |    |
|   | 6.2        | NTP configuration   |    |
|   | 6.3        | Certificates process  |    |
|   | 6.4<br>6.5 | Integrated SBC configuration  |    |
|   | 6.6        | SIP trunk creation.   |    |
|   | 6.7        | SIP trunk configuration   |    |
|   | 6.8        | Additional configuration: DCF parameters  |    |
|   | 6.9        | Coding laws configuration: network calls  |    |
| 7 |            | meters to be configured common to sections 5 and 6  |    |
|   | 7.1        | Routes configuration  |    |
|   | 7.2        | Outgoing calls handling: IID configuration  |    |
|   | 7.3        | Outgoing calls handling: Outgoing handling configuration  |    |
|   | 7.4        | General settings configuration  |    |
|   | 7.5        | Subscribers characteristics configuration   |    |



| 7.6 | Coding laws configuration: local calls | 32 |
|-----|--|----|
| 7.7 | Configuration marquage DSCP            | 32 |
| 7.8 | CAC configuration                      | 33 |



## 1 Goal of this document

The purpose of this document is to guide administrator to connect a Mitel MiVoice 5000 IPBX to the Business Talk (BTalk) international SIP service (hereinafter referred to as "Service") by providing the required information to Orange Business and by providing the necessary setup instructions.



#### 2 Certified architectures

#### 2.1 Introduction to architecture components and features

This document exclusively describes the architectures supported by Orange that are mainly used by its customers.


Concerning the Quality of Service, Business VPN and BTalk networks trust the DSCP (Differenciated Services Code Point) values sent by customer voice equipment. That's why Orange strongly recommends setting the IPBX, IP phones and other voice applications with a DiffServ/TOS value\* = 46 (or PHB value = EF) at least for media.

\*cf 5.13 section of this document.

Please note that fax communications via Business Talk international service is not supported by the Orange support teams.

#### 2.2 Mivoice 5000 Direct SIP trunk architecture on Business VPN

Access to the Business Talk service is via 2 A-SBCs (nominal and backup).

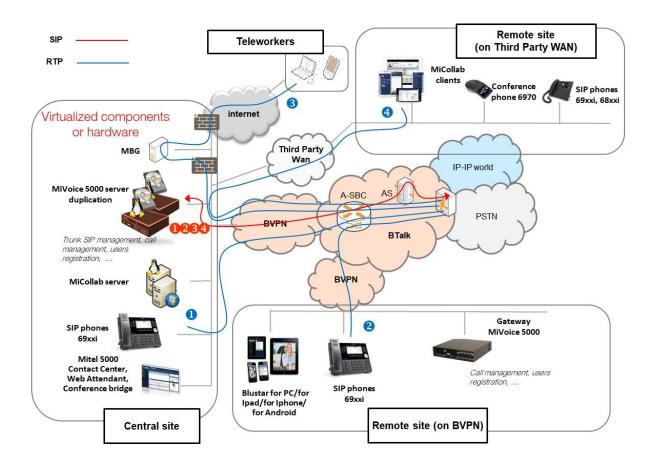

In the diagram above, the SIP and proprietary internal flows are hidden.



- Call from/to central site
- 2 Call from/to remote site (on Business VPN)
- 3 Call from/to teleworker site (on Internet)
- Call from/to remote site (on Third Party WAN)

All SIP trunking signaling flows are carried by the MiVoice 5000 server and routed on the central site BVPN connection.

Media flows are direct between endpoints and BTalk but IP routing differs from one site to another:

- o For the central site, media flows are routed on the main BVPN connection
- For the remote sites on BVPN, media flows are routed on the local BVPN connection (= distributed architecture)
- o For the remote sites on Third Party WAN or Internet, media flows are routed through the central site (but not through the IPBX) and use the main BVPN connection (= centralized architecture)


Below a table including information relative to sizing.

| Call scenario  | nb of voice channels/media resources used |  |                    |
|--|---|--|--------------------|
|  | IPBX                                      | WAN router*                                      | BTalk              |
| 1 offnet call from/to the central site (=HeadQuarter=HQ)   | 1 in HQ                                   | 1 in HQ  | 1 in HQ            |
| 1 offnet call from/to a remote site (RS) on BVPN   | 0 in HQ                                   | 0 in HQ  | 0 in HQ            |
|  | <b>1</b> in RS                            | <b>1</b> in RS                                   | <b>1</b> in RS     |
| 1 offnet call from/to a remote site (RS) on TP Wan   | 0 in HQ<br>1 in RS                        | 1 in HQ BVPN<br>1 in HQ TP Wan<br>1 in RS TP Wan | 0 in HQ<br>1 in RS |
| 1 offnet call from/to a remote site (RS) with put on hold  | 1 in HQ                                   | 1 in HQ  | 0 in HQ            |
|  | 1 in RS                                   | 1 in RS  | <b>1</b> in RS     |
| 1 offnet call from/to a remote site (RS) after transfer/forward to BTalk                                 | 0 in HQ                                   | 0 in HQ  | 0 in HQ            |
|  | <b>0</b> in RS                            | <b>0</b> in RS                                   | <b>2</b> in RS     |
| 1 forced onnet call from the central site (HQ) to a remote site (= through Business Talk infrastructure) | 2 in HQ                                   | 1 in HQ  | <b>0</b> in HQ     |
|  | 2 in RS                                   | 1 in RS  | <b>0</b> in RS     |

<sup>\*</sup>On the WAN router, 1 voice channel= 80Kb/s



#### 2.3 SIP trunk «Enterprise SBC» architecture on Business VPN

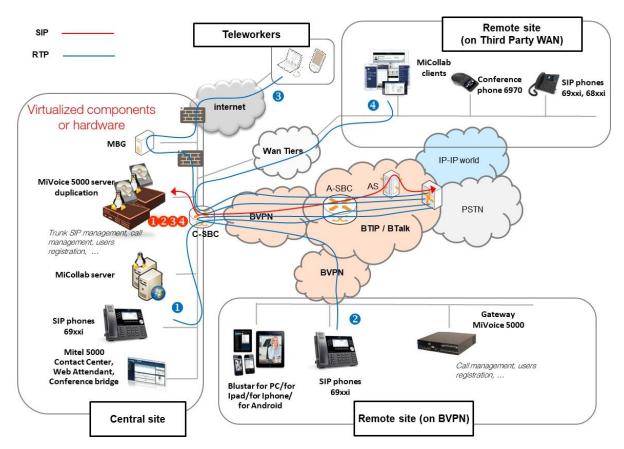

If the Mitel Mivoice 5000 customer solution is complemented by a SBC equipment, named commonly Enterprise SBC or Customer SBC ("C-SBC" on the picture above), Orange will offer one of the following approaches:

- A "Certified Border" approach (or "Certified SBC equipment"), if the SBC used is already certified by Orange\*, regardless of the PBX solution used. Recommendations on this SBC are also available on the Orange Business website.
- A "Generic Offer" approach, if the SBC is not certified by Orange. Orange will not be able to give any recommendation on the choice of hardware, software or configuration, but offers a 'Validation Assistance Service' for the SBC+PBX architecture.

In the diagram above, the proprietary internal flows are hidden.

- Call from/to central site
- Call from/to remote site (on Business VPN)
- Call from/to teleworker site (on Internet)
- Call from/to remote site (on Third Party WAN)



Both 'SIP trunking' and RTP media flows between endpoints and the BTalk are anchored by the enterprise SBC:

- On the central site, media flows are routed through the enterprise SBC and the main BVPN connection
- On the remote sites either on BVPN or Third Party WAN, media flows transit through the enterprise SBC and use the central BVPN connection (= centralized architecture)
- \* The list of enterprise SBC equipment models supported by Orange is available in section 4.2 of the document.

The fact that the flows are anchored via the C-SBC equipment requires particular attention to be paid to the capacity and sizing of the access network at the central site.

Below is a table with some information on sizing:

| Call scenario  | nb of voice channels/media resources used |  |                           |
|--|---|--|---------------------------|
|  | IPBX                                      | WAN router*                                      | BTalk                     |
| 1 offnet call from/to the central site (=HeadQuarter=HQ)   | 1 in HQ                                   | 1 in HQ  | 1 in HQ                   |
| 1 offnet call from/to a remote site (RS) on BVPN   | 0 in HQ<br><b>1</b> in RS                 | 2 in HQ<br>1 in RS                               | 0 in HQ<br><b>1</b> in RS |
| 1 offnet call from/to a remote site (RS) on TP Wan   | 0 in HQ<br>1 in RS                        | 1 in HQ BVPN<br>1 in HQ TP Wan<br>1 in RS TP Wan | 0 in HQ<br>1 in RS        |
| 1 offnet call from/to a remote site (RS) with put on hold  | 1 in HQ<br>1 in RS                        | 3 in HQ<br>1 in RS                               | 0 in HQ<br><b>1</b> in RS |
| 1 offnet call from/to a remote site (RS) after transfer/forward to BTalk                                 | 0 in HQ<br><b>0</b> in RS                 | 0 on HQ** / 3 on<br>HQ***<br><b>0</b> on RS      | 0 in HQ<br><b>2</b> in RS |
| 1 forced onnet call from the central site (HQ) to a remote site (= through Business Talk infrastructure) | 2 in HQ<br>2 in RS                        | 3 in HQ<br>1 in RS                               | 0 in HQ<br>0 in RS        |


<sup>\*</sup>On the WAN router, 1 voice channel= 80Kb/s

<sup>\*\*</sup>if media release is activated on the enterprise SBC

<sup>\*\*\*</sup>if media release is not activated on the enterprise SBC



#### 2.4 SIP trunk « Mitel integrated SBC» architecture on Internet

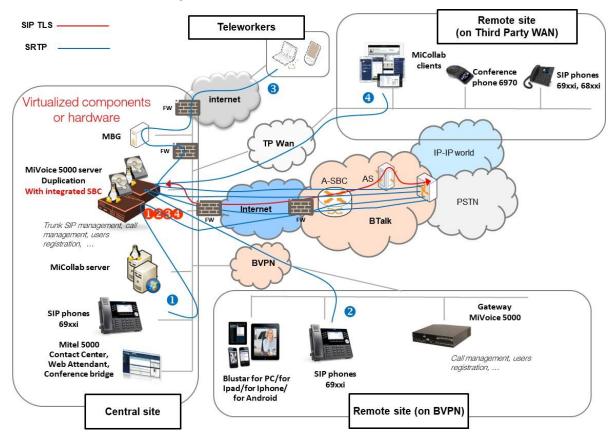

In the diagram above, the proprietary internal flows are hidden.

- Call from/to central site
- 2 Call from/to remote site (on Business VPN)
- 6 Call from/to teleworker site (on Internet)
- Call from/to remote site (on Third Party WAN)

In this architecture, the SBC used is the one integrated in the Mitel MiVoice 5000 solution.

#### SIP TLS et Secured RTP

By default, Orange recommends that for security and privacy reasons all SIP messages and media packets are encrypted over the public Internet between the Orange infrastructure and the customer's SIP equipment on the Internet.


Both SIP trunking and RTP media flows between the terminals and BTalk are anchored on the Mitel integrated SBC:

- o At the central site, media streams are routed via the Mitel SBC and the central site Internet connection
- o At remote sites, over BVPN, Third Party WAN or Internet, media streams are routed via the integrated SBC and use the central site's BTalk over Internet connection (= centralized architecture).



#### 2.4.1 Configuration models

The recommended configuration model for integration with the BTalk over Internet offer (see BTalk Internet Technical Requirements), as part of the Mitel 5000 solution with integrated SBC (where the MiVoice 5000 and the SBC co-exist on the same machine) is the following:

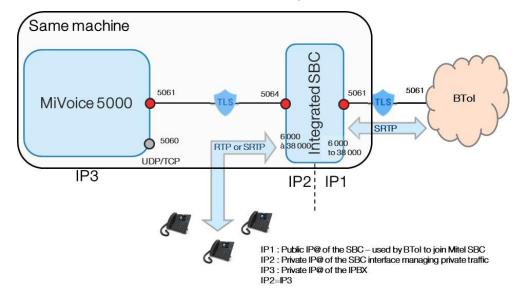

In this model, the public address IP1 is configured on the machine's physical LANB port, without the need for NAT on the Internet firewall, and the private address IP2=IP3 is configured on the machine's physical LANA port.

The configuration details for this topology are explained in Chapter 6 of this document.

Another alternative configuration model is possible (private IP1 address and IP NAT on Internet firewall). Please refer to the Mitel documentation:

https://swdlgw.mitel.com/swdlgw/download.xhtml?token=8788ae41-0fb6-43b4-98f0-f8c48abd6325

#### 2.4.2 Prerequisites

In order to establish the connection with public interface of Orange A-SBC, several preliminary configuration steps have to be performed. These involve the following:

- Public IP address assignment
- Public DNS record
- Public DNS relay configuration
- NTP configuration
- Firewall updates
- Certificate updates
- TLS v1.2 cypher suites compliance
- SRTP encryption
- Supported codecs on BTol

#### 2.4.3 Publique IP address assignment

The certified solution requires the use of a public IP address configured directly on the SBC integrated in the Mivoice 5000 and placed in the DMZ.



No NAT must be performed between the interface of the embedded SBC that carries the public IP address and the BTalk infrastructure.

#### 2.4.4 Public DNS record

The Orange A-SBC is accessible via a Fully Qualified Domain Name (FQDN) with an SRV or A-type record created on a public DNS server.

The Mitel Integrated SBC requires a record on a public DNS server to be accessible via FQDN over public Internet access.

BTalk over Internet supports both public IP and type A records for DNS resolution.

#### 2.4.5 Public DNS relay

For the DNS resolution of the Orange ASBCs, necessary for outgoing calls from the Mitel IPBX to the BTalk over Internet infrastructure, it is necessary to configure one or two public DNS relays in the Mitel SBC, or one or two private DNS servers that will relay the DNS requests to Internet.

#### 2.4.6 NTP configuration

It is recommended that an NTP server be implemented on the Mitel Mivoice 5000 to ensure that the clock of the embedded SBC is kept accurate. This is necessary for the validation of certificates issued to it.

#### 2.4.7 Firewall updates

In order to accommodate the traffic between the Mitel Integrated SBC and the Orange A-SBC, it is necessary to update the firewall rules to open the ports for this traffic.

| BTalk over Internet – port matrix  |                  |                                    |                   |               |  |
|------------------------------------|------------------|------------------------------------|-------------------|---------------|--|
| IP Source                          | Ports Source     | IP<br>Destination                  | Ports Destination | Protocole     |  |
| Public @IP of<br>Integrated<br>SBC | TCP - Any port   | Public @IP of<br>Orange A-SBC      | TCP - 5061        | SIP TLS       |  |
| Public @IP of<br>Orange A-SBC      | TCP - Any port   | Public @IP of<br>Integrated<br>SBC | TCP - 5061        | Signalisation |  |
| Public @IP of<br>Integrated<br>SBC | UDP - 6000-38000 | Public @IP of<br>Orange A-SBC      | UDP - 6000-38000  | SRTP          |  |
| Public @IP of<br>Orange A-SBC      | UDP - 6000-38000 | Public @IP of<br>Integrated<br>SBC | UDP - 6000-38000  | media         |  |
| Public @IP of<br>Integrated<br>SBC | UDP – Any port   | Public client<br>DNS relay         | UDP - 53          | DNS           |  |

#### 2.4.8 Certificates

In order to ensure secure traffic, public root and intermediate certificates must be exchanged between the Mitel Integrated SBC and the Orange A-SBC.

The Mitel SBC requires an identity certificate signed by a root certificate from a public certificate authority (including any intermediate certificates involved in the chain of trust).

The customer must provide the Orange BTalk team with the public root and intermediate certificates of the same public certification authority, in PEM (X509 V3) format.



In the event that the public root and intermediate certificates used by Orange (Digicert) to sign the Orange ASBC identity certificates are different, the customer must retrieve them and upload them to the Mitel SBC.

Note that it is not possible to generate a Certificate Signing Request (CSR) file directly on the integrated SBC (MiVoice 5000).

Therefore, the customer must generate the CSR file himself and then have it signed by a public Certificate Authority.

#### 2.4.9 TLS v1.2 and TLS v1.3 cypher suites compliance

The cypher suites supported by the Orange A-SBC for TLS v1.3 (recommended version by Orange) are shown below:

- TLS\_AES\_256\_GCM\_SHA384 (0x1302)
- TLS\_AES\_128\_GCM\_SHA256 (0x1301)
- TLS\_CHACHA20\_POLY1305\_SHA256 (0x1303)

The cypher suites supported by the Orange A-SBC for TLS v1.2 (alternative version) are shown below:

- TLS\_ECDHE\_RSA\_WITH\_AES\_256\_GCM\_SHA384 (0xc030)
- TLS\_ECDHE\_RSA\_WITH\_AES\_128\_GCM\_SHA256 (0xc02f)
- TLS\_ECDHE\_RSA\_WITH\_AES\_256\_CBC\_SHA384 (0xc028)
- TLS\_ECDHE\_RSA\_WITH\_AES\_128\_CBC\_SHA256 (0xc027)

For TLS v1.3, the integrated Mitel SBC supports, among other things, the following cryptographic suites. The three suites supported by BTalk over Internet are highlighted in bold:

- TLS\_AES\_256\_GCM\_SHA384 (0x1302)
- TLS\_CHACHA20\_POLY1305\_SHA256 (0x1303)
- TLS\_AES\_128\_GCM\_SHA256 (0x1301)
- TLS AES 128 CCM SHA256 (0x1304)

For TLS v1.2, the integrated Mitel SBC supports, among other things, the following cryptographic suites. The four suites supported by BTalk on the Internet are highlighted in bold:

- TLS\_ECDHE\_ECDSA\_WITH\_AES\_256\_GCM\_SHA384 (0xc02c)
- TLS\_ECDHE\_RSA\_WITH\_AES\_256\_GCM\_SHA384 (0xc030)
- TLS\_ECDHE\_ECDSA\_WITH\_CHACHA20\_POLY1305\_SHA256 (0xcca9)
- TLS\_ECDHE\_RSA\_WITH\_CHACHA20\_POLY1305\_SHA256 (0xcca8)
- TLS\_ECDHE\_ECDSA\_WITH\_AES\_256\_CCM\_8 (0xc0af)
- TLS\_ECDHE\_ECDSA\_WITH\_AES\_256\_CCM (0xc0ad)
- TLS\_ECDHE\_ECDSA\_WITH\_ARIA\_256\_GCM\_SHA384 (0xc05d)
- TLS\_ECDHE\_RSA\_WITH\_ARIA\_256\_GCM\_SHA384 (0xc061)
- TLS\_ECDHE\_ECDSA\_WITH\_AES\_128\_GCM\_SHA256 (0xc02b)
- TLS\_ECDHE\_RSA\_WITH\_AES\_128\_GCM\_SHA256 (0xc02f)
- TLS\_ECDHE\_ECDSA\_WITH\_AES\_128\_CCM\_8 (0xc0ae)
- TLS\_ECDHE\_ECDSA\_WITH\_AES\_128\_CCM (0xc0ac)
- TLS\_ECDHE\_ECDSA\_WITH\_ARIA\_128\_GCM\_SHA256 (0xc05c)
- TLS\_ECDHE\_RSA\_WITH\_ARIA\_128\_GCM\_SHA256 (0xc060)
- TLS\_ECDHE\_ECDSA\_WITH\_AES\_256\_CBC\_SHA384 (0xc024)
- TLS\_ECDHE\_RSA\_WITH\_AES\_256\_CBC\_SHA384 (0xc028)
- TLS\_ECDHE\_ECDSA\_WITH\_AES\_128\_CBC\_SHA256 (0xc023)
- TLS\_ECDHE\_RSA\_WITH\_AES\_128\_CBC\_SHA256 (0xc027)



The Mitel integrated SBC and Orange A-SBC will negotiate the most secure matched cipher suite (TLS\_ECDHE\_RSA\_WITH\_AES\_256\_GCM\_SHA384) to establish TLS connection.

On the MiVoice 5000 solution, it is important to note that an "Encryption" licence is required to activate the encryption of flows by the integrated SBC.

#### 2.4.10 SRTP encryption on BTalk over Internet

AES\_CM\_128\_HMAC\_SHA1\_80 suite is recommended for media encryption.

#### 2.4.11 Supported codecs on BTalk over Internet

Supported codec is G.711A (20ms) for BTalk over Internet. G.711u (20ms) can be requested on specific case.



## 3 Parameters to provide by customer to Orange Business for the connection to the service

Below are the parameters (in red) that the customer must provide to Orange Business to connect its IPBX to the service.

Several types of architecture are supported.

#### 3.1 Mivoice 5000 direct SIP trunk architecture on Business VPN

| Central site architecture   | Level of service   | Customer IP addresses used by the service   |  |  |  |
|---|--|---|--|--|--|
| ARCHITECTURE 1: NO REDUNDANCY   |  |   |  |  |  |
| Single MiVoice 5000 platform (Call server or Mitel gateway)   | No redundancy  | MV5000 IP@  |  |  |  |
| ARCHITECTURE 2: DUPLICATED SERVERS  |  |   |  |  |  |
| Duplicated MiVoice 5000 Call Servers  | Local redundancy<br>(active/passive)   | Virtual Call Server IP@   |  |  |  |
| ARCHITECTURE 3: SPATIAL REDUNDANCY  |  |   |  |  |  |
| Spatial redundant MiVoice 5000 Call Servers   | Redundancy on 2<br>different physical sites<br>(active/passive)                            | Virtual Call Server IP@   |  |  |  |
| ARCHITECTURE 4*: DUAL-HOMING - 1 NUMB   | ERING PLAN   |   |  |  |  |
| 2 MiVoice 5000 platforms (active/active) in nominal /backup mode for a group of users (1 numbering plan).  The MiVoice 5000 platforms can be hosted on the same site or on 2 different physical sites.  Each MiVoice 5000 platform (MV5000-1 and MV5000-2) has its own SIP trunk but the MV5000-2 SIP trunk is only used as a backup.  Both platforms are independent but considered as being part of one central site.  - Nominal mode: All users register on MV5000-1 platform  - Backup mode: All users re-register on MV5000-2 platform  A MiVoice 5000 platform can be a Call server (or duplicated or spatial redundant Call servers) or a Mitel gateway. | User registration<br>survivability (IP phones<br>only)<br>Rerouting at Orange SBC<br>level | Nominal MV5000-1 platform<br>(MV5000-1) IP@<br>And<br>Backup MV5000-2 platform (MV5000-2) IP@ |  |  |  |



| Central site architecture  | Level of service   | Customer IP addresses used by the service |  |  |  |
|--|--|---|--|--|--|
| ARCHITECTURE 5*: DUAL-HOMING - 2 NUMBERING PLANS   |  |   |  |  |  |
| 2 MiVoice 5000 platforms (active/active) hosted on 2 different physical sites (HQ1 et HQ2). Each platform manages a range of users (2 numbering plans). Each platform (MV5000-1 and MV5000-2) has its own SIP trunk and each manages its own group of users in nominal mode In Nominal mode: All HQ1 users register on HQ1 MV5000-1 platform All HQ2 users register on HQ2 MV5000-2 platform   | MV5000-1 HQ1 User registration survivability (IP phones only) Rerouting at BTalk service level | HQ1 MV5000-1 IP@                          |  |  |  |
| - In Backup mode: In case of HQ1 MV5000-1 platform crash, all HQ1 users re-register on HQ2 MV5000-2. In case of HQ2 MV5000-2 platform crash, all HQ2 users re-register on HQ1 MV5000-1.  Warning: Access capacity of both HQ sites has to be sized adequately. The 2 HQ sites have to be both connected via MOVACS for example. A MiVoice 5000 platform can be a Call server (or duplicated or spatial redundant Call servers) or a Mitel gateway. | MV5000-2 HQ2 User registration survivability (IP phones only) Rerouting at BTalk service level | HQ2 MV5000-2 IP@                          |  |  |  |

| Remote Site (RS) architecture  Any Remote site architecture can be associated to any Central site Architecture listed above | Level of service  | Customer IP addresses<br>used by the service |
|---|---|--|
| Remote site without Mitel gateway   | No survivability  | N/A  |
| Remote site with Mitel gateway  | Local survivability for the remote site hosting the gateway in case of non-access to Central site – Via PSTN only   | N/A  |
| Remote site with Mitel gateway + Backup SIP trunk   | Local survivability for the remote site hosting the gateway in case of non-access to Central site. SIP trunk used as backup solution for incoming and outgoing traffic. | Gateway IP@                                  |



### 3.2 SIP trunk « SBC Enterprise» architecture on Business VPN

| Central site architecture                         | Level of service                                  | Customer IP addresses used by the service                      |
|---|---|--|
| 1 enterprise SBC                                  | No redundancy                                     | Enterprise SBC IP@   |
| 2 enterprise SBC<br>In nominal/backup mode        | Local redundancy or on 2 different physical sites | Nominal enterprise SBC IP@<br>And<br>Backup enterprise SBC IP@ |
| 2 enterprise SBC<br>In load sharing mode          | Local redundancy or on 2 different physical sites | Virtual IP@ of enterprise SBCs                                 |
| 2 enterprise SBC<br>In High Availabilty (HA) mode | Local redundancy or on 2 different physical sites | Virtual IP@ of enterprise SBCs                                 |

| Remote Site (RS) architecture Any Remote site architecture can be associated to any Central site Architecture listed above | Level of service  | Customer IP addresses used by the service |
|--|---|---|
| Remote site without Mitel gateway  | No survivability  | N/A                                       |
| Remote site with Mitel gateway   | Local survivability for the remote site hosting the gateway in case of non-access to Central site – Via PSTN only | N/A                                       |

## 3.3 SIP trunk Mitel « integrated SBC» architecture over Internet

| Central site architecture  | Level of service  | Customer IP addresses used by the service         |  |  |  |
|--|---|---|--|--|--|
| ARCHITECTURE 1: NO REDUNDANCY  |   |   |  |  |  |
| Single MiVoice 5000 platform with integrated SBC (Mitel Call server or EX gateway) | No redundancy   | Integrated SBC public FQDN DNS type A or type SRV |  |  |  |
| ARCHITECTURE 2: DUPLICATED SERVERS   |   |   |  |  |  |
| Duplicated MiVoice 5000 Call servers with integrated SBC                           | Local redundancy<br>(active/passive)                            | Integrated SBC public FQDN DNS type A or type SRV |  |  |  |
| ARCHITECTURE 3: SPATIAL REDUNDANCY   |   |   |  |  |  |
| Spatial redundant MiVoice 5000 Call servers with integrated SBC                    | Redundancy on 2<br>different physical sites<br>(active/passive) | Integrated SBC public FQDN DNS type A or type SRV |  |  |  |



| Central site architecture   | Level of service   | Customer IP addresses used by the service  |  |  |  |  |
|---|--|--|--|--|--|--|
| ARCHITECTURE 4*: DUAL-HOMING - 1 NUMBERING PLAN   |  |  |  |  |  |  |
| 2 MiVoice 5000 platforms with integrated SBC (active/active) in nominal /backup mode for a group of users (1 numbering plan).  The MiVoice 5000 platforms can be hosted on the same site or on 2 different physical sites.  Each MiVoice 5000 platform (MV5000-1 and MV5000-2) has its own SIP trunk but the MV5000-2 SIP trunk is only used as a backup.  Both platforms are independent but considered as being part of one central site.  Nominal mode: All users register on MV5000-1 platform  Backup mode: All users re-register on MV5000-2 platform  A MiVoice 5000 platform can be a Call server (or duplicated or spatial redundant Call servers) or a Mitel gateway. | User registration survivability (IP phones only) Rerouting at Orange SBC level                 | Integrated SBC public FQDN DNS type A or type SRV of the nominal MV5000-1 platform (MV5000-1) And Integrated SBC public FQDN DNS type A or type SRV of the backup MV5000-2 platform (MV5000-2) |  |  |  |  |
| ARCHITECTURE 5*: DUAL-HOMING - 2 NUMBER   | RING PLANS   |  |  |  |  |  |
| 2 MiVoice 5000 platforms (active/active) hosted on 2 different physical sites (HQ1 et HQ2). Each platform manages a range of users (2 numbering plans). Each platform (MV5000-1 and MV5000-2) has its own SIP trunk and each manages its own group of users in nominal mode.  - In Nominal mode: All HQ1 users register on HQ1 MV5000-1 platform All HQ2 users register on HQ2 MV5000-2 platform  | HQ1 MV5000-1 User registration survivability (IP phones only) Rerouting at BTalk service level | Integrated SBC public FQDN<br>DNS type A or type SRV of<br>the nominal HQ1 MV5000-1<br>platform (MV5000-1)   |  |  |  |  |
| - In Backup mode: In case of HQ1 MV5000-1 platform crash, all HQ1 users re-register on HQ2 MV5000-2. In case of HQ2 MV5000-2 platform crash, all HQ2 users re-register on HQ1 MV5000-1.  Warning: Access capacity of both HQ sites has to be sized adequately. The 2 HQ sites have to be both connected via MOVACS for example. A MiVoice 5000 platform can be a Call server (or duplicated or spatial redundant Call servers) or a Mitel gateway.  | HQ2 MV5000-2 User registration survivability (IP phones only) Rerouting at BTalk service level | Integrated SBC public FQDN<br>DNS type A or type SRV of<br>the nominal HQ2 MV5000-2<br>platform (MV5000-2)   |  |  |  |  |

| Remote Site (RS) architecture Any Remote site architecture can be associated to any Central site Architecture listed above | Level of service  | Customer IP addresses used by the service |
|--|---|---|
| Remote site without Mitel gateway  | No survivability  | N/A                                       |
| Remote site with Mitel gateway   | Local survivability for the remote site hosting the gateway in case of non-access to Central site – Via PSTN only | N/A                                       |



## 4 BTalk/BTalk over Internet certified MiVoice 5000 versions

Orange supports the last two major versions of the MiVoice 5000 solution when they are still supported by Mitel, and ensures that the infrastructure evolutions of its Business Talk service continue to interact correctly with these supported versions and the associated architectures.

For more details on the Mitel Mivoice 5000 release lifecycle, please refer to the WEB page https://pcm.mitel.com/Default.aspx (Mitel MiAccess).

#### 4.1 Mitel Mivoice 5000 IPBX versions supported with BTalk/BTalk over Internet

| Mitel MiVoice 5000 IPBX – Software versions |   |                            |                       |  |
|---|---|----------------------------|-----------------------|--|
| Product and versions reference              | <ul><li>✓: Certified by validation</li><li>✓: Compatible by technical analyse</li></ul> |                            |                       |  |
| Troduct and voicine religions               | NS : Not S  |                            | Comments/restrictions |  |
| Mivoice 5000                                |   | Orange Services            |                       |  |
| WIIVOICE 3000                               | BTalk BTalk over Internet   |                            |                       |  |
| R8.2 SP3 B400                               | ✓   | ✓ Via Mitel integrated SBC |                       |  |
| R8.2 SP1 AG00                               | ✓   | ✓ Via Mitel integrated SBC |                       |  |
| R8.1 SP1 B204                               | ✓   | ✓ Via Mitel integrated SBC |                       |  |
| R8.1  | ✓   | ✓ Via Mitel integrated SBC |                       |  |
| R8.0 SP1                                    | ✓   | ✓ Via Mitel integrated SBC |                       |  |

## 4.2 Mitel Mivoice 5000 endpoints and applications supported with BTalk/BTalk over Internet

| Mitel MiVoice 5000 IPBX – Endpoints and applications |                                      |   |  |   |  |
|--|--------------------------------------|---|--|---|--|
|  | roduct reference                     | Minimum product version certified by validation                                 | Mivoice 5000 versions tested with the product versions | Restrictions/Comments   |  |
|  | 6970 (conference phone)              |   | R8.2 SP3, R8.2 SP1,<br>R8.1 SP1, R8.1, R8.0<br>& SP1   |   |  |
|  | 6915                                 |   | R8.2 SP3, R8.2 SP1,<br>R8.1 SP1                        |   |  |
| Mitel SIP  | 6905, 6910                           | Default version   | R8.2 SP3, R8.2 SP1,<br>R8.1 SP1, R8.1, R8.0<br>& SP1   | Please refer to the manufacturer's website, MiAcces -> Compatibility  |  |
| 6920W, 6930W, 6940<br>6920, 6930, 6940               | 6920W, 6930W, 6940W                  | proposed by Mitel with<br>associated MiVoice<br>5000 version                    | R8.2 SP3, R8.2 SP1,<br>R8.1 SP1, R8.1, R8.0<br>& SP1   | Matrix, to check the compatibility of the versions of these products with the MiVoice 5000 versions.  |  |
|  | 6920, 6930, 6940                     |   | R8.2 SP3, R8.2 SP1,<br>R8.1 SP1, R8.1, R8.0<br>& SP1   |   |  |
|  | 6863i, 6865i, 6867i, 6869i,<br>6873i |   | R8.2 SP3, R8.2 SP1,<br>R8.1 SP1, R8.1, R8.0<br>& SP1   |   |  |
| Mitel digital phones                                 | 53xx                                 | Default version<br>proposed by Mitel with<br>associated MiVoice<br>5000 version | R8.1, R8.0 SP1   | These phones are no longer supported by Mitel starting from version R7.2 SP2 of Mivoice 5000 and any subsequent version.  |  |
| Mitel Attendant                                      | InAttend                             | 2.6 SP2   | R8.1, R8.0 SP1   | Please refer to the manufacturer's website, MiAcces -> Compatibility Matrix, to check the compatibility of the versions of these products with the MiVoice 5000 versions. |  |
|  | 712dt, 722dt, 732dt, 742dt           | i, 742dt Default version  | R8.2 SP3, R8.2 SP1,<br>R8.1 SP1                        |   |  |
| Mitel DECT   | A612d, A622d, A632d, A650c           | proposed by Mitel with<br>associated MiVoice<br>5000 version                    | R8.1, R8.0 SP1   | Please refer to the manufacturer's website, MiAcces -> Compatibility  |  |
|  | A610d, A620d, A630d                  |   | R8.1, R8.0 SP1   | Matrix, to check the compatibility  |  |



|   | RFP44/45/47 DECT - OMM  | 9.0-IF25  | R8.2 SP3, R8.2 SP1,<br>R8.1 SP1                                 | of the versions of these products with the MiVoice 5000 versions.    |
|---|-------------------------|---|---|--|
|   | INT 44/43/47 DECT - OWN |   | R8.1, R8.0 SP1  |  |
|   | EVIOV                   | 49.4.3003                                       | R8.2 SP3  |  |
| Mitel Media                                   | EX/GX                   | 48.4.2692                                       | R8.2 SP1, R8.1 SP1,<br>R8.1, R8.0 SP1                           | Please refer to the manufacturer's website, MiAcces -> Compatibility |
| gateways                                      | TA710xi                 | 49.4.3003                                       | R8.2 SP3  | Matrix, to check the compatibility                                   |
|   | 7,7,70                  | 48.4.2692                                       | R8.2 SP1, R8.1 SP1,<br>R8.1, R8.0 SP1                           | of the versions of these products with the MiVoice 5000 versions.    |
| Mitel MiVoid                                  | e 5000 IPBX - Endpoint  | s and application                               | ns  |  |
| Р   | roduct reference        | Minimum product version certified by validation | Mivoice 5000<br>versions<br>tested with the<br>product versions | Restrictions/Comments  |
|   |                         | 10.0.1.16                                       | R8.2 SP3  |  |
|   | MiCollab                | 9.7.1.110                                       | R8.1 SP1  |  |
|   |                         | 9.6.0.105                                       | R8.1, R8.0 SP1  |  |
|   |                         | 12.2.0.72                                       | R8.2 SP3  |  |
| Mitel Unified<br>Communications<br>& mobility | MBG                     | 11.6.0.110                                      | R8.1 SP1  | Please refer to the manufacturer's website, MiAcces -> Compatibility |
|   |                         | 11.4.0.247                                      | R8.1, R8.0 SP1  | Matrix, to check the compatibility of the versions of these products |
|   | MiCollab Client IOS     | Apple store version                             | R8.2 SP3, R8.2 SP1,<br>R8.1 SP1, R8.1, R8.0<br>SP1              | with the MiVoice 5000 versions.                                      |
|   | MiCollab Client Android | Play store version                              | R8.2 SP3, R8.2 SP1,<br>R8.1 SP1, R8.1, R8.0<br>SP1              |  |



# 5 Parameters to configure to connect Mivoice 5000 solution to BTalk on BVPN

This section describes the minimum configuration to be applied to the MITEL MiVoice 5000 solution to ensure interoperability with the BTalk infrastructure.

#### 5.1 SIP trunk creation

| Equipment          | MiVoice 5000 IPBX   |                    |                                  |
|--------------------|---|--------------------|----------------------------------|
| Configuration path | Telephony service>Network and links>Network>Trunk group>Names (4.2.1.1) |                    |                                  |
|                    | Create un trunk group for the SIP trunk.                                |                    |                                  |
| Parameter          |   | Value              | Comments                         |
|                    | Trunk group N°x   | *Trunk group name* | Choose a trunk group numberand a |
|                    |   |                    | trunk group name (example: «SIP- |
|                    |   |                    | BTalk »).                        |

## 5.2 SIP trunk configuration

| Equipment          | MiVoice 5000 IPBX   |           |  |
|--------------------|---|-----------|--|
| Configuration path | Telephony service>Network and links>Network>Trunk group>Characteristics (4.2.1.2) |           |  |
|                    | Select the trunk group previously created.  |           |  |
| Parameter          |   | Value     | Comments                                     |
| Sign               | naling characteristics:   |           |  |
|                    | Physical type   |           |  |
|                    | Nature  | BOTHWAY   |  |
|                    | Signalling type   |           |  |
|                    | Subtype   | STANDARD  |  |
|                    | Characteristics:  |           | <b>2</b> edition modes exist:                |
|                    |   |           | - « basic » mode accessible via the          |
|                    |   |           | button: 🚢                                    |
|                    |   |           | - « advanced » mode accessible via the       |
|                    |   |           | button: 🕏                                    |
|                    |   |           | The parameters shown below in italics        |
|                    |   |           | and highlighted in grey are only visible via |
|                    |   |           | the "advanced" mode.                         |
|                    | Signalling type   |           |  |
|                    | Link state  | CONNECT.  |  |
|                    | Protocol  |           |  |
|                    |   | A-SBC IP@ | IP address of the nominal A-SBC              |
|                    | - port  |           |  |
|                    |   | A-SBC IP@ | IP address of the secondary A-SBC            |
|                    | - port  | 5060      |  |
|                    | Domaine / realm   |           | Not used                                     |
|                    | Local proxy   | NO        | Not used                                     |
|                    | Proxy checking  |           | Not used                                     |
|                    | Identifier  |           | Not used                                     |
|                    | Registering   |           | Not used. Not to check                       |
|                    | Authentification  |           | Not used. (Default value: SIP CLIENT)        |



| Client account :                      |                            |   |
|---------------------------------------|----------------------------|---|
| - login                               |                            | Not used  |
| - password                            |                            | Not used  |
| Public name of SIP access point       |                            | Not used  |
| Audit during speech                   | Checked                    |   |
| - speech audit management             | MSG UPDATE                 | Used to choose the type of SIP request sent during communication, depending on the next field (Audit frequency), to ensure the availability of the remote device. |
| - audit frequency (sec)               | 1200                       |   |
| Audit out of speech (OPTIONS)         | Checked                    | IPBX sends regularly an OPTIONS message to the Orange A-SBC.  |
| - audit frequency (sec)               | 300                        |   |
| - status                              | ACCEPTED                   | Status of audit out of speech   |
| - next audit at HH:mm:SS              |                            |   |
| Compelled release of trunks           | Unchecked                  |   |
| Redirected numbers emission           | DIVERSION                  |   |
| Identity sending management:          |                            |   |
| - call identifier (From)              | IID/AID                    |   |
| - number (From) in E.164 format       | Checked                    |   |
| - presentation/restriction            | P-Asserted-ID              |   |
| - call identifier (PAI)               | IID/AID                    |   |
| - number (PAI) in E.164 format        | Checked                    |   |
| - sending anonymous into From         | Checked                    |   |
| - update of name/number (UPDATE)      | Unchecked                  |   |
| - number (To) in E.164 format         | Checked or Unchecked       |   |
| Identity reception management:        |                            |   |
| - calling id. in                      | PAI or PPI or RPID         |   |
| Name management                       | Unchecked                  |   |
| Forwarding management:                |                            |   |
| - on busy / immediate forward         | Unchecked                  |   |
| - forward on no answer                | Unchecked                  |   |
| Call Sending type (internal/external) | Unchecked                  |   |
| Voice mail                            | Unchecked                  |   |
| Local generation of tones             | Checked                    | Announcements/tones are managed by MIVOICE 5000   |
| Support PRACK (100rel)                | Checked                    |   |
| Tones management before answer        | 180+SDP+P-Early-Media      |   |
| - support P-Early-Media               |                            |   |
| Re-invite without SDP allowed         | Checked                    |   |
| Reject T.38                           | 415 Unsupported Media Type |   |
| REFER sending                         |                            |   |
| Support of video                      |                            |   |
| Support of T.38                       | Unchecked                  |   |
| Support of other medias (IM, etc)     | Unchecked                  |   |
| Bearer type incoming                  |                            |   |
| Calls from                            | RESEAU                     |   |



| Priority calls if transit             | Unchecked |   |
|---------------------------------------|-----------|---|
| Search DID numbers                    |           |   |
| - incoming digit translator number    |           | Enter in this field the incoming digit          |
|                                       |           | translator number.                              |
|                                       |           | To be filled in only if configured and if it is |
|                                       |           | necessary to translate the number               |
|                                       |           | received from the network into an internal      |
|                                       |           | number.   |
| - reject of numbers not assigned      | Unchecked |   |
| Pre-answering message, caller charged |           |   |
| - if called party free or busy 1      | Unchecked |   |
| - if called party busy 2              | Unchecked |   |
| - if number not assigned              | Unchecked |   |
| Transf .acc. to called pty compt-dept | Unchecked |   |
| Transfer to                           | SV OP1    | Name of the operator service configured         |
|                                       |           | on the IPBX.                                    |
| Listening intervention allowed        | Unchecked |   |
| Trunk group id (tel. record)          | 0         |   |
| Trunk group monitoring                | Checked   |   |
| Max. nb of simultan. Calls allowed    |           | Not used  |
| CAC IP address                        | A-SBC IP@ | Field configured automatically filled           |
|                                       |           | according to the IP address of A-SBC.           |
| Centre – CAC class                    |           | Field configured automatically filled           |
|                                       |           | according to the CAC configuration.             |
| G711 forced in mode FAX/Modem         | Unchecked |   |

## 5.3 Additional configuration: DCF parameters

| Equipment          | MiVoice 5000 IPBX    |  |   |  |
|--------------------|----------------------|--|---|--|
| Configuration path | Telephony service>   | Telephony service>System>Expert>DCF settings (2.7.3) |   |  |
|                    | Enter a DCF numb     | er to configure « Number (in decimal)                | ) of the DCF » then click on the button |  |
|                    | « Select the item ». |  |   |  |
| Parameter          |                      | Value  | Comments                                |  |
| Number (in         | decimal) of the DCF  | 282  |   |  |
|                    | Value in decimal     | 2  |   |  |
| \                  | /alue in hexadecimal | 0002   |   |  |
| Number (in         | decimal) of the DCF  | 460  |   |  |
|                    | Value in decimal     | 1  |   |  |
| \                  | alue in hexadecimal  | 0001   |   |  |

## 5.4 Coding laws configuration: network calls

| Equipment                   | MiVoice 5000 IPBX   |                               |                                      |
|-----------------------------|---|-------------------------------|--------------------------------------|
| Configuration path          | Telephony service>Network and links>Quality of service>Voice over IP coding law (4.4.2) |                               |                                      |
|                             | Select the « Call type » then the « Set type » and click on « Select the item ».        |                               |                                      |
| Parameter                   | Value Comments  |                               |                                      |
| Priority 1, law: G711 Codin |   | Coding law set in priority 1. |                                      |
| at type 1:                  |   | A LAW (or MU LAW)             | G711Ulaw can be supported in option. |
| dura                        | tion of packets (ms):   | 20                            |                                      |
|                             | Priority 2, law:  | G729                          | Coding law set in priority 2.        |



| at type 1:                | G729A |  |
|---------------------------|-------|--|
| at type 2:                | G729  |  |
| duration of packets (ms): | 20    |  |

This configuration has to be applied to the whole call types below:

Call type: NETWORK

Direction: ....... (not mandatory)

Call type: TONES

Messages type: NETWORK

#### 5.5 Coding laws configuration: If G729 codec only used for network calls

| Equipment          | MiVoice 5000 IPBX  |  |                               |
|--------------------|--|--|-------------------------------|
| Configuration path | Telephony service>Network and links>Quality of service> Voice over IP coding law (4.4.2) |  |                               |
|                    | Select the « Call typ  | e » then the « Set type » and click on $\cdot$ | « Select the item ».          |
| Parameter          |  | Value  | Comments                      |
|                    | Priority 1, law:   | G729   | Coding law set in priority 1. |
| at type 1:         |  | G729A  |                               |
|                    | at type 2:   | G729   |                               |
| dura               | tion of packets (ms):  | 20   |                               |
|                    | Priorité 2, loi:   |  |                               |
|                    | Priorité 3, loi:   |  |                               |

This configuration apply to the whole call types below:

Call type: NETWORK

Direction: ....... (not mandatory)

Call type: TONES

Messages type: NETWORK

Call type: VOICE MAIL



# 6 Parameters to configure to connect Mivoice 5000 solution to BTalk over Internet

This section describes the minimum configuration to be applied to the MITEL MiVoice 5000 solution to ensure interoperability with the BTalk over Internet infrastructure.

## 6.1 Public DNS relay configuration

| Equipment          | MiVoice 5000 IPBX  |            |  |
|--------------------|--|------------|--|
| Configuration path | Telephony service>System>Configuration>Cards>IP board settings (2.3.4.3) |            |  |
|                    | Apply the configurat   | ion below. |  |
| Parameter          |  | Value      | Comments   |
|                    | DNS 1 address  | DNS 1 IP@  | Configure a 1st public DNS relay or a 1st private DNS server that will relay DNS requests to the Internet. |
|                    | DNS 2 address  | DNS 2 IP@  | Configure a 2nd public DNS relay or a 2nd private DNS server that will relay DNS requests to the Internet. |

## 6.2 NTP configuration

| Equipment          | MiVoice 5000 IPBX                                   |                                 |  |
|--------------------|---|---------------------------------|--|
| Configuration path | Telephony service>System>Info>Date and time (2.1.1) |                                 |  |
|                    | Apply the configurat                                | ion below.                      |  |
| Parameter          |   | Value                           | Comments                                   |
| Netv               | vork synchronisation                                | Checked                         | If this box is checked, the system         |
|                    |   |                                 | updates its DATE and TIME settings at      |
|                    |   |                                 | regular intervals according to the values  |
|                    |   |                                 | retrieved from the NTP server(s) defined   |
|                    |   |                                 | in the next field.                         |
|                    | - time server 1                                     | IP address of the time server 1 | DNS name or IP address of the              |
|                    |   |                                 | considered NTP server.                     |
|                    | - time server 2                                     | IP address of the time server 2 | DNS name or IP address of the              |
|                    |   |                                 | considered NTP server.                     |
|                    | Time zone :   |                                 | The time zone is set by selecting a region |
|                    | - region  | Ex : EUROPA                     | and then a city within that region.        |
|                    | - town  | Ex : Berlin                     |  |



## 6.3 Certificates process

After the certification authority has approved the Mitel SBC identity certificate, it must be loaded onto the integrated SBC (MiVoice 5000).

| Please note that this certificate must in PKCS 12 format (include the certificate, private key and certificatio chain).  Shared secret  XXXX  This Shared secret field appears to all you to enter the passphrase (see phrase) used when generating pkcs12. This field is required complete the import of the pkcs12. The passphrase is a string alphanumeric characters indicating password to decrypt the certificate. The number of characters entered me be between 4 and 20. The character are displayed in clear text during in and then replaced by ******** when field is validated. List of character allowed to be entered for this field: of 9 o A to Z o a to z o "#"() - @ + = "> < , , ; / :  Name  XXXX  Enter the name for this certificate. The does not yet exist among the alreadoes of the certificate to help operator to identify the certificate to help operator to identify the certificate to help operator to identify the certificate in contents.   | Equipment             | MiVoice 5000 IPBX IPBX |                                  |  |
|--|-----------------------|------------------------|----------------------------------|--|
| Apply the configuration below.  Parameter  * Certificates* tab  Action Add CERTIFICAT  Select the file and click on Download Please note that this certificate must in PKCS 12 format (include the certificate, private key and certification chain).  Shared secret XXXX  This Shared secret field appears to all you to enter the passphrase (see phrase) used when generating pkcs12. This field is required complete the import of the pkcs12. The passphrase is a string alphanumeric characters indicating password to decrypt the certificate. The number of characters entered me be between 4 and 20. The character are displayed in clear text during in and then replaced by ****** when field is validated. List of character allowed to be entered for this field: of 9 o A to Z o a to z o * # '() * _ @ + = * > < , ; / :  Name XXXX  Enter the name for this certificate. The individual properties of imported pkcs12 file (only if this file nations and one attached to the certificate to help operator to identify the certificate to help operator to identify the certificate to help operator to identify the certificate in certificate in certificate.   | Configuration path    | Telephony service>     | System>Security>Settings (2.4.2) |  |
| Action  Add CERTIFICAT  Select the file and click on Download Please note that this certificate must in PKCS 12 format (include the certificate, private key and certificatio chain).  Shared secret  XXXX  This Shared secret field appears to all you to enter the passphrase (see phrase) used when generating pkcs12. This field is required complete the import of the pkcs12. The passphrase is a string alphanumeric characters indicating password to decrypt the certificate. The number of characters entered method be entered by ******** when field is validated. List of character allowed to be entered for this field: of 9 o A to Z o a to z o ** # '() * _ @ + * > < , . ; / :  Name  XXXX  Enter the name for this certificate. The field is pre-filled with the name of imported pkcs12 file (only if this file nat does not yet exist among the alreades on the certificates).  Comment  XXXX  This Comment field is optional and be attached to the certificate to help operator to identify the certificate in comments.  |                       |                        |                                  |  |
| Action  Add CERTIFICAT  Select the file and click on Download Please note that this certificate must in PKCS 12 format (include the certificate, private key and certificatio chain).  Shared secret  Shared secret  Shared secret  This Shared secret field appears to all you to enter the passphrase (see phrase) used when generating pkcs12. This field is required complete the import of the pkcs12. The passphrase is a string alphanumeric characters indicating password to decrypt the certificate. The number of characters entered in the between 4 and 20. The character are displayed in clear text during in and then replaced by ****** when field is validated. List of character allowed to be entered for this field: or 9 o A to Z o a to z o " # '() - @ + * * > < ; / :  Name  Name  Name  Name  Name  Name  This Comment field is optional and be attached to the certificate to help operator to identify the certificate to help operator to identify the certificate in contents.   | Parameter             |                        | Value                            | Comments   |
| Please note that this certificate must in PKCS 12 format (include the certificate, private key and certificatio chain).  Shared secret  XXXX  This Shared secret field appears to all you to enter the passphrase (see phrase) used when generating pkcs12. This field is required complete the import of the pkcs12. The passphrase is a string alphanumeric characters indicating password to decrypt the certificate. The number of characters entered me be between 4 and 20. The character are displayed in clear text during in and then replaced by ******* when field is validated. List of character allowed to be entered for this field: of 9 o A to Z o a to z o "#"() - @ + = *> < , , ; /:  Name  XXXX  Enter the name for this certificate. The installed certificate and be attached to the certificate to help operator to identify the certificate to help operator to identify the certificate to help operator to identify the certificate in contents.  | « Certific            | ates» tab              |                                  |  |
| you to enter the passphrase (see phrase) used when generating pkcs12. This field is required complete the import of the pkcs12. The passphrase is a string alphanumeric characters indicating password to decrypt the certificate. The number of characters entered me be between 4 and 20. The characters entered me be between 4 and 20. The characters entered me field is validated. List of characters entered is allowed to be entered for this field: of 9 o A to Z o a to z o " # ' () @ + = * > < , . ; /:  Name      |                       | Action                 | Add CERTIFICAT                   | certificate, private key and certification   |
| Name XXXX  Enter the name for this certificate. The field is pre-filled with the name of imported pkcs12 file (only if this file national does not yet exist among the alrest installed certificates).  Comment XXXX  This Comment field is optional and be attached to the certificate to help operator to identify the certificate in comment field.   |                       | Shared secret          |                                  | alphanumeric characters indicating the password to decrypt the certificate file. The number of characters entered must be between 4 and 20. The characters are displayed in clear text during input and then replaced by ******* when the field is validated. List of characters allowed to be entered for this field: 0 0 to 9 0 A to Z o a to z o " # ' () @ + = % |
| be attached to the certificate to help operator to identify the certificate in control of the ce |                       | Name                   |                                  | Enter the name for this certificate. This field is pre-filled with the name of the imported pkcs12 file (only if this file name does not yet exist among the already   |
| of multi-import followed by assignments.   |                       | Comment                | ****                             | This Comment field is optional and will be attached to the certificate to help the operator to identify the certificate in case of multi-import followed by late assignments.  |
| « Servers certificates assignment » tab  | « Servers certificate | es assignment » tab    | <u>-</u> _                       |  |
| Available certificates XXXX Select the name of the import certificate.   |                       | Available certificates | ****                             | · ·  |
| Inter-site link Unchecked  |                       | Inter-site link        | Unchecked                        |  |
| WebAdmin Unchecked   |                       | WebAdmin               | Unchecked                        |  |
| User Portal Unchecked  |                       | User Portal            | Unchecked                        |  |
| Internet Gateway Checked   |                       | Internet Gateway       | Checked                          |  |
| LDAP server Unchecked  |                       | LDAP server            | Unchecked                        |  |



## 6.4 Integrated SBC configuration

| Equipment MiVoice 5000                |                                       |   |
|---------------------------------------|---------------------------------------|---|
| Configuration path Telephony service> | Network and links>Internet gateway (4 | 1.6)  |
| Parameter                             | Value                                 | Comments                                      |
| Service INTERNET GATEWAY              | START                                 |   |
| Secured interface                     | Checked                               |   |
| Both way (MTLS)                       |                                       |   |
| Working mode                          | SBC TRUNK                             |   |
| Public protocols                      |                                       |   |
| NAT on public interface               |                                       |   |
| - public interface                    | Public IP@ of the integrated SBC      | IP1 address in the figure of the section 2.4. |
| - port (UDP)                          | 5062                                  | 2.7.  |
| - secured port (TLS)                  | 5061                                  |   |
| Private protocols                     | TLS                                   |   |
| Private interface                     | Private IP@ of the integrated SBC     | IP2 address in the figure of the section 2.4. |
| - port (UDP)                          | 5064                                  |   |
| - secured port (TLS)                  | 5064                                  |   |
| NAT on private interface              | Unchecked                             |   |
| - iPBX address                        | IP@ of the IPBX                       | IP3 address in the figure of the section 2.4. |
| - port (UDP)                          | 5060                                  |   |
| - secured port (TLS)                  | 5061                                  |   |
| SBC port range:                       |                                       |   |
| - minimum RTP port                    | 6000                                  |   |
| - maximum RTP port                    | 38000                                 |   |
| Modification of RTP port on           | Unchecked                             |   |
| renegotiation                         |                                       |   |
| Support of symetric RTP               |                                       |   |
| Apply the network topology hiding     | Checked                               |   |

| Equipment                | MiVoice 5000  |       |          |
|--------------------------|---|-------|----------|
| Configuration path       | Telephony service>System>Configuration>Services (2.3.1) |       |          |
| Parameter                |   | Value | Comments |
| Service INTERNET GATEWAY |   | START |          |

## 6.5 SRTP support

| Equipment                      | MiVoice 5000 IPBX   |         |          |
|--------------------------------|---|---------|----------|
| Configuration path             | Telephony service>Network and links>Quality of service>Ciphering and IP settings (4.4.5) Select « Ciphering » tab |         |          |
| Parameter                      |   | Value   | Comments |
| Signalling and voice ciphering |   |         |          |
| Voice ciphering                |   | Checked |          |



#### 6.6 SIP trunk creation

| Equipment          | MiVoice 5000 IPBX  |  |   |
|--------------------|--|--|---|
| Configuration path | Telephony service>Network and links>Network>Trunk group >Names (4.2.1.1) |  |   |
|                    | Create un trunk grou   | Create un trunk group for the SIP trunk. |   |
| Parameter          |  | Value                                    | Comments  |
|                    | Trunk group N°x  | *Trunk group name*                       | Choose a trunk group number and a trunk group name (example: « SIP-BTol »). |

## 6.7 SIP trunk configuration

| Equipment          | MiVoice 5000 IPBX      |                                 |  |
|--------------------|------------------------|---------------------------------|--|
| Configuration path | Telephony service>l    | Network and links>Network>Trunk | group>Characteristics (4.2.1.2)  |
|                    | Select the trunk grou  | up previously created.          |  |
| Parameter          |                        | Value                           | Comments   |
| Signa              | lling characteristics: |                                 |  |
|                    | Physical type          | VOICE IP                        |  |
|                    | Nature                 | BOTHWAY                         |  |
|                    | Signalling type        | SIP                             |  |
|                    | Subtype                | STANDARD                        |  |
|                    | Characteristics:       |                                 | 2 edition modes exist: - « basic » mode accessible via the button:   |
|                    |                        |                                 | - « advanced » mode accessible via the button : 🗫  |
|                    |                        |                                 | The parameters shown below in <i>italics</i> and highlighted in grey are only visible via the "advanced" mode. |
|                    | Signalling type        |                                 |  |
|                    |                        | CONNECT.                        |  |
|                    | Protocol               | TLS                             |  |
|                    | - with TLS profile     |                                 | Not used.  |
|                    | - SIPS support         | Unchecked                       |  |
|                    | Proxy N°1              | FQDN of the nominal A-SBC       | FQDN of the nominal A-SBC.   |
|                    | - port                 |                                 |  |
|                    | Proxy N°2              | FQDN of the backup A-SBC        | FQDN of the backup A-SBC.  |
|                    | - port                 | 5061                            |  |
|                    | Domaine / realm        |                                 | Not used.  |
|                    | Local proxy            | PROXY NAT SBC                   |  |
|                    |                        | IP@ of the IPBX                 | IP3 address in the figure of the section 2.4.  |
|                    |                        | 5064                            |  |
|                    | Proxy checking         | IP ADDRESS                      |  |
|                    | identifier             |                                 | Not used.  |
|                    | Registering            |                                 | Not used.  |
|                    | Authentification       |                                 | Not used. (Default value: SIP CLIENT).   |
|                    | Client account:        |                                 |  |
|                    | - login                |                                 | Not used.  |



| nacoword                                    |                            | Not used.   |
|---|----------------------------|---|
| - password  Public name of SIP access point |                            | Not used.   |
| , '   | Checked                    | Not useu.   |
| Audit during speech                         |                            |   |
| - speech audit management                   |                            |   |
| - audit frequency (sec)                     |                            |   |
| Audit out of speech (OPTIONS)               | Checked                    |   |
| - audit frequency (sec)                     | 300                        | A 19  |
|   | ACCEPTED                   | Audit satus out of conversation.  |
| - next audit at HH:mm:SS                    |                            |   |
| Compelled release of trunks                 |                            |   |
| Redirected numbers emission                 |                            |   |
| Identity sending management:                |                            |   |
| - call identifier (From)                    |                            |   |
| - number (From) in E.164 format             |                            |   |
| - presentation/restriction                  |                            |   |
| - call identifier (PAI)                     |                            |   |
| - number (PAI) in E.164 format              |                            |   |
| - sending anonymous into From               |                            |   |
| - update of name/number (UPDATE)            |                            |   |
| - number (To) in E.164 format               | Checked or Unchecked       |   |
| Identity reception management:              |                            |   |
| - calling id. in                            | PAI or PPI or RPID         |   |
| N° without external prefix                  | Unchecked                  |   |
| Name management                             | Unchecked                  |   |
| Forwarding management:                      |                            |   |
| - on busy / immediate forward               | Unchecked                  |   |
| - forward on no answer                      | Unchecked                  |   |
| Call Sending type (internal/external)       | Unchecked                  |   |
| Voice mail                                  | Unchecked                  |   |
| Local generation of tones                   | Checked                    |   |
| Support PRACK (100rel)                      | Checked                    |   |
| Tones management before answer              | 180+SDP+P-Early-Media      |   |
| - support P-Early-Media                     | Checked                    |   |
| Re-invite without SDP allowed               | Checked                    |   |
| Reject T.38                                 | 415 Unsupported Media Type |   |
| REFER sending                               | Unchecked                  |   |
| Support of video                            | Unchecked                  |   |
| Support of T.38                             | Unchecked                  |   |
| Support of other medias (IM, etc)           | Unchecked                  |   |
| SRTP support                                | SRTP preferred             |   |
| Bearer type incoming                        | CCBT+CCBNT                 |   |
| Calls from                                  | RESEAU                     |   |
| Priority calls if transit                   | Unchecked                  |   |
| Search DID numbers                          |                            |   |
| - incoming digit translator number          |                            | Enter in this field the incoming digit translator number.                         |
|   |                            | To be filled in only if configured and if it is necessary to translate the number |



|                                       |                                  | received from the network into an internal number.                          |
|---------------------------------------|----------------------------------|---|
| - reject of numbers not assigned      | Unchecked                        |   |
| Pre-answering message, caller charged |                                  |   |
| - if called party free or busy 1      | Unchecked                        |   |
| - if called party busy 2              | Unchecked                        |   |
| - if number not assigned              | Unchecked                        |   |
| Transf .acc. to called pty compt-dept | Unchecked                        |   |
| Transfer to                           | OP GP1                           | Name of the operator service configured on the IPBX.                        |
| Trunk group id (tel. record)          | 0                                |   |
| Trunk group monitoring                | Checked                          |   |
| Max. nb of simultan. Calls allowed    |                                  | Not used.   |
| CAC IP address                        | Public IP@ of the integrated SBC | Field configured automatically filled according to the IP address of A-SBC. |
| Centre – CAC class                    |                                  | Field configured automatically filled according to the CAC configuration.   |
| G711 forced in mode FAX/Modem         | Unchecked                        |   |

## 6.8 Additional configuration: DCF parameters

| Equipment                      | MiVoice 5000 IPBX                                    |                                      |   |
|--------------------------------|--|--------------------------------------|---|
| Configuration path             | Telephony service>System>Expert>DCF settings (2.7.3) |                                      |   |
|                                | Enter a DCF numb                                     | er to configure « Number (in decimal | ) of the DCF » then click on the button |
|                                | « Select the item ».                                 |                                      |   |
| Parameter                      |  | Value                                | Comments                                |
| Number (in decimal) of the DCF |  | 282                                  |   |
| Value in decimal               |  | 2                                    |   |
| Value in hexadecimal           |  | 0002                                 |   |
| Number (in decimal) of the DCF |  | 460                                  |   |
| Value in decimal               |  |                                      |   |
| \                              | /alue in hexadecimal                                 | FFFF                                 |   |

## 6.9 Coding laws configuration: network calls

| Equipment                 | MiVoice 5000 IPBX   |       |                               |
|---------------------------|---|-------|-------------------------------|
| Configuration path        | Telephony service>Network and links>Quality of service>Voice over IP coding law (4.4.2) |       |                               |
|                           | Select the « Call type » then the « Set type » and click on « Select the item ».        |       |                               |
| Parameter                 |   | Value | Comments                      |
| Priority 1, law:          |   | G711  | Coding law set in priority 1. |
| at type 1:                |   | A LAW |                               |
| duration of packets (ms): |   | 20    |                               |

This configuration has to be applied to the whole call types below:

Call type: NETWORK

Direction: ...... (not mandatory)

Call type: TONES

Messages type: NETWORK



## 7 Parameters to be configured common to sections 5 and 6

## 7.1 Routes configuration

| Equipment          | MiVoice 5000 IPBX   |                      |   |
|--------------------|---|----------------------|---|
| Configuration path | Telephony service>network and links> Network > Routes (4.2.2)           |                      |   |
|                    | Then click on « Advanced characteristics » and keep the default values. |                      |   |
| Parameter          |   | Value                | Comments  |
|                    | For routing code  | Ex: CODEO_HQ         | Select the route code configured on the         |
|                    |   |                      | site (depends directly on the client IPBX       |
|                    |   |                      | configuration).                                 |
|                    | To direction  |                      | Select the appropriate direction.               |
|                    | Via route type  | DIRECTE 0            | Select the appropriate route (route =           |
|                    |   |                      | routing priority)                               |
|                    | On trunk group  | « trunk group name » | Select the SIP trunk group created              |
|                    |   |                      | previously. Example: « SIP-BT».                 |
|                    |   |                      |   |
|                    | Tone type   | DTMF                 | Default value.                                  |
|                    | Transmit type   | MF DTMF              | Default value.                                  |
|                    | Dial tone   | NO                   | Default value.                                  |
| 1st se             | rie of digits to insert   |                      | Default value.                                  |
|                    | Second tone   | NO                   | Default value.                                  |
| 2nd se             | rie of digits to insert   |                      | Default value.                                  |
|                    | Third tone  | NO                   | Default value.                                  |
| Outgoing dig       | it translator number  |                      | Enter in this field the outgoing digit          |
|                    |   |                      | translator number.                              |
|                    |   |                      | To be filled in only if configured and if it is |
|                    |   |                      | necessary to translate the number to            |
|                    |   |                      | send to the network into another                |
|                    |   |                      | number.   |
|                    | Charge indication   | NO                   | Default value.                                  |
| Limiter nb. (      | Of C code rerouting   | NO                   | Default value.                                  |
|                    | OFF NET carrier   |                      | Default value.                                  |

<u>NOTE</u>: The configuration of the routes may be specific to the customer's IPBX configuration, and has no direct link to the BT or BTalk over Internet SIP trunk configuration. This part is therefore mentioned only as a reminder: a route must be created in order to use the SIP trunk created for BT or BTalk over Internet.

#### 7.2 Outgoing calls handling: IID configuration

| Equipment             | MiVoice 5000 IPBX  |        |                               |
|-----------------------|--|--------|-------------------------------|
| Configuration path    | Telephony service>Network and links>Network>AID handling>IID (4.2.6.5) |        |                               |
|                       | Configure a IID number.  |        |                               |
| Parameter             |  | Value  | Comments                      |
| IID 0 : internal plan |  | PLAN 1 | Select the plan.              |
| or direction          |  |        | Or select a direction.        |
| number                |  |        | Enter the required IID number |
| re                    | stricted presentation  | NO     |                               |

<u>NOTE</u>: The IID/AID configuration is specific to the customer's IPBX configuration and has no direct link to the BTalk SIP trunk configuration.



## 7.3 Outgoing calls handling: Outgoing handling configuration

| Equipment                 | MiVoice 5000 IPBX  |                          |  |
|---------------------------|--|--------------------------|--|
| Configuration path        | Telephony Service> Network and links> Network>AID handling>Outgoing handling (4.2.6.7) |                          |  |
| Parameter                 |  | Value                    | Comments   |
|                           | By plan  |                          | Do not select a plan   |
|                           | And by direction   | LOCAL                    | Select LOCAL direction   |
|                           |  |                          |  |
| And                       | d the requested plan   | PLAN 1                   |  |
|                           | On trunk group   | « SIP trunk group name » | Select the trunk group.  |
|                           | Fallback present   | YES                      |  |
| - inhibit se              | ending of IID and AID  | NO                       |  |
|                           | - send IID   | NON DID EXT              |  |
| - AI[                     | O completed with IID   | YES                      |  |
| - AID se                  | et using DID number  | YES                      |  |
| - digit translator number |  |                          | Enter in this field the outgoing digit translator number for calling party number.                                   |
|                           |  |                          | To be filled in only if configured and if it is necessary to translate the calling party number send to the network. |
|                           | - IID number   |                          | Enter the IID number created previously.   |
| - inter-plan forwarding   |  | NO                       |  |

**NOTE**: The configuration of outbound handling is specific to the customer's IPBX configuration and has no direct link to the BTalk or BTalk over Internet SIP trunk configuration.

## 7.4 General settings configuration

| Equipment               | MiVoice 5000 IPBX  |                |          |
|-------------------------|--|----------------|----------|
| Configuration path      | Telphony service>Subscribers>Rights>General settings (1.4.1) |                |          |
| Parameter               |  | Value          | Comments |
|                         | « Subscriber » tab   |                |          |
| Functions av            | ailable to extensions  |                |          |
| - e>                    | kternal name display   | Checked        |          |
|                         | « System » tab   |                |          |
| Subscriber f            | orwarded to exterior   |                |          |
|                         | - Charging   | CALLING        |          |
|                         | - send ident.  | CALLING NUMBER |          |
|                         | « Rights » tab   |                |          |
| Tr                      | ansfert authorization  |                |          |
|                         | - TK TK  | Checked        |          |
|                         | - TK TL  | Checked        |          |
|                         | « Network » tab  |                |          |
| IP settings:            |  |                |          |
| - Handling of FAX T.38  |  | Unchecked      |          |
| communications          |  |                |          |
| - DTMF handled into:    |  | RTP PACKET     |          |
| header value (RFC 2833) |  | 101            |          |



#### 7.5 Subscribers characteristics configuration

| Equipment                        | MiVoice 5000 IPBX  |         |   |
|----------------------------------|--|---------|---|
| Configuration path               | Telephony service>Subscribers>Rights>Feature class (1.4.3) |         |   |
|                                  | Select the feature class to configure by its name.         |         |   |
| Parameter                        |  | Value   | Comments  |
| External forwarding allowed      |  | Checked |   |
| Network rerouting allowed        |  | Checked |   |
| ld sent to public network A.     |  | A.I.D   | The value « » is used to activate the identity restriction. |
| Id sent to private network A.I.D |  | A.I.D   | The value « » is used to activate the identity restriction. |

#### 7.6 Coding laws configuration: local calls

The coding laws/codecs configuration for local calls may differ depending on the client IPBX configuration. It does not concern network calls using SIP trunk.

| Equipment                 | MiVoice 5000 IPBX  |       |                              |
|---------------------------|--|-------|------------------------------|
| Configuration path        | Telephony service>Network and links>Quality of service>Voice over IP coding law (4.4.2) Select the « Call type » then the « Set type » and click on « Select the item ». |       |                              |
| Paramètre                 |  | Value | Comments                     |
|                           | Priority 1, law:   | G722  | Coding law set in prority 1. |
| Duration of packets (ms): |  | 20    |                              |
| Priority 2, law:          |  | G711  | Coding law set in prority 2. |
| at type 1:                |  | A LAW |                              |
| at type 2:                |  |       |                              |
| Duration of packets (ms): |  | 20    |                              |
| Priority 3, law:          |  | G729  | Coding law set in prority 3. |
| at type 1:                |  | G729A |                              |
|                           | at type 2:   | G729  |                              |
| Duration of packets (ms): |  | 20    |                              |

This configuration has to be applied to the whole call types below:

Call type: INTERNAL

Set type: IP PROPRIETARY, SIP-DECT IP

Call type: TONES

Messages type: EXTENSION

Call type: CONFERENCE CIRCUITS, VOICE MAIL

## 7.7 Configuration marquage DSCP

| Equipment                           | MiVoice 5000 IPBX   |       |          |
|-------------------------------------|---|-------|----------|
| Configuration path                  | Telephony service>Network and links>Quality of service>Ciphering and IP settings (4.4.5) Select « QoS » |       |          |
| Parameter                           |   | Value | Comments |
| DSCP telephony signalling (decimal) |   | 40    |          |
| DSCP voice (décimal)                |   | 46    |          |



<u>NOTE</u>: MiVoice 5300 IP Phones, Mitel 6800 SIP Phones, Mitel 6900 SIP Phones mark all voice frames at level 3. The DSCP marking setting is broadcast by the MiVoice 5000 Call Server or Mitel 5000 Gateways IPBXs when the terminal is connected.

## 7.8 CAC configuration

| Equipment                      | MiVoice 5000 IPBX   |           |  |
|--------------------------------|---|-----------|--|
| Configuration path             | Telephony service>Network and links>Quality of service>CAC and localisation>CAC server settings |           |  |
|                                | (4.4.4.1)   |           |  |
| Parameter                      |   | Value     | Comments                               |
| Server configuration           |   | MAIN      |  |
| Available services             |   |           |  |
| - geographic location          |   | Checked   |  |
| - calls controls               |   | Checked   |  |
| Control based on class         |   | Checked   |  |
| Audio√ideo separation          |   | Unchecked |  |
| Saturation before alarm (en %) |   | 80        | Configure the required value between 0 |
|                                |   |           | and 100.                               |

<u>NOTE</u>: The configuration of the CAC (Call Admission Control) is specific to the customer site configuration. It is not directly related to the BTalk or BTalk over Internet SIP trunk configuration and must be customised for each customer IPBX.