



**Business
Services**

Guide for BTIP and Business Talk SIP services Microsoft

Lync 2013

Skype for Business 2015

Skype Online - Cloud
Connector Edition

10 october 2019

Lync 2013/AudioCodes/Ribbon Checklist 1.6

Skype for Business 2015/AudioCodes/Ribbon Checklist 1.13

AudioCodes FAX checklist 1.0

Cloud Connector Edition AudioCodes Checklist 2.0

Contents


1	Main certified architectures	4
1.1	Lync 2013 & Skype for Business 2015 on premises.....	4
1.1.1	Centralized architecture	4
1.1.2	Remote site "SBA"	5
1.1.3	"Cascaded" remote site	6
1.1.4	Remote site "GW"	6
1.1.5	Centralized architecture with central SBC.....	7
1.1.6	Remote site "SBA" and central site with central SBC.....	7
1.1.7	Remote site "GW" and central site with central SBC.....	8
1.1.8	2-pool centralized architecture	8
1.1.9	2-pool architecture with central SBC (Customer specific)	9
1.1.10	FAX	9
1.2	Skype for Business Online	11
1.2.1	Standalone mode	11
1.2.2	Redundant architectures	12
2	Parameters for connection to BTIP.....	14
2.1	On-premise architectures.....	14
2.2	Cloud Connector Edition architectures	15
3	BTIP/BTalk certified versions.....	16
3.1	Lync 2013	16
3.2	Skype for Business 2015	16
3.3	Cloud Connector Edition.....	17
4	Lync 2013 Configuration Checklist	18
5	Skype for Business 2015 with or without Ribbon/AudioCodes Configuration Checklist	34
5.1	Common core configuration checklist	34
5.2	Configuration checklist in case of Ribbon SBC 1000/2000 Gateway:	35
5.3	Configuration checklist in case of AudioCodes Mediant 800/1000 E-SBC:	45
6	AudioCodes FAX configuration checklist	61
6.1	FXS fax on Mediant configuration.....	61
6.1.1	Telephony profile.....	61
6.1.2	FXS port configuration update.....	61
6.1.3	Update IP Profile	61
6.1.4	General fax parameters.....	61
6.1.5	Routing.....	62
6.1.6	V34-fax-transport-type.....	62
6.1.7	Analog device on Skype.....	63
6.2	FXS fax on MediaPack cascaded behind Mediant	63
6.2.1	MediaPack configuration.....	63
6.2.2	Mediant configuration	63
7	Skype for Business Online – AudioCodes Cloud Connector Edition configuration checklist.....	65
7.1	Generic configuration.....	65
7.2	Standalone specific configuration.....	66
7.3	High availability specific configuration.....	68
7.4	Nominal/backup mode specific configuration	71

7.5	Round-Robin mode specific configuration.....	74
-----	--	----

1 Main certified architectures


1.1 Lync 2013 & Skype for Business 2015 on premises

1.1.1 Centralized architecture

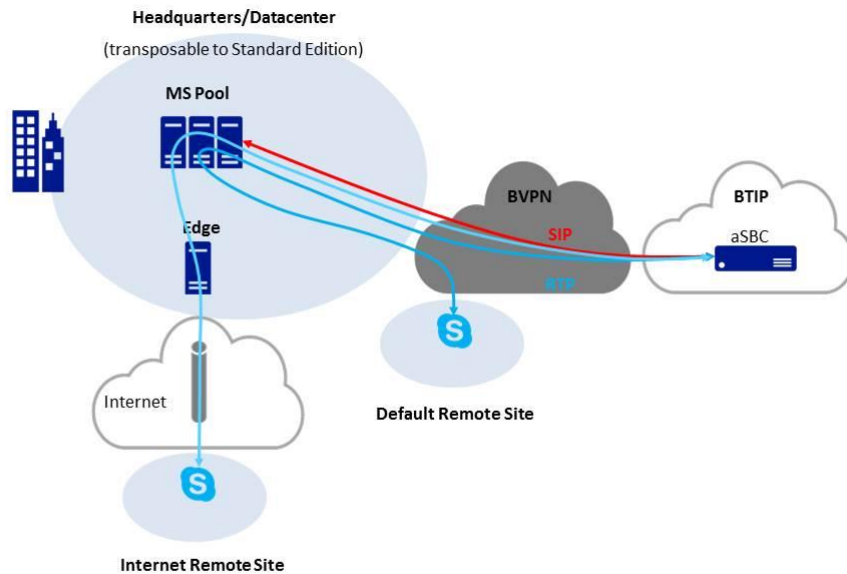


1.1.2 Remote site “SBA”


Example 1

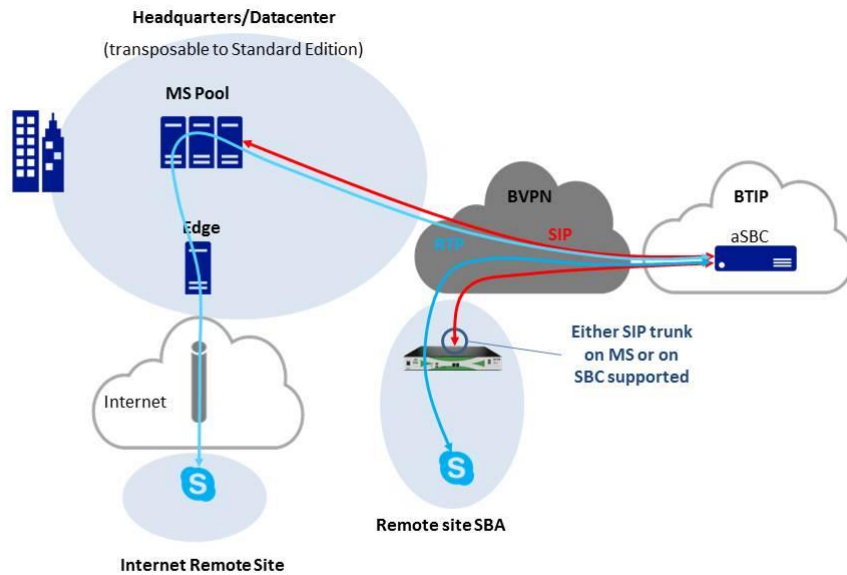


Example 2

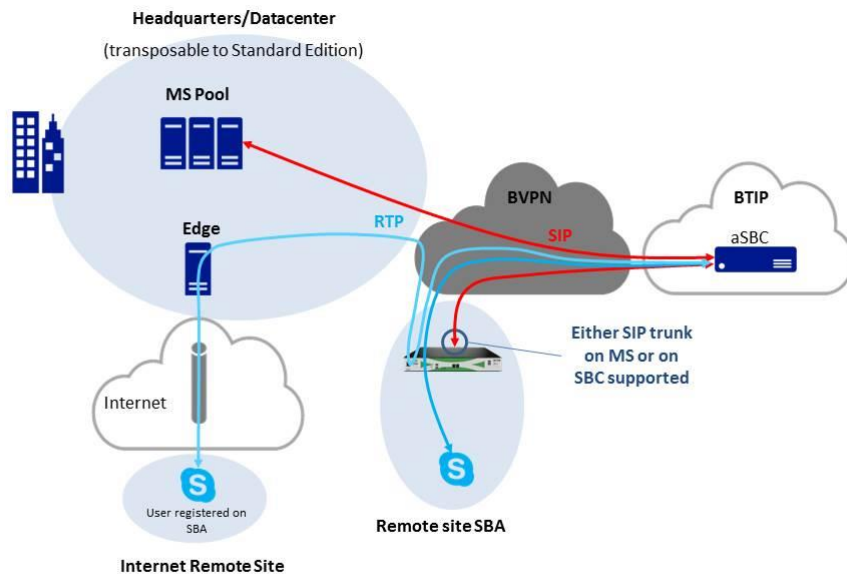


1.1.3 “Cascaded” remote site

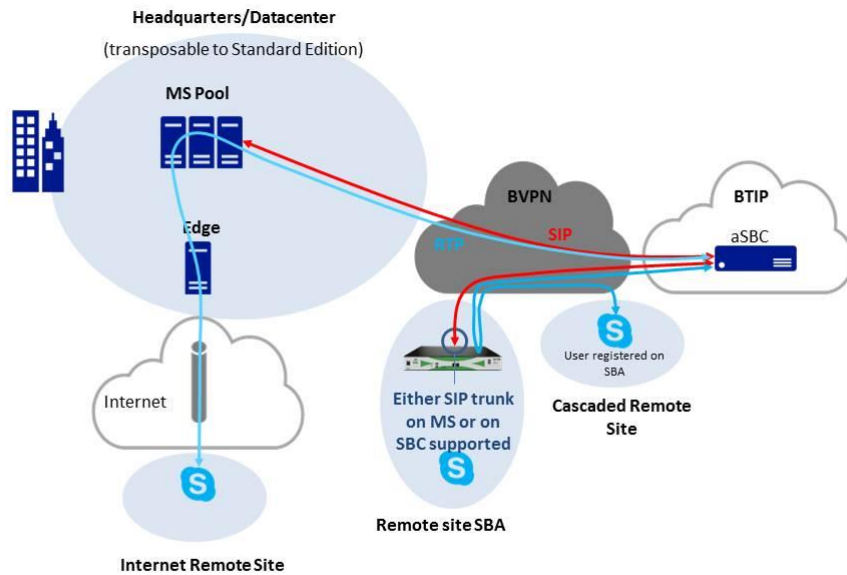


1.1.4 Remote site “GW”

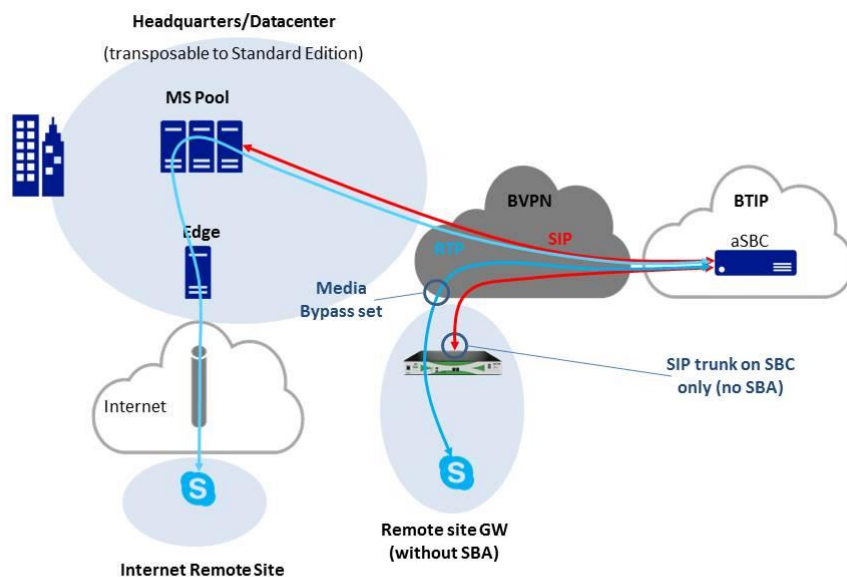


1.1.5 Centralized architecture with central SBC

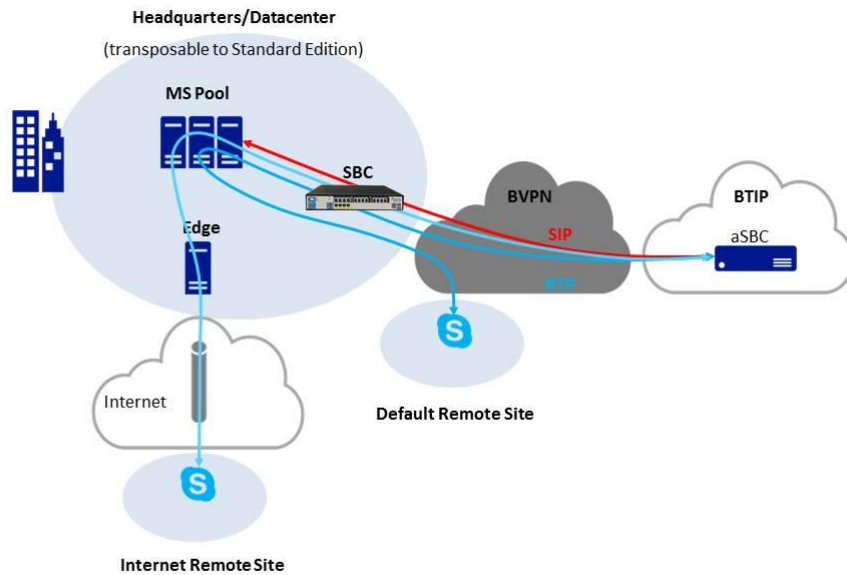


1.1.6 Remote site “SBA” and central site with central SBC

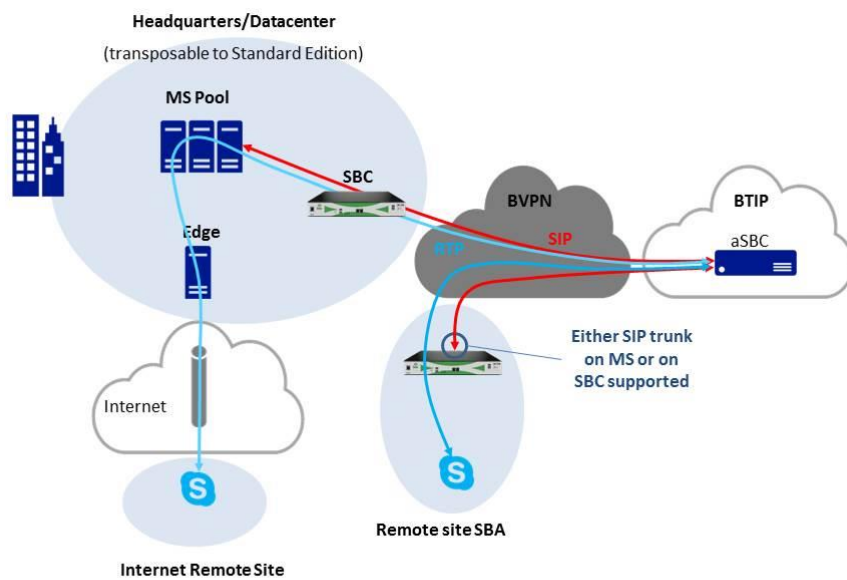


1.1.7 Remote site “GW” and central site with central SBC

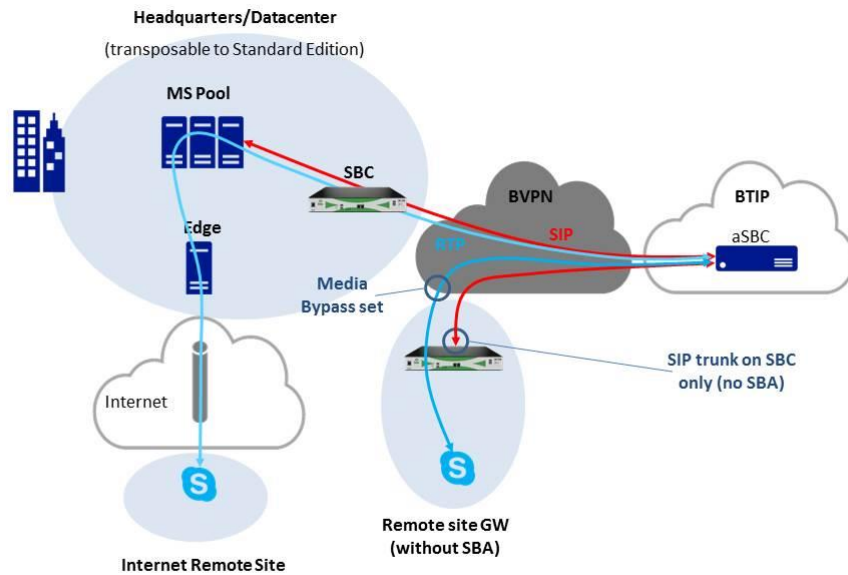

1.1.8 2-pool centralized architecture

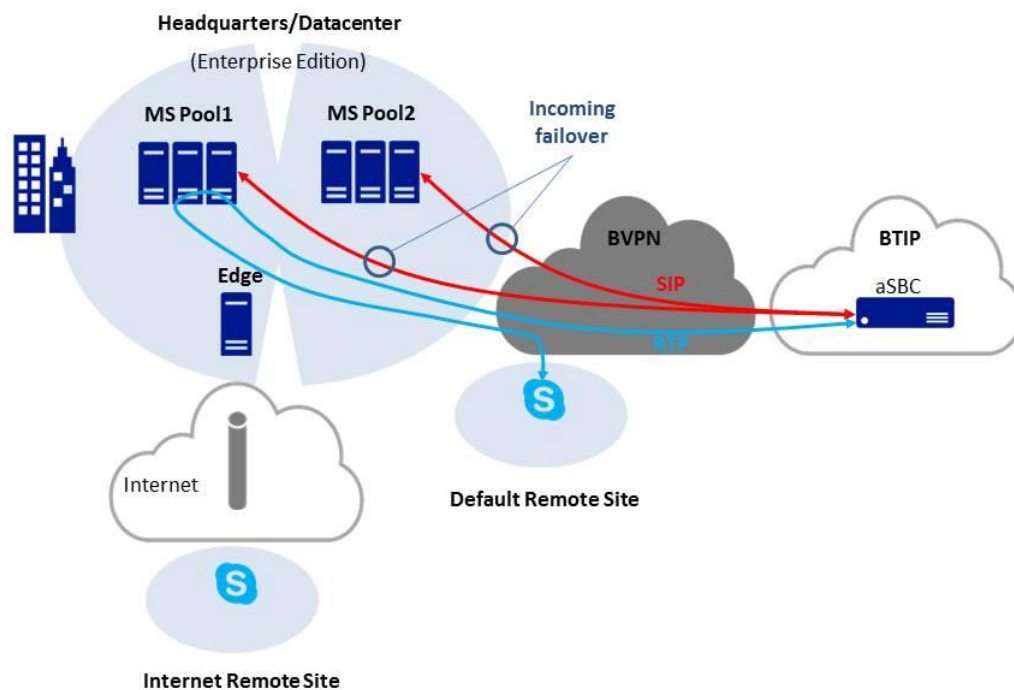

1.1.9 2-pool architecture with central SBC (Customer specific)

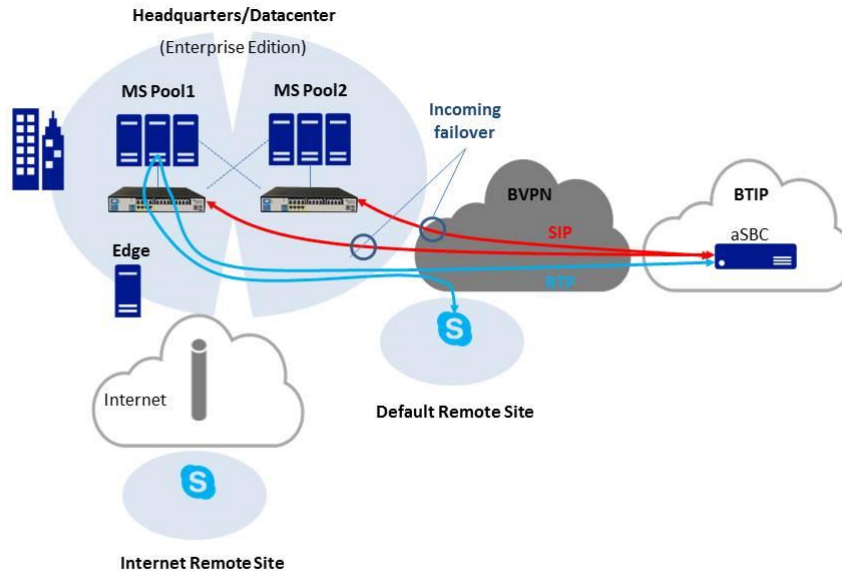


1.1.10 FAX

FAX on AudioCodes GW with or without Media Pack GW is certified both on French (BTIP) and International (BTalk) scopes. Configuration checklist is not available yet but a configuration guide is available (not in this document). FAX protocol is T.38.


Fax calls to and from Business Talk consumes the same SIP Trunk which is used for regular voice call. Standard calls are always sent through Skype for Business to apply routing rules. When call is made from fax or to fax Mediant applies direct routing with Business Talk bypassing Skype for Business.

1.1.10.1 FAX directly connected on AudioCodes Mediant

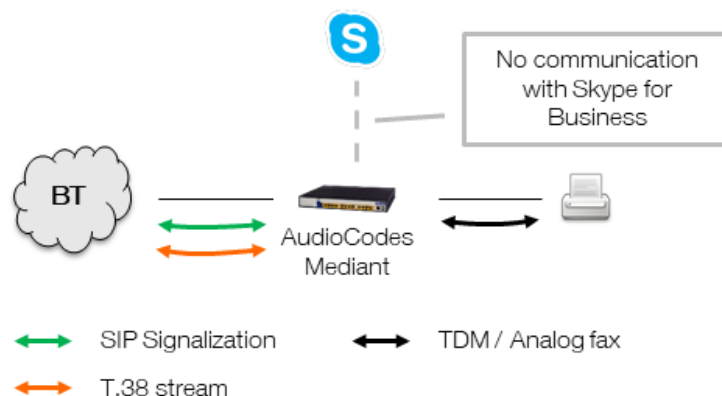

The analog fax device can be connected directly to AudioCodes Mediant gateway to FXS ports. Call is routed directly between Business Talk / Business Talk IP and fax without Skype for Business involvement.

1.1.10.2 FAX connected to a MP1xx cascaded behind AudioCodes Mediant

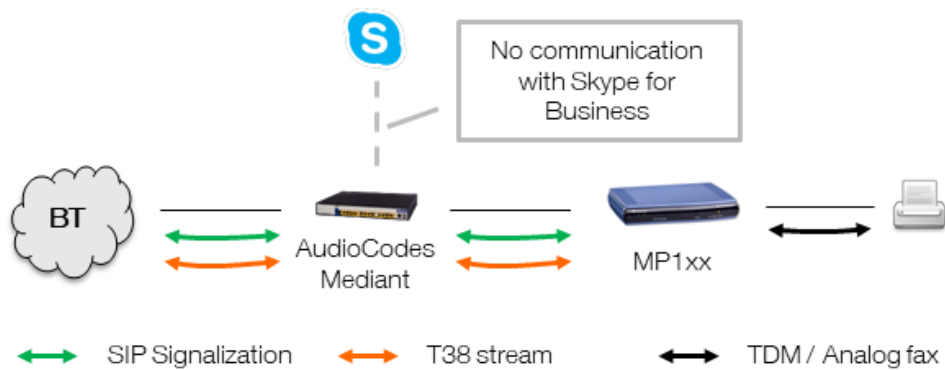


In this architecture fax device is connected to AudioCodes MediaPack 1xx analog telephony adapter. MediaPack is integrated with Mediant which can be placed in other remote site or in datacenter. Mediant gateway with no directly connected endpoints can be virtualized.

Same as in previous architecture call is routed directly between Business Talk / Business Talk IP and fax without Skype for Business involvement.


1.2 Skype for Business Online

1.2.1 Standalone mode

Example 1 – offnet call from a BVPN remote site

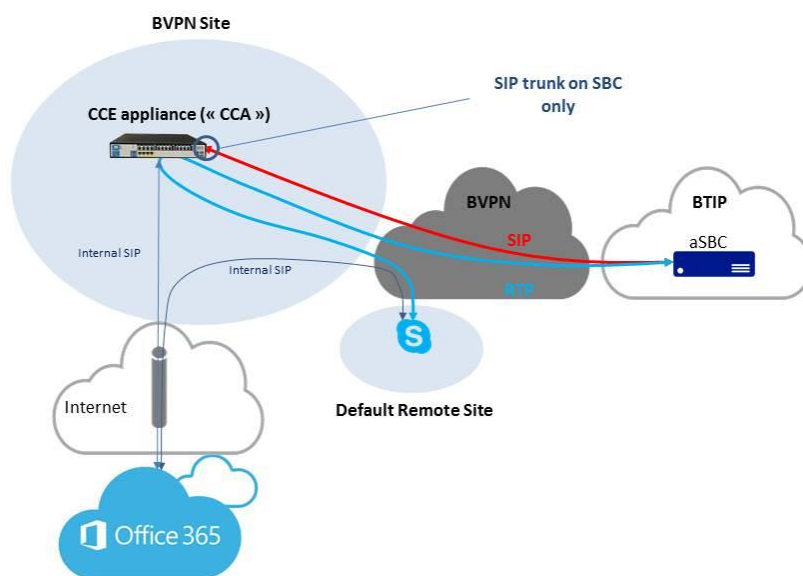


Example 2 – offnet call from an Internet remote site

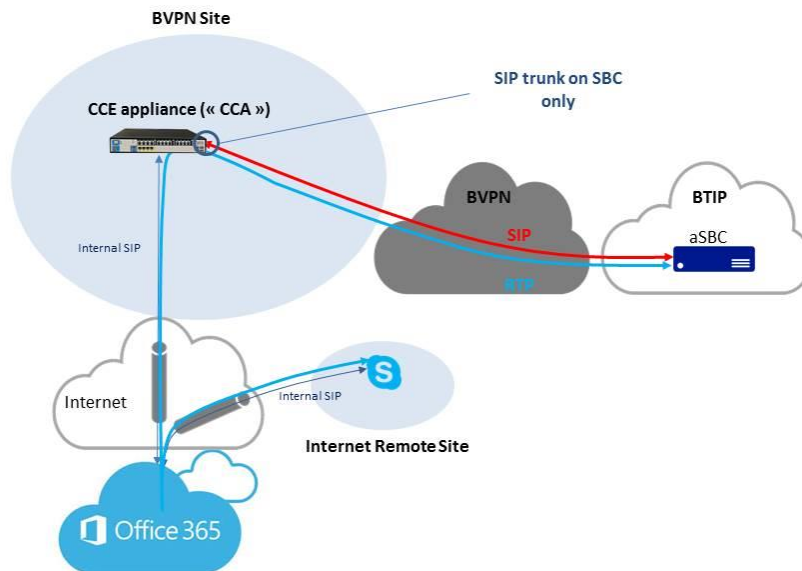

1.2.2 Redundant architectures

Example: high-availability

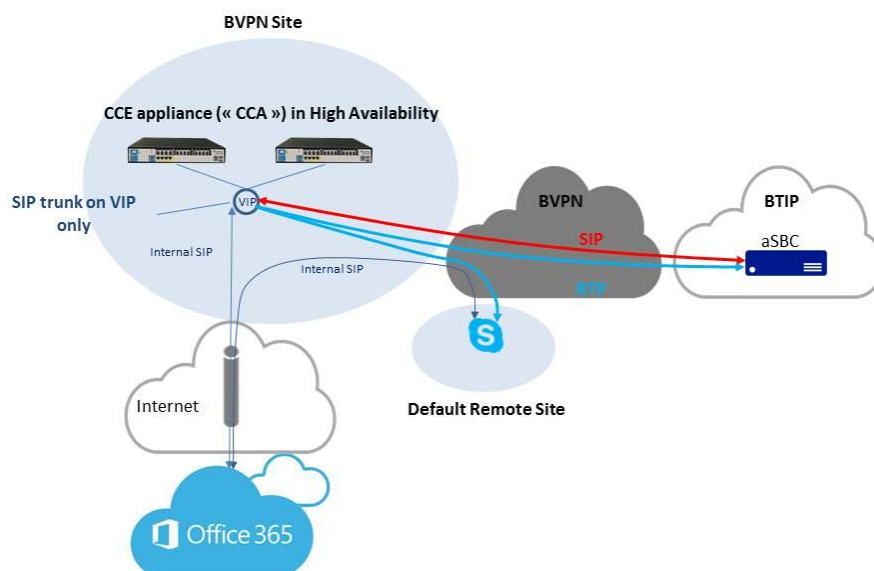

Round-Robin & Nominal/Backup also certified

2 Parameters for connection to BTIP

2.1 On-premise architectures

Head Quarter (HQ) architecture	Level of Service	@IP used by the service	
Standard Edition Enterprise Edition	No redundancy	MS IP@	
Standard Edition pairing 100% users on nominal	Local Server redundancy with database replication 2 Mediation Servers (MS1, MS2)	MS1 IP@	MS2 IP@
2x Standard Edition Pairing 50% users registered on nominal of each pair	Offers the same Level Of Service as 1xSE Pairing, but increases the capacity 2 Mediation Servers (MS) per pair. Round robin between pairs from incoming calls, even in case of loss of one SE Pair1 : MS1+MS2 Pair2 : MS3+MS4	MS1 IP@ MS3 IP@	MS2 IP@ MS4 IP@
Enterprise Edition	Load balancing (one pool) Single pool of Y Mediation Servers (MS) on the same site (Y>1)	MS1 IP@ ... MSY IP@	
Enterprise Edition	- Local pool redundancy: - 2 Pools of Y and Y' Mediation Servers (MS) on the same site (Y>=1, Y'>=1) OR - Geographical pool redundancy (same region) - 2 Pools of Y and Y' Mediation Servers (MS), each Pool hosted by different sites (Y>=1, Y'>=1)	Pool1_MS1 IP@ ... Pool1_MS Y IP@	Pool2_MS1 IP@ ... Pool2_MS Y' IP@
Central trunk with central SBC	No redundancy SBC without SBA on HQ acting as a customer SBC for HQ SIP trunk only	SBC IP@	

Remote Site (RS) architecture	Level of Service	@IP used by the service
Default remote site	No survivability, no trunk redundancy	N/A
Remote site with Mediation Server	No hairpinning through central site Functioning mode: - users remain registered to HQ - SIP trunk is handled by local MS - Nominal outgoing and incoming traffic goes through MS	MS IP@
Remote site with Gateway-SBA (Survivability Branch Appliance) or SBS (Survivability Branch Server)	- Remote survivability for the site hosting the Gateway-SBA or SBS Functioning mode: - SIP trunk is handled by SBA (not SBC part) or SBS - Nominal outgoing and incoming traffic goes through SBA/SBS - In Case of SBA/SBS crash or Local SIP Trunk connectivity loss to a-SBC, remote site phones will re-register on HQ and attempt to use the HQ trunk for incoming and outgoing traffic	SBA MS or SBS MS IP@
Remote site with Gateway-SBA (Survivability Branch Appliance)	- Remote survivability for the site hosting the Gateway-SBA Functioning mode: - SIP trunk is handled by a-SBC part of the appliance (not MS part) - Nominal outgoing and incoming traffic goes through a-SBC - In case of SBA/SBS crash or Local SIP Trunk connectivity loss to a-SBC, remote site phones will re-register on HQ and attempt to use the HQ trunk for incoming and outgoing traffic	SBC IP@
Remote site of "RS-GW" type (Gateway without SBA module)	- Allows local users to use local trunk though they are registered on central HQ (Microsoft "Media-Bypass" feature set locally) - Save bandwidth on central HQ	
Remote site cascaded to Remote site with Gateway-SBA or SBS	Allows hairpinning through the closest SBA/SBS instead of through HQ	N/A

2.2 Cloud Connector Edition architectures

Head Quarter (HQ) architecture	Level of Service	@IP used by the service	
CCE with SBC - Trunk on SBC	No redundancy	SBC IP@	
Dual CCE-SBC - Trunk on SBC - High Availability with single @IP	Redundancy with load balancing behavior	SBCs virtual IP@	
Dual CCE-SBC - Trunk on SBC - Resiliency	Redundancy with nominal/backup behavior	SBC1 IP@	SBC2 IP@

3 BTIP/BTalk certified versions

3.1 Lync 2013

Certified Lync Server Cumulative Updates:

- CU January 2017
- CU August 2016
- CU April 2016
- CU January 2016
- CU July 2015
- CU February 2015
- CU November 2014
- CU September 2014
- CU January 2014
- CU October 2013
- CU February 2013
- RTM

Certified SBC:

- Sonus (Ribbon) SBC 1000/2000 6.1
- Sonus (Ribbon) SBC 1000/2000 6.0.1.build 441
- Sonus (Ribbon) SBC 1000/2000 5.0
- Sonus (Ribbon) SBC 1000/2000 4.1

3.2 Skype for Business 2015

Certified Skype for Business 2015 Cumulative Updates:

- CU January 2019 (in progress)
- CU December 2017
- CU May 2017
- CU June 2016
- CU March 2016
- CU November 2015
- RTM

Certified SBC:

- Ribbon SBC 1000/2000 8.0 (in progress)
- Ribbon SBC 1000/2000 7.0
- Sonus (Ribbon) SBC 1000/2000 6.1
- Sonus (Ribbon) SBC 1000/2000 6.0.1 build 441
- Sonus (Ribbon) SBC 1000/2000 5.0.1 build 399
- AudioCodes M800/1000 7.20A

- AudioCodes M800/1000 7.00A

3.3 Cloud Connector Edition

Certified devices and software:

- Mediation Server 6.0.9319.410
- CCE AudioCodes appliance (Wizard version) V2.1.0.19
- CCE AudioCodes Mediant software 7.2

Cloud Connector Edition is no longer supported for new deployments. Consider Microsoft Teams instead.

4 Lync 2013 Configuration Checklist

Menu	Value
DNS requirements	
From the DNS interface: ✓ Start > Administrative Tools > DNS	FQDNs of each server (DNS A record)
From the DNS interface: ✓ Start > Administrative Tools > DNS	FQDNs of both nominal and backup aSBC on each site (DNS A record)
From the DNS interface: ✓ Start > Administrative Tools > DNS	ucupdates-r2.<SIP domain> (DNS A record) that maps the FQDN of each server hosting Device Update Service
From the DNS interface: ✓ Start > Administrative Tools > DNS	_sipinternaltls._tcp.<SIP domain> (DNS SRV record/ Port 5061) that maps the FQDN of each server offering automatic client sign-in service
From the DNS interface: ✓ Start > Administrative Tools > DNS	_ntp._udp.<SIP domain> (DNS SRV record/ Port 123) that maps the FQDN of the Domain Controller
DHCP requirements	
From the customer interface of the router	Following command has to be typed for each customer interface of the router: ✓ ip helper-address "IP@ of the DHCP Server"
From the Microsoft Lync Server Management Shell interface: ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell	Following command has to be typed : ✓ Set-CsRegistrarConfiguration -EnableDHCPServer \$True
From the DHCP interface: ✓ Start > Administrative Tools > DHCP > "select a scope" > Scope Options	DHCP Option 006 DNS Servers has to be activated
From the DHCP interface: ✓ Start > Administrative Tools > DHCP > "select a scope" > Scope Options	"DHCPUtil.exe" and "DHCPConfigScript.bat" files* have to be added on a network share that can be accessed from the DHCP server (* <i>DHCP Options 120 / 43 have to be configured (only if required by the type of endpoints deployed)</i>)
From command prompt from the DHCP server: ✓ Start > Run... > cmd	Following command has to be typed : ✓ \\<FileShare>\DHCPUtil.exe -SipServer "SipServer" - WebServer "WebServer" -RunConfigScript (* <i>DHCP Options 120 / 43 have to be configured (only if required by the type of endpoints deployed)</i>)
From the DHCP interface: ✓ Start > Administrative Tools > DHCP > "select a scope" > Scope Options	DHCP Option 042 NTP Servers has to be activated * (* <i>only if required by the type of endpoints deployed</i>)
AD requirements	
From the AD interface: ✓ Start > Administrative Tools > Active Directory Users and Computers	Each server role has to be joined to domain
Mediation Server Configuration	

Menu	Value
<p>From the Microsoft Lync Server Topology Builder interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Topology Builder ✓ Lync Server 2013 > “select a Central Site” > Mediation pools > “select a Mediation Server” 	<p>TCP listening port has to be set to 5060</p>
Enterprise Edition – Standalone Mediation Servers - Configuration	
<p>From the standalone Mediation Server:</p> <ul style="list-style-type: none"> ✓ Start > Control Panel > Network and Internet > Network Connections > “select the interface of the Mediation Server” > Properties > Internet Protocol Version 4 (TCP/IPv4) 	<p>Default gateway has to be filled Preferred DNS server has to be filled</p>
<p>From the standalone Mediation Server:</p> <ul style="list-style-type: none"> ✓ Start > Control Panel > Network and Internet > Network Connections > “select the interface of the Mediation Server” > Properties > Internet Protocol Version 4 (TCP/IPv4) > Advanced... > DNS tab 	<p>Register this connection's addresses in DNS has to be checked</p>
<p>From the Microsoft Lync Server Topology Builder interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Topology Builder ✓ Lync Server 2013 > “select an Enterprise Edition Central Site” > Mediation pools 	<p>2 Mediation pools have to be created for 2 Standalone Mediation Servers:</p> <ul style="list-style-type: none"> ✓ Multiple computer pool with the Standalone Mediation Server pool 1 (=FQDN of the Mediation Server pool 1) ✓ Multiple computer pool with the Standalone Mediation Server pool 2 (=FQDN of the Mediation Server pool 2) <p>Enable TCP port has to be checked Listening port has to be set to 5060 for each standalone Mediation Server pool</p>
<p>From the Microsoft Lync Server Topology Builder interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Topology Builder ✓ Lync Server 2013 > “select an Enterprise Edition Central Site” > Shared Components > PSTN gateways 	<p>2 PSTN gateways have to be created</p> <ul style="list-style-type: none"> ✓ 1st: FQDN of Nominal aSBC (Mediation server pool 1) ✓ 2nd: FQDN of Backup aSBC (Mediation server pool 1) <p>Check that Use all configured IP addresses is selected for each Mediation Server:</p> <p>Enable IPv4 has to be checked and Enable IPv6 has to be unchecked for each Mediation Server</p> <p>Next window contains the Trunk root information as followed</p> <p>Listening port for IP/PSTN gateway has to be set to 5060 SIP Transport Protocol has to be set to TCP Associated Mediation Server has to match the FQDN of Mediation Server pool 1</p>

Menu	Value
<p>From the Microsoft Lync Server Topology Builder interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Topology Builder Lync Server 2013 > "select an Enterprise Edition Central Site" > Shared Components > Trunks 	<p>2 Additional Trunks have to be created</p> <ul style="list-style-type: none"> ✓ 1st: Associated PSTN gateway of Nominal aSBC (Mediation server pool 2) ✓ 2nd: Associated PSTN gateway of Backup aSBC (Mediation server pool 2) <p>Listening port for IP/PSTGN gateway has to be set to 5060 SIP Transport Protocol has to be set to TCP Associated Mediation Server has to match the FQDN of Mediation Server pool 2</p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Route 	<p>4 Routes have to be created for 2 Standalone Mediation Servers*:</p> <ul style="list-style-type: none"> ✓ from Standalone Mediation Server 1a to nominal aSBC (=FQDN of the nominal aSBC from the Mediation Server 1a) ✓ from Standalone Mediation Server 1b to backup aSBC (=FQDN of the backup aSBC from the Mediation Server 1b) ✓ from Standalone Mediation Server 2a to nominal aSBC (=FQDN of the nominal aSBC from the Mediation Server 2a) ✓ from Standalone Mediation Server 2b to backup aSBC (=FQDN of the backup aSBC from the Mediation Server 2b) <p>A gateway (=FQDN of the nominal aSBC from the Mediation Server 1a) has to be associated to First Route A gateway (=FQDN of the backup aSBC from the Mediation Server 1b) has to be associated to Second Route A gateway (=FQDN of the nominal aSBC from the Mediation Server 2a) has to be associated to Third Route A gateway (=FQDN of the backup aSBC from the Mediation Server 2b) has to be associated to Fourth Route A PSTN Usage has to be associated to each Route</p> <p><i>(*) Routes for a site Headquarter includes its Remote Sites without MGW</i></p>
<p>Enterprise Edition – Standalone Mediation Servers – Specific configuration for Remote Site deployment</p>	
<p>From the Microsoft Lync Server Topology Builder interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Topology Builder ✓ Lync Server 2013 > "select a Branch Sites" > Lync Server 2013 > Shared Components > PSTN gateways 	<p>2 PSTN gateways have to be created for the Standalone Mediation Server:</p> <ul style="list-style-type: none"> ✓ to nominal aSBC (=FQDN of the nominal aSBC) ✓ to backup aSBC (=FQDN of the backup aSBC) <p>Check that 2 Trunks were created while creating PSTN gateways Listening port has to be set to 5060 for each PSTN gateways SIP transport protocol has to be set to TCP for each PSTN gateways</p>
<p>From the Microsoft Lync Server Topology Builder interface:</p>	<p>A Mediation pools has to be configured for the Standalone Mediation Server:</p>

Menu	Value
<ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Topology Builder ✓ Lync Server 2013 > "select a Branch Sites" > Mediation pools 	<ul style="list-style-type: none"> ✓ One single computer pool (=FQDN of the Mediation Server) <p>2 PSTN Gateways have to be associated to the Standalone Mediation Server:</p> <ul style="list-style-type: none"> ✓ FQDN of the nominal aSBC ✓ FQDN of the backup aSBC <p>Use all configured IPv4 IP addresses has to be checked: Listening port has to be set to 5060</p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Dial Plan 	<p>A Site dial plan has to be created for each Remote site with a Standalone Mediation Server</p> <p>A New Normalization Rule for extension numbers has to be associated:</p> <ul style="list-style-type: none"> ✓ Pattern to match has to be edited ✓ Translation rule has to be edited ✓ Internal extension has to be checked <p>Normalization Rule for extension numbers has to be moved up before the existent Normalization Rule for Prefix All</p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Voice Policy 	<p>An User policy has to be created for each Remote site with a Standalone Mediation Server</p> <p>Enable call park has to be checked</p> <p>Enable PSTN reroute has to be unchecked</p> <p>A PSTN Usage has to be associated to each User policy</p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Users > "select an user of Remote Site with a Standalone Mediation Server" 	<p>The specific voice policy has to be assigned to each RS (with a Standalone Mediation Server) user</p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Route 	<p>2 Routes have to be created for each Remote site with a Standalone Mediation Server :</p> <ul style="list-style-type: none"> ✓ to nominal aSBC ✓ to backup aSBC <p>A gateway (=FQDN of nominal aSBC) has to be associated to First Route</p> <p>A gateway (=FQDN of backup aSBC) has to be associated to Second Route</p> <p>A PSTN Usage has to be associated to each Route</p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Trunk Configuration 	<p>A Site trunk has to be created for each Remote site with a Standalone Mediation Server</p> <p>Enable refer support has to be unchecked</p> <p>Encryption support level has to be set to Optional</p> <p>A Translation Rule (to remove digit "+" for outbound calls to BTIP SIP) has to be associated to each Site trunk</p>
<p>From the Microsoft Lync Server Management Shell interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell 	<p>Following commands have to be typed for each Remote site with a Standalone Mediation Server:</p> <ul style="list-style-type: none"> ✓ Set-CsTrunkConfiguration -Identity "Site" -RTCPActiveCalls \$False ✓ Set-CsTrunkConfiguration -Identity "Site" -RTCPCallsOnHold

Menu	Value
	\$False
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Route 	<p>A PSTN Usage of Branch Sites has to be associated to each Route of Headquarter</p> <p>Note that routes must be in the following order:</p> <ol style="list-style-type: none"> 1) Route of Branch Sites to nominal aSBC 2) Route of Branch Sites to backup aSBC 3) Route of Headquarter to nominal aSBC 4) Route of Headquarter to backup aSBC
Users Configuration	
<p>From the AD interface:</p> <ul style="list-style-type: none"> ✓ Start > Administrative Tools > Active Directory Users and Computers ✓ New > User 	<p>User information (the user logon name) has to be filled</p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Users > Enable users > Add... > Find 	<p>Each user has to be assigned to a pool</p> <p>Format <code><SAMAccountName>@<SIP domain></code> has to be selected</p> <p>Telephony has to be set to Enterprise Voice</p> <p>An E164 telephone number format followed by an extension number has to be entered in the line URI</p>
Routing mechanisms for Microsoft Lync Server 2013	
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Dial Plan 	<p>A Site dial plan has to be created for each site</p> <p>A New Normalization Rule for extension numbers has to be associated:</p> <ul style="list-style-type: none"> ✓ Pattern to match has to be edited ✓ Translation rule has to be edited ✓ Internal extension has to be checked <p>Normalization Rule for extension numbers has to be moved up before the existent Normalization Rule for Prefix All</p> <p><i>(*) Site dial plan for a site Headquarter includes its Remote Sites without MGW</i></p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Voice Policy 	<p>A Site policy has to be created for each site*</p> <p>Enable call park has to be checked</p> <p>Enable PSTN reroute has to be unchecked</p> <p>A PSTN Usage has to be associated to each Site policy</p> <p><i>(*) Site policy for a site Headquarter includes its Remote Sites without MGW</i></p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Route 	<p>2 Routes have to be created for each site* :</p> <ul style="list-style-type: none"> ✓ to nominal aSBC ✓ to backup aSBC <p>A gateway (=FQDN of nominal aSBC) has to be associated to First Route</p> <p>A gateway (=FQDN of backup aSBC) has to be associated to Second Route</p> <p>A PSTN Usage has to be associated to each Route</p> <p><i>(*) Routes for a site Headquarter includes its Remote Sites without MGW</i></p>

Menu	Value
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Trunk Configuration 	<p>A Site trunk has to be created for each site*</p> <p>Enable refer support has to be unchecked</p> <p>Enable forward call history has to be checked</p> <p>Encryption support level has to be set to Optional</p> <p>A Translation Rule (to remove digit "+" for outbound calls to BTIP SIP) has to be associated to each Site trunk</p> <p><i>(*) Site trunk for a site Headquarter includes its Remote Sites without MGW</i></p>
<p>From the Microsoft Lync Server Management Shell interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell 	<p>Following commands have to be typed for each site*:</p> <ul style="list-style-type: none"> ✓ <code>Set-CsTrunkConfiguration -Identity "Site" -RTCPActiveCalls \$False</code> ✓ <code>Set-CsTrunkConfiguration -Identity "Site" -RTCPCallsOnHold \$False</code> <p><i>(*) A Site Headquarter includes its Remote Sites without MGW</i></p>
<p>From the Microsoft Lync Server Management Shell interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell 	<p>Following command has to be typed:</p> <ul style="list-style-type: none"> ✓ <code>Set-CsMediaConfiguration -EncryptionLevel SupportEncryption</code>
Specific Normalization Rule	
<p>Voice Mail Feature :</p> <p>From the Microsoft Lync Server Control Panel interface:</p> <p>Start > All Programs > Microsoft Lync Server 2013</p> <p>> Lync Server Control Panel</p> <ul style="list-style-type: none"> ✓ Voice Routing > Dial Plan 	<p>A Normalization Rule has to be associated to each Site dial plan*</p> <p><i>(*) to be adapted according the client architecture</i></p>
<p>Call Park Feature :</p> <p>From the Microsoft Lync Server Control Panel interface:</p> <p>Start > All Programs > Microsoft Lync Server 2013</p> <p>> Lync Server Control Panel</p> <p>Voice Routing > Dial Plan</p>	<p>A Normalization Rule has to be associated to each Site dial plan*</p> <p><i>(*) to be adapted according the client architecture</i></p>
Music On Hold	
<p>From the Microsoft Lync Server Management Shell interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell <p>Note:</p> <p>The customized MoH is played For Softphone Devices</p> <p>The embedded firmware MoH is played For Lync Phone Edition Devices</p>	<p>The global clientpolicy is used:</p> <p>Following commands have to be typed for Softphones</p> <ul style="list-style-type: none"> ✓ <code>New-CsClientPolicy -Identity global -EnableClientOnHold \$True -MusicOnHoldAudioFile <FILE PATH></code> <p>Note:</p> <p>No more need to associate Each user to a specific Client Policy, check only while user creation that client policy field is set to Automatic</p>

Menu	Value
Unified Messaging on Microsoft Exchange Server 2013	
<p>From the Exchange Server Administration Url: https://exchangeserverIPaddress/ecp logon using administrator credential</p> <ul style="list-style-type: none"> ✓ Select Unified Messaging ✓ Double click on UM DialPlan then click on configure 	<p>On the General tab, VoIP security has to be set to Secured</p>
<p>From the Microsoft Lync Server Management Shell interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell 	<p>Following command has to be typed <code>Set-UMservice -Identity <ExchangeServer> -UMStartUpMode TLS</code></p>
<p>From the Exchange Server Administration Url: https://exchangeserverIPaddress/ecp logon using administrator credential</p> <ul style="list-style-type: none"> ✓ Select Unified Messaging ✓ Double click on UM DialPlan then click on configure 	<p>On the Settings tab, Audio codec has to be set to GSM</p>
<p>From the Exchange Server Administration Url: https://exchangeserverIPaddress/ecp logon using administrator credential</p> <ul style="list-style-type: none"> ✓ Select Unified Messaging ✓ Double click on UM DialPlan then click on configure 	<p>On the Outlook Voice Access, A Subscriber Access Number (E164 telephone number format) has to be added</p>
<p>From the Exchange UM server (Config file):</p> <ul style="list-style-type: none"> ✓ C:\Program Files\Microsoft\Exchange Server\V15\Bin\MSExchangeUM 	<pre><add key="MinimumRtpPort" value="49152" /> <add key="MaximumRtpPort" value="57500" /></pre>
<p>From the Exchange UM server (Local Group Policy Editor):</p> <ul style="list-style-type: none"> ✓ Start > Run... > gpedit.msc 	<p>Audio Policy-based QoS is configured</p> <p>Source port: 49152:57500</p> <p>Protocol: TCP and UDP</p> <p>DSCP: 46</p>
<p>From the Front End Server:</p> <ul style="list-style-type: none"> ✓ C:\Program Files\Common Files\Microsoft Lync Server 2013\Support\OcsUmUtil.exe ✓ On the OcsUmUtil tool: <ul style="list-style-type: none"> ▪ Click Load Data ▪ Double click on contacts 	<p>Select Use this pilot number from Exchange UM has to match the subscriber access number (E.164 telephone number format)</p>

Menu	Value
Analog Devices Configuration	
<i>From the Microsoft Server 2013 Control Panel and Management Shell</i>	
From the Microsoft Lync Server Control Panel interface: <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Voice Policy 	An User policy has to be created for each site with Analog Devices Enable call park has to be checked Enable PSTN reroute has to be unchecked An Existent PSTN Usage has to be associated by selecting it
From the Microsoft Lync Server Management Shell interface: <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell 	Following command has to be typed for each Analog Device : <ul style="list-style-type: none"> ✓ New-CsAnalogDevice "LineURI" -DisplayName "DisplayName" -RegistrarPool "RegistrarPool" -AnalogFax \$False -Gateway "Gateway" -OU "OU"
From the Microsoft Lync Server Management Shell interface: <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell 	Following command has to be typed for each Analog Device : <ul style="list-style-type: none"> ✓ Set-CsAnalogDevice -Identity "Identity" -DisplayName "DisplayName" ✓ Set-CsAnalogDevice -Identity "Identity" -LineURI "LineURI" ✓ Grant-CsVoicePolicy -Identity "Identity" -PolicyName "PolicyName"
<i>From the Sonus (NET) (UX 1000/2000 SBA)</i>	
From the UX Web User interface: <ul style="list-style-type: none"> ✓ Settings Tab > Media > Media List 	A Media List has to be created : Media List for Analog Devices: Media Profiles List has to match the Voice Codec Profile G711 A-Law ➤ <i>Digit Relay</i> Digit (DTMF) Relay Type has to be set to RFC 2833 Digit Relay Payload Type has to be set to 101
From the UX Web User interface: <ul style="list-style-type: none"> ✓ Settings Tab > CAS > CAS Signaling Profiles 	A FXS CAS Signaling Profiles has to be created
From the UX Web User interface: <ul style="list-style-type: none"> ✓ Settings Tab > Signaling Groups 	A CAS Signaling Group has to be created : CAS Signaling Group for Analog Devices connectivity: ➤ <i>CAS Protocol</i> CAS Signaling Profile has to match the CAS Signaling Profile for Analog Devices ➤ <i>Channels and Routing</i> Channel Hunting has to be set to Own Number Tone Table has to match the Analog Device Tone Table Call Routing Table has to match the Analog Device Call Routing Table** for routing calls received from Analog Devices ➤ <i>Assigned Channels</i> Channel Phone Number has to match the Analog Device phone number <i>(**) Please note that Call Routing Table must be added later (after specific Call Routing Tables configuration)</i>

Menu	Value
<p>From the UX Web User interface:</p> <ul style="list-style-type: none"> ✓ Settings Tab > Transformation 	<p>A Transformation Table has to be created:</p> <p>Transformation Table for Lync to Analog Device calls:</p> <ul style="list-style-type: none"> ➤ <i>Input Field</i> Value has to match the Analog Device telephone number E.164 format ➤ <i>Output Field</i> Value has to be set to \1
<p>From the UX Web User interface:</p> <ul style="list-style-type: none"> ✓ Settings Tab > Call Routing Table 	<p>A Call Routing Table has to be created for calls received from Lync (if it doesn't exist) or additional Call Routing Entries have to be created in the Call Routing Table for calls received from Lync (if it exists)</p> <p>Call Routing Entry for Lync to Analog Device calls:</p> <ul style="list-style-type: none"> ➤ <i>Route Details</i> Number/Name Transformation Table has to match the Transformation Table for Lync to Analog Device calls ➤ <i>Destination Information</i> Destination Signaling Groups has to match the Signaling Group for Analog Device connectivity ➤ <i>Media</i> Media List has to match the Media List for Analog Device <p>A Call Routing Table has to be created for calls received from the Analog Devices</p> <p>Call Routing Entry Tenor to Lync calls:</p> <ul style="list-style-type: none"> ➤ <i>Route Details</i> Number/Name Transformation Table has to match the Transformation Table used to send a phone number without modification ➤ <i>Destination Information</i> Destination Signaling Groups has to match the Signaling Group for Lync connectivity ➤ <i>Media</i> Media List has to match the Media List for Analog Device <p><i>(**) Please note that Call Routing Table must be added to CAS Signaling Groups configuration</i></p>
From the AudioCodes (Mediant 800/1000 SBA)	
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) > VoIP menu > TDM submenu > Select TDM Bus Settings 	<p>PCM Law Select has to be set to A-Law</p> <p>TDM Bus Clock Source has to be set to Network</p>
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) > VoIP menu > Media submenu > Select Voice Settings <p>From the AudioCodes Web User interface:</p>	<p>CAS Transport Type has to be set to CASRFC2833Relay</p> <p>Check that Analog Settings are filled with default value</p>

Menu	Value
<ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > Media submenu > Select Analog Settings 	
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > Coders and Profiles submenu > Select Analog Coders 	<p>Coder Name has to be set to G711 A-Law</p> <p>Packetization Time has to be set to 20ms</p> <p>Payload Type has to be set to 8</p>
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Trunk Group > Select Trunk Group <p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Trunk Group > Select Trunk Group Settings 	<p>A Trunk Group has to be created with the following parameters:</p> <p>Module has to be set to Module 2 FXS</p> <p>Channels has to be set to the Analog Device port on the gateway</p> <p>Phone Number has to match the Analog Device phone number</p> <p>Trunk Group ID has to match the Analog Device Trunk Group ID</p> <p>Tel Profile ID has to match the Tel Profile ID if configured else the default profile 0 has to be associated</p> <p>Trunk Group ID has to match the Analog Device Trunk Group ID</p> <p>Channel Select Mode has to be set to By Dest Phone Number</p>
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Manipulation > Select Dest Number IP -> Tel <p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Manipulation > Select Dest Number Tel -> IP 	<p>Destination Prefix has to match the Analog Device Phone Number as declared on the Trunk Group Table</p> <p>Source Trunk Group has to match the Analog Device Trunk Group already created</p> <p>Prefix to add has to match a rule manipulation in order to has a E.164 format number to send to Lync Server</p>
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Routing > Select Tel to IP Routing <p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Routing > Select IP to Tel Routing 	<p>Tel to IP Routing Mode has to be set to Route Calls after manipulation</p> <p>Src IP Group ID has to be set to -1</p> <p>Src Trunk Group ID has to match the Analog Device Group ID</p> <p>Dest IP Group ID has to match the Lync Server Group ID</p> <p>IP toTel Routing Mode has to be set to Route Calls before manipulation</p> <p>Dest Phone Prefix has to match the Analog Device phone number</p> <p>Trunk Group ID has to match the Analog Device Trunk Group ID</p> <p>IP Profile ID has to match the Tel Profile ID if configured else the default profile 0 has to be associated</p>

Menu	Value
E1/T1 Access Configuration	
<i>From the Sonus (NET) (UX 1000/2000 SBA) with FXS ports</i>	
<p>From the UX Web User interface:</p> <ul style="list-style-type: none"> ✓ Settings Tab > Signaling Groups 	<p>An ISDN Signaling Group has to be created:</p> <p>ISDN Signaling Group for E1/T1 connectivity:</p> <ul style="list-style-type: none"> ➤ <i>Port and Protocol</i> Port Name has to be selected Switch Variant has to be set to Euro ISDN ➤ <i>Channels and Routing</i> Tone Table has to match the Tone Table if configured else the Default Tone Table has to be selected Call Routing Table has to match the E1/T1 Call Routing Table** for routing calls received from E1/T1 access <p>(**) Please note that Call Routing Table must be added later (after specific Call Routing Tables configuration)</p>
<p>From the UX Web User interface:</p> <ul style="list-style-type: none"> ✓ Settings Tab > Transformation 	<p>Transformation Table for T2 to Lync calls</p> <p>A Transformation Table has to be created:</p> <p>Transformation Entry for T2 to Lync calls (Called):</p> <ul style="list-style-type: none"> ➤ <i>Input Field</i> Type has to be set to Called Address/Number Value has to match the T2 number ➤ <i>Output Field</i> Type has to be set to Called Address/Number Value has to match the E.164 Lync number <p>Transformation Entry for T2 to Lync calls (Calling):</p> <ul style="list-style-type: none"> ➤ <i>Input Field</i> Type has to be set to Calling Address/Number Value has to be filled ➤ <i>Output Field</i> Type has to be set to Calling Address/Number Value has to be filled
<p>From the UX Web User interface:</p> <ul style="list-style-type: none"> ✓ Settings Tab > Transformation 	<p>Transformation Table for Lync to T2 calls</p> <p>A Transformation Table has to be created:</p> <p>Transformation Entry for Lync to T2 calls (Called):</p> <ul style="list-style-type: none"> ➤ <i>Input Field</i> Type has to be set to Called Address/Number Value has to be filled ➤ <i>Output Field</i> Type has to be set to Called Address/Number

Menu	Value
	<p>Value has to be filled</p> <p>Transformation Entry for Lync to T2 calls (Calling):</p> <ul style="list-style-type: none"> ➤ <i>Input Field</i> Type has to be set to Calling Address/Number Value has to be filled ➤ <i>Output Field</i> Type has to be set to Calling Address/Number Value has to be filled
<p>From the UX Web User interface:</p> <ul style="list-style-type: none"> ✓ Settings Tab > Call Routing Table 	<p>Call Routing Table for Lync to T2 calls</p> <p>A Call Routing Table has to be created for calls received from Lync (if it doesn't exist) or an additional Call Routing Entry has to be created in the Call Routing Table for calls received from Lync (if it exists)</p> <p>Call Routing Entry for Lync to T2 calls:</p> <ul style="list-style-type: none"> ➤ <i>Route Details</i> Number/Name Transformation Table has to match the Transformation Table for Lync to T2 calls ➤ <i>Destination Information</i> Destination Signaling Groups has to match the Signaling Group for E1/T1 connectivity ➤ <i>Media</i> Media List has to match the Media List without crypto <p>Call Routing Table for T2 to Lync calls</p> <p>A Call Routing Table has to be created for calls received from E1/T1 access</p> <p>Call Routing Entry for T2 to Lync calls:</p> <ul style="list-style-type: none"> ➤ <i>Route Details</i> Number/Name Transformation Table has to match the Transformation Table T2 to Lync calls ➤ <i>Destination Information</i> Destination Signaling Groups has to match the Signaling Group for Lync connectivity ➤ <i>Media</i> Media List has to match the Media List without crypto <p><i>(**) Please note that Call Routing Table must be added to ISDN/SIP Signaling Groups configuration</i></p>
From AudioCodes Mediant (800/ 1000 SBA)	
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) > VoIP menu > PSTN submenu > Select Trunk Settings 	<p>Protocol Type has to be set to E1 Euro ISDN</p> <p>Line Code has to be set to HDB3</p> <p>Framing Method has to be set to E1 FRAMING MFF CRC4 EXT</p>

Menu	Value
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Trunk Group > Select Trunk Group <p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Trunk Group > Select Trunk Group Settings 	<p>A Trunk Group has to be created with the following parameters:</p> <p>Module has to be set to Module 1 PRI</p> <p>Channels has to be set to T2 line number of channels</p> <p>Phone Number has to match the T2 phone number</p> <p>Trunk Group ID has to match the T2 Trunk Group ID</p> <p>Tel Profile ID has to match the Tel Profile ID if configured else the default profile 0 has to be associated</p> <p>Trunk Group ID has to match the T2 Trunk Group ID</p> <p>Channel Select Mode has to be set to Cyclic Ascending</p>
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > Control Network submenu > Select Proxy Set Table 	<p>A Proxy Set Table has to be created with the following parameters:</p> <p>Proxy Set ID has to be filled</p> <p>Proxy Address has to match the SBA FQDN</p> <p>Transport Type has to be set to TLS</p> <p>Enable Proxy Keep Alive has to be set to Using Options</p>
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > Control Network submenu > Select IP Group Table 	<p>An IP Group Table has to be created with the following parameters:</p> <p>Index has to be filled</p> <p>Type has to be set to Server</p> <p>Proxy Set ID has to match the SBA proxy Set ID already created</p>
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Manipulation > Select Dest Number IP -> Tel <p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Manipulation > Select Dest Number Tel -> IP 	<p>Destination Prefix has to be filled with the prefix of the received number</p> <p>Source IP Address has to match the SBA IP Address</p> <p>Stripped Digits from Left has to be filled</p> <p>Prefix to Add has to be filled</p> <p>Source Trunk Group has to match the T2 Trunk Group already created</p> <p>Destination Prefix has to match the T2 Line number</p> <p>Stripped Digits from Left has to be filled</p> <p>Prefix to add has to match the corresponding Lync device on E.164 format number</p>
<p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > GW and IP to IP submenu > Routing > Select Tel to IP Routing <p>From the AudioCodes Web User interface:</p> <ul style="list-style-type: none"> ✓ Configuration Tab (full) >VoIP menu > 	<p>Tel to IP Routing Mode has to be set to Route Calls after manipulation</p> <p>Src IP Group ID has to be set to -1</p> <p>Src Trunk Group ID has to match the T2 Group ID</p> <p>IP toTel Routing Mode has to be set to Route Calls before manipulation</p> <p>Source IP Address has to match the Gateway IP Address</p>

Menu	Value
GW and IP to IP submenu > Routing > Select IP to Tel Routing	Trunk Group ID has to match the T2 Trunk Group ID IP Profile ID has to match the Tel Profile ID if configured else the default profile 0 has to be associated
Dial-in Conferencing feature	
From the Microsoft Lync Server Control Panel interface: ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Dial Plan	A Dial-in conferencing region has to be added (associated to Dial-in Access Number)
Call Back feature	
From the Microsoft Lync Server Control Panel interface: ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Routing > Trunk Configuration	A specific translation Rule has to be associated to each Site trunk (*) <i>to be adapted to the client architecture</i> (**) <i>first priority before translation rule removing the « + » digit</i>
Call Park feature	
From the Microsoft Lync Server Control Panel interface: ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel ✓ Voice Features	A Number range has to be created for each Site (*) <i>to be adapted to the client architecture</i>
CALL ADMISSION CONTROL	
From the Microsoft Lync Server Control Panel interface: ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel Network Configuration > Global	Edit Global Setting –Global Check Enable call admission control

Menu	Value
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel <p>Network Configuration > Bandwidth Policy</p>	<p>Create Bandwidth Policy for <u>CAC "from site to WAN"</u></p> <p>New "name"</p> <p>Audio limit: according to site sizing</p> <p>Audio session limit: 100</p> <p>Create Bandwidth Policy for <u>CAC "from Edge to WAN"</u></p> <p>New "name"</p> <p>Audio limit: according to site sizing</p> <p>Audio session limit: 9999999999</p> <p>Create Bandwidth Policy for <u>CAC "from site to SIP Trunk"</u></p> <p>New "name"</p> <p>Audio limit: according to site sizing</p> <p>Audio session limit: 97</p> <p>Create Bandwidth Policy for <u>CAC "0"</u></p> <p>New "name"</p> <p>Audio limit: 0</p> <p>Audio session limit: 40</p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel <p>Network Configuration > Region</p>	<p>Create WAN Region</p> <p>New "name"</p> <p>Associate site name</p> <p>Uncheck Enable audio alternate path (recommended)</p> <p>Check or Uncheck Enable video alternate path to your convenience</p>
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel <p>Network Configuration > Site</p>	<p>Create Site for users and associate a Bandwidth policy between this Site and the Region</p> <p>New "name"</p> <p>Associate Region</p> <p>Associate Bandwidth Policy for <u>CAC "from site to WAN"</u></p> <p>Create Site for edge and associate a Bandwidth policy between this Site and the Region</p> <p>New "name"</p> <p>Associate Region</p> <p>Associate Bandwidth Policy for <u>CAC "from Edge to WAN"</u></p> <p>Create Site for aSBC and associate a Bandwidth policy between this Site and the Region</p> <p>New "name"</p> <p>Associate Region</p> <p>Associate Bandwidth Policy for <u>CAC "0"</u></p>
<p>From the Microsoft Lync Server Management Shell interface:</p> <p>Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell</p>	<p>Creation of Bandwidth Policy for intersite links</p> <p>New-CsNetworkInterSitePolicy -Identity "name of the intersitelink" -BWPProfileID "name of the policy for CAC from site to SIP Trunk" -NetworkSiteID1 "name of the site for user" -NetworkSiteID2 "name of the site for the SBC"</p>

Menu	Value
<p>From the Microsoft Lync Server Control Panel interface:</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel <p>Network Configuration > Subnet</p>	<p>Create subnet for each site</p> <p>New</p> <p>Add subnet ID</p> <p>Add mask</p> <p>Associate with Network site ID</p>
Quality of Service	
<p>From the Microsoft Lync Management Shell interface::</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell 	<p>Enable client media port range:</p> <p>Set-CsConferencingConfiguration -ClientMediaPortRangeEnabled \$true -ClientMediaPort 50000 -ClientAudioPort 50060 -ClientVideoPort 57600 -ClientAppSharingPort 32800</p>
<p>From the Microsoft Lync Management Shell interface::</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell 	<p>Configure ApplicationSharing port range on Lync application servers:</p> <p>Set-CsApplicationServer ApplicationServer:<serverFQDN> -AppSharingPortStart 32768 -AppSharingPortCount 16383</p>
<p>From the Microsoft Lync Management Shell interface::</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell 	<p>Configure ApplicationSharing port range on Lync Conferencing servers:</p> <p>Set-CsApplicationServer ConferencingServer:<serverFQDN> -AppSharingPortStart 32768 -AppSharingPortCount 16383</p>
Configuration requirements (warnings)	
Configuring Clients ports range for LPE and SoftPhone	
<p>From the Microsoft Lync Management Shell interface::</p> <ul style="list-style-type: none"> ✓ Start > All Programs > Microsoft Lync Server 2013 > Lync Server Management Shell 	<p>Enable client media port range:</p> <p>Set-CsConferencingConfiguration -ClientMediaPortRangeEnabled \$true -ClientAudioPort 50060 -ClientAudioPortRange 48</p>
Configuring Clients ports range for VVX	
<ul style="list-style-type: none"> ✓ Using VVX Web UI 	<p>Navigate through the VVX Web Interface: <a href="http://<VVX_IP_Address>">http:<VVX_IP_Address></p> <p>Go to Settings tab > Network menu > RTP</p> <p>Configure the Port Range Start to: 50060</p>
<ul style="list-style-type: none"> ✓ Using VVX configuration file (.cfg) 	<p>Configure the following line in the VVX configuration file :</p> <p><code>tcpIpApp.port.rtp.mediaPortRangeStart="50060"</code></p> <p>Import the new configuration file to the VVX using the WebUI or through the IIS server</p>
Others Devices	
<p>Check that the audio range port respect the OBS recommendations</p>	<p>The default audio range is: 50060-50107.</p>

5 Skype for Business 2015 with or without Ribbon/AudioCodes Configuration Checklist

5.1 Common core configuration checklist

Menu	Value
Skype for Business Configuration (Topology Builder)	
On the Topology builder interface: ✓ Central Site > skype for business 2015 > Mediation Pools , right click and Edit properties	Enable TCP port has to be checked Listening port has to be set to 5060 for each Mediation Server in skype for Business topology
On the Topology builder interface: ✓ Central Site > Skype for Business 2015 > Shared components > Trunks, right click edit properties	FQDN of nominal aSBC for BT/BTIP traffic Specify nominal aSBC BT/BTIP trunk name Listening port for IP/PSTN gateway: 5060 SIP Transport protocol: TCP Associated Mediation Server: Mediation Server FQDN Associated Mediation Server port: 5060
On the Topology builder interface: ✓ Central Site > Skype for Business 2015 > Shared components > Trunks, right click edit properties	FQDN of backup aSBC for BT/BTIP traffic Specify backup aSBC BT/BTIP trunk name Listening port for IP/PSTN gateway: 5060 SIP Transport protocol: TCP Associated Mediation Server: Mediation Server FQDN Associated Mediation Server port: 5060
Skype for Business Configuration (Control Panel)	
Dial Plan On the Skype for Business Server Control Panel Interface: ✓ Voice Routing > Dial Plan	Type: Dial Plan type Name: Dial Plan name
Voice Policy On the Skype for Business Server Control Panel Interface: ✓ Voice Routing > Voice Policy	Name: Voice Policy name Enable call park: Checked Enable PSTN reroute: Unchecked
PSTN usage On the Skype for Business Server Control Panel Interface: ✓ Voice Routing > Voice Policy	New PSTN Usage record Name: BT/BTIP PSTN Usage name
Routes (aSBC nominal route) On the Skype for Business Server Control Panel Interface: ✓ Voice Routing > Voice Policy	Edit PSTN Usage record Associated routes → New Name: aSBC nominal Route name Associated Trunks → Add Select corresponding aSBC nominal Trunk from drop down list
Routes (aSBC backup route) On the Skype for Business Server Control Panel Interface: ✓ Voice Routing > Voice Policy	Edit PSTN Usage record Associated routes → New Name: aSBC backup Route name Associated Trunks → Add

Menu	Value
	Select corresponding aSBC backup Trunk from drop down list
Trunk configuration On the Skype for Business Server Control Panel Interface: ✓ Voice Routing > Trunk configuration	New Name: BT/BTIP Trunk name Encryption support level : Optional Refer support : None Enable forward call History : Checked
Trunk configuration (SFB PowerShell) On the Skype for Business PowerShell Interface: ✓ Set-CsTrunkConfiguration -Identity <Site> -RTCPActiveCalls \$False ✓ Set-CsTrunkConfiguration -Identity <Site> -RTCPCallsOnHold \$False	-Site: The name of the site

5.2 Configuration checklist in case of Ribbon SBC 1000/2000 Gateway:

This configuration checklist will follow this color convention:

- **Green:** in case of **RS SBA**
- **Blue:** in case of **HQ with GW aboard**

Skype for Business– RS SBA or HQ with GW aboard - Trunk SIP on Ribbon SBC BT/BTIP configuration	
PSTN usage On the Skype for Server Control Panel Interface: ✓ Voice Routing > Voice Policy	New Ribbon SBC BT/BTIP PSTN Usage record Name: Ribbon SBC BT/BTIP PSTN Usage name
Route (Ribbon SBC BT/BTIP) On the Skype for Business Server Control Panel Interface: ✓ Voice Routing > Voice Policy	Edit PSTN Usage record Associated routes → New Name: Ribbon SBC for BT/BTIP route name Associated Trunks → Add Select corresponding Ribbon SBC Trunk from drop down list
Trunk configuration On the Skype for Business Server Control Panel Interface: ✓ Voice Routing > Trunk configuration	New Name: Ribbon SBC for BT/BTIP Trunk name Encryption support level : Optional Refer support : None Enable forward call History : Checked
Trunk configuration (SFB PowerShell) On the Skype for Business PowerShell Interface: ✓ Set-CsTrunkConfiguration -Identity <Site> -RTCPActiveCalls \$False ✓ Set-CsTrunkConfiguration -Identity <Site> -RTCPCallsOnHold \$False	-Site: The name of the remote site
Ribbon SBC BT/BTIP configuration	

Menu	Value
SIP Profile	
On the Ribbon SBC gateway WebUi Interface: ✓ Settings >SIP > SIP Profile > Default SIP Profile	Session Timer: Session Timer: Disabled Header Customization: UA Header: Ribbon SBC Calling Info Source: RFC Standard Options Tags: 100rel: Supported Update: Supported SDP Customization: Send Number of Channels: True Connection Info In Media Section: True Digit Transmission Preference: RFC 2833/Voice
Media	
On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Media > Media System Configuration	Port Range: Start Port: 16384 Number of Port pairs: 600 Echo Cancellor Type Option: Standard Echo Cancel NLP Option: Mild Send STUN Packets: Enabled Music On Hold: Music on Hold Source: File
On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Media > Media Profiles	Default G711a: Codec: G711 A-law Payload Size: 20 ms Default G711μ: Codec: G711 μ-law Payload Size: 20 ms
On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Media > Media List	Default Media List: Media Profiles List: G711a G711μ Crypto Profile ID: None Media DSCP: 46 RTCP Mode: RTCP Dead Call Detection: Disabled Silence Suppression: Disabled
Secondary interface (only for RS SBA)	
On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Node Interfaces > Logical Interfaces > Ethernet 1 IP	Configure Secondary Interface: Enabled Secondary Address: IP address of the secondary interface of the Ribbon gateway (dedicated for BT/BTIP traffic) Secondary Mask: Mask corresponding to secondary interface subnet
From/To SFB <=> Offnet routing BT/BTIP traffic	
SIP Server Table	
From/To SBA –BT/BTIP or From/To MS Pool –BT/BTIP On the Ribbon SBC gateway WebUi Interface: ✓ Settings >SIP > SIP Server Tables > Create SIP Server	Host: SBA or MS Pool IP address Port: 5060 Protocol: TCP

Menu	Value
	Monitor: SIP Options
From/To BT/BTIP-SBA or From/To MS Pool –BT/BTIP On the Ribbon SBC gateway WebUi Interface: ✓ Settings >SIP > SIP Server Tables > Create SIP Server	1st Entry: ACME aSBC nominal Host: ACME aSBC nominal IP address Port: 5060 Protocol: TCP Monitor: SIP Options 2nd Entry: ACME aSBC backup Host: ACME aSBC backup IP address Port: 5060 Protocol: TCP Monitor: SIP Options
Transformation Rules	
SBA to BT/BTIP or MS Pool to BT/BTIP On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Transformation > New Transformation Table > New Transformation Entry	Calling Entry: Input Field Type: Calling Address/Number Input Field Value: depend on transformation need Output Field Type: Calling Address/Number Output Field Value: depend on transformation need Called Entry: Input Field Type: Called Address/Number Input Field Value: depend on transformation need Output Field Type: Called Address/Number Output Field Value: depend on transformation need
BT/BTIP to SBA or BT/BTIP to SBA On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Transformation > New Transformation Table > New Transformation Entry	Calling Entry: Input Field Type: Calling Address/Number Input Field Value: depend on transformation need Output Field Type: Calling Address/Number Output Field Value: depend on transformation need Called Entry: Input Field Type: Called Address/Number Input Field Value: must normalize received number on Skype for Business E.164 number format Output Field Type: Called Address/Number Output Field Value: depend on transformation need
Call Routing Tables	
From SBA or From MS Pool On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Call Routing Table > Create	SBA to BT/TIP or MS Pool to BT/TIP entry: Description: SBA to BT/BTIP or MS pool to BT/BTIP Route Priority: 1 Number/Name Transformation Table: SBA to

Menu	Value
	BT/BTIP or MS Pool to BT/BTIP Destination Signalling Group: (SIP) From/To BT/TIP-SBA or From/To BT/TIP-SBA Media Transcoding: Enabled (If licenced)
From BT/BTIP On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Call Routing Table > Create	BT/TIP to SBA or BT/TIP to MS Pool entry: Description: BT/BTIP to SBA or BT/BTIP to MS Pool Route Priority: 1 Number/Name Transformation Table: BT/BTIP to SBA or BT/BTIP to MS Pool Destination Signalling Group: (SIP) From/To SBA-BT/BTIP or From/To MS Pool-BT/BTIP Media Transcoding: Enabled (If licenced)
Signaling Groups	
(SIP) From/To SBA – BT/BTIP or From/To MS Pool – BT/BTIP On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Signaling Group > SIP Signaling Group	Description: SIP From/To SBA – BT/BTIP or From/To MS Pool – BT/BTIP Call Routing Table: From SBA or From MS Pool SIP Server Table: From/To SBA –BT/BTIP or MS Pool –BT/BTIP Signalling/Media Source IP : Ribbon BT/BTIP interface IP address Listen Ports: 5060 /TCP Federated IP/FQDN: SBA or MS Pool FQDN
(SIP) From/To BT/BTIP-SBA or From/To BT/BTIP-MS Pool On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Signaling Group > SIP Signaling Group	Description: SIP From/To BT/BTIP-SBA or From/To BT/BTIP-MS Pool Call Routing Table: From BT/BTIP SIP Server Table: From/To BT/BTIP -SBA or From/To BT/BTIP-MS Pool Signalling/Media Source IP: Ribbon BT/BTIP interface IP address Listen Ports: 5060 /TCP Federated IP/FQDN: ACME aSBC nominal IP address ACME aSBC backup IP address
From/To SFB <=> Offnet routing E1/T1 traffic (only for RS SBA)	
System Companding Law	
On the Ribbon SBC gateway WebUi Interface: ✓ Settings >System > System companding law	Companding law: A-Law
SIP Server Table	
From/To SBA –PSTN On the Ribbon SBC gateway WebUi Interface: ✓ Settings >SIP > SIP Server Tables > Create SIP Server	Host: SBA IP Port: example 5060 (must be the same as defined on Skype for Business topology builder) Protocol: TCP Monitor: SIP Options Note:

Menu	Value
	If using same protocol and port as BT/BTIP the same SIP Server table can be used
Transformation Rules	
SBA to PSTN On the Ribbon SBC gateway WebUi Interface: <ul style="list-style-type: none"> ✓ Settings >Transformation > New Transformation Table > New Transformation Entry 	Calling Entry: Input Field Type: Calling Address/Number Input Field Value: depend on transformation need Output Field Type: Calling Address/Number Output Field Value: depend on transformation need Called Entry: Input Field Type: Called Address/Number Input Field Value: depend on transformation need Output Field Type: Called Address/Number Output Field Value: depend on transformation need
PSTN to SBA On the Ribbon SBC gateway WebUi Interface: <ul style="list-style-type: none"> ✓ Settings >Transformation > New Transformation Table > New Transformation Entry 	Calling Entry: Input Field Type: Calling Address/Number Input Field Value: depend on transformation need Output Field Type: Calling Address/Number Output Field Value: depend on transformation need Called Entry: Input Field Type: Called Address/Number Input Field Value: must normalize received number on Skype for Business E.164 number format Output Field Type: Called Address/Number Output Field Value: depend on transformation need
Call Routing Tables	
From SBA On the Ribbon SBC gateway WebUi Interface: <ul style="list-style-type: none"> ✓ Settings >Call Routing Table > Create 	SBA to PSTN entry: Description: SBA to PSTN Route Priority: 1 Number/Name Transformation Table: SBA to PSTN Destination Signalling Group: (ISDN) From/To PSTN-SBA Media Transcoding: Enabled (If licenced)
From PSTN On the Ribbon SBC gateway WebUi Interface: <ul style="list-style-type: none"> ✓ Settings >Call Routing Table > Create 	PSTN to SBA entry: Description: PSTN to SBA Route Priority: 1 Number/Name Transformation Table: PSTN to SBA Destination Signalling Group: (SIP) From/To SBA-PSTN Media Transcoding: Enabled (If licenced)

Menu	Value
Signaling Groups	
(SIP) From/To SBA – PSTN On the Ribbon SBC gateway WebUi Interface: <ul style="list-style-type: none"> ✓ Settings > Signaling Group > SIP Signaling Group 	Description: SIP From/To SBA – PSTN Call Routing Table: From SBA SIP Server Table: From/To SBA –PSTN Signalling/Media Source IP : Ribbon E1/analog interface IP address Listen Ports: 5060 /TCP Federated IP/FQDN: SBA IP address
(ISDN) PSTN On the Ribbon SBC gateway WebUi Interface: <ul style="list-style-type: none"> ✓ Settings > Signaling Group > Signaling Group > ISDN Signaling Group 	Description: ISDN PSTN Switch variant: Euro ISDN Call Routing Table: From PSTN
From/To SFB <=> Offnet routing Analog Devices traffic	
SIP Server Table	
From/To SBA –Analog Device On the Ribbon SBC gateway WebUi Interface: <ul style="list-style-type: none"> ✓ Settings > SIP > SIP Server Tables > Create SIP Server 	Host: SBA FQDN/IP address Port: example 5060 (must be the same as defined on Skype for Business topology builder) Protocol: TCP Monitor: SIP Options If using same protocol and port as BT/BTIP the same SIP Server table can be used (no need to create a new SIP Server table)
Transformation Rules	
SBA to Analog On the Ribbon SBC gateway WebUi Interface: <ul style="list-style-type: none"> ✓ Settings > Transformation > New Transformation Table > New Transformation Entry 	Calling Entry: Input Field Type: Calling Address/Number Input Field Value: depend on transformation need Output Field Type: Calling Address/Number Output Field Value: depend on transformation need Called Entry: Input Field Type: Called Address/Number Input Field Value: depend on transformation need Output Field Type: Called Address/Number Output Field Value: depend on transformation need
Analog Device to SBA On the Ribbon SBC gateway WebUi Interface: <ul style="list-style-type: none"> ✓ Settings > Transformation > New Transformation Table > New Transformation Entry 	Calling Entry: Input Field Type: Calling Address/Number Input Field Value: depend on transformation need Output Field Type: Calling Address/Number Output Field Value: depend on transformation

Menu	Value
	<p>need</p> <p>Called Entry:</p> <p>Input Field Type: Called Address/Number</p> <p>Input Field Value: must normalize received number on Skype for Business E.164 number format</p> <p>Output Field Type: Called Address/Number</p> <p>Output Field Value: depend on transformation need</p>
Call Routing Tables	
<p>From SBA</p> <p>On the Ribbon SBC gateway WebUi Interface:</p> <ul style="list-style-type: none"> ✓ Settings > Call Routing Table > Create 	<p>SBA to analog device entry:</p> <p>Description: SBA to Analog Device</p> <p>Route Priority: 1</p> <p>Number/Name Transformation Table: SBA to PSTN</p> <p>Destination Signalling Group: (CAS) Analog Device</p> <p>Media Transcoding: Enabled (If licenced)</p>
<p>From Analog Device</p> <p>On the Ribbon SBC gateway WebUi Interface:</p> <ul style="list-style-type: none"> ✓ Settings > Call Routing Table > Create 	<p>Analog Device to SBA entry:</p> <p>Description: Analog Device to SBA</p> <p>Route Priority: 1</p> <p>Number/Name Transformation Table: Analog Device to SBA</p> <p>Destination Signalling Group: (SIP) From/To SBA-Analog Device</p> <p>Media Transcoding: Enabled (If licenced)</p>
Signaling Groups	
<p>(SIP) From/To SBA – Analog Device</p> <p>On the Ribbon SBC gateway WebUi Interface:</p> <ul style="list-style-type: none"> ✓ Settings > Signaling Group > SIP Signaling Group 	<p>Description: SIP From/To SBA – Analog Device</p> <p>Call Routing Table: From SBA</p> <p>SIP Server Table: From/To SBA –Analog Device</p> <p>Signalling/Media Source IP : Ribbon E1/analog interface IP address</p> <p>Listen Ports: 5060 /TCP</p> <p>Federated IP/FQDN: SBA IP address</p>
<p>(CAS) Analog</p> <p>On the Ribbon SBC gateway WebUi Interface:</p> <ul style="list-style-type: none"> ✓ Settings > Signaling Group > SIP Signaling Group 	<p>Description: CAS Analog</p> <p>CAS Signalling Profile: CAS Analog</p> <p>Call Routing Table: Analog to SBA</p> <p>Assigned Channels: Analog Devices information</p>
Skype for Business– RS GW BT/BTIP configuration	
<p>PSTN usage</p> <p>On the Skype for Server Control Panel Interface:</p> <ul style="list-style-type: none"> ✓ Voice Routing > Voice Policy 	<p>New Ribbon SBC BT/BTIP PSTN Usage record</p> <p>Name: Ribbon Gateway BT/BTIP PSTN Usage name</p>
<p>Route (Ribbon SBC BT/BTIP)</p> <p>On the Skype for Business Server Control Panel Interface:</p> <ul style="list-style-type: none"> ✓ Voice Routing > Voice Policy 	<p>Edit PSTN Usage record</p> <p>Associated routes → New</p> <p>Name: BT/BTIP Ribbon GW route name</p> <p>Associated Trunks → Add</p>

Menu	Value
	Select corresponding Ribbon GW Trunk from drop down list
Trunk configuration On the Skype for Business Server Control Panel Interface: ✓ Voice Routing > Trunk configuration	New Name: Ribbon SBC for BT/BTIP Trunk name Encryption support level : Optional Refer support : None Enable forward call History : Checked Enable media bypass : Checked
Trunk configuration (SFB PowerShell) On the Skype for Business PowerShell Interface: ✓ Set-CsTrunkConfiguration –Identity <Site> –RTCPActiveCalls \$False ✓ Set-CsTrunkConfiguration –Identity <Site> –RTCPCallsOnHold \$False	-Site: The name of the site
Ribbon GW BT/BTIP configuration	
SIP Profile	
On the Ribbon SBC gateway WebUi Interface: ✓ Settings >SIP > SIP Profile > Default SIP Profile	Session Timer: Session Timer: Disabled Header Customization: UA Header: Ribbon SBC Calling Info Source: RFC Standard Options Tags: 100rel: Supported Update: Supported SDP Customization: Send Number of Channels: True Connection Info In Media Section: True Digit Transmission Preference: RFC 2833/Voice
Media	
On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Media > Media System Configuration	Port Range: Start Port: 16384 Number of Port pairs: 600 Echo Cancellor Type Option: Standard Echo Cancel NLP Option: Mild Send STUN Packets: Enabled Music On Hold: Music on Hold Source: File
On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Media > Media Profiles	Default G711a: Codec: G711 A-law Payload Size: 20 ms Default G711μ: Codec: G711 μ-law Payload Size: 20 ms
On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Media > Media List	Default Media List: Media Profiles List: G711a G711μ Crypto Profile ID: None

Menu	Value
	Media DSCP: 46 RTCP Mode: RTCP Dead Call Detection: Disabled Silence Suppression: Disabled
TLS Profile	
On the Ribbon SBC gateway WebUi Interface: ✓ Settings > Security > TLS Profiles	Create TLS Profile: TLS Protocol: TLS 1.2 Only Mutual Authentication: Enabled Allow Weak Cipher: Disable Handshake Inactivity Timeout: 10 The Client Cipher List is automatically updated to display only the ciphers supported for the selected TLS version Validate Server FQDN: Disabled Validate Client FQDN: Disabled
Secondary interface	
On the Ribbon SBC gateway WebUi Interface: ✓ Settings > Node Interfaces > Logical Interfaces > Ethernet 1 IP	Configure Secondary Interface: Disabled Primary address dedicated for BT/BTIP traffic
From/To SFB <-> Offnet routing BT/BTIP traffic	
SIP Server Table	
From/To MS Pool –BT/BTIP On the Ribbon SBC gateway WebUi Interface: ✓ Settings > SIP > SIP Server Tables > Create SIP Server	Host: MS Pools FQDN/IP address Port: 5067 Protocol: TLS TLS Profile: Select the TLS Profile created above Monitor: SIP Options
From/To BT/BTIP-MS Pool On the Ribbon SBC gateway WebUi Interface: ✓ Settings > SIP > SIP Server Tables > Create SIP Server	1st Entry: ACME aSBC nominal Host: ACME aSBC nominal IP address Port: 5060 Protocol: TCP Monitor: SIP Options 2nd Entry: ACME aSBC backup Host: ACME aSBC backup IP address Port: 5060 Protocol: TCP Monitor: SIP Options
Transformation Rules	
MS Pool to BT/BTIP On the Ribbon SBC gateway WebUi Interface: ✓ Settings > Transformation > New Transformation Table > New Transformation Entry	Calling Entry: Input Field Type: Calling Address/Number Input Field Value: depend on transformation need Output Field Type: Calling Address/Number Output Field Value: depend on transformation need

Menu	Value
	<p>Called Entry: Input Field Type: Called Address/Number Input Field Value: depend on transformation need Output Field Type: Called Address/Number Output Field Value: depend on transformation need</p>
<p>BT/BTIP to MS Pool On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Transformation > New Transformation Table > New Transformation Entry</p>	<p>Calling Entry: Input Field Type: Calling Address/Number Input Field Value: depend on transformation need Output Field Type: Calling Address/Number Output Field Value: depend on transformation need</p> <p>Called Entry: Input Field Type: Called Address/Number Input Field Value: must normalize received number on Skype for Business E.164 number format Output Field Type: Called Address/Number Output Field Value: depend on transformation need</p>
Call Routing Tables	
<p>From MS Pool On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Call Routing Table > Create</p>	<p>MS Pool to BT/TIP entry: Description: MS Pool to BT/BTIP Route Priority: 1 Number/Name Transformation Table: MS Pool to BT/BTIP Destination Signalling Group: (SIP) From/To BT/TIP-MS Pool Media Transcoding: Enabled (If licenced) Media List: Select the Media List created above</p>
<p>From BT/BTIP On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Call Routing Table > Create</p>	<p>BT/TIP to MS Pool entry: Description: BT/BTIP to MS Pool Route Priority: 1 Number/Name Transformation Table: BT/BTIP to MS Pool Destination Signalling Group: (SIP) From/To MS Pool-BT/BTIP Media Transcoding: Enabled (If licenced) Media List: Select the Media List created above</p>
Signaling Groups	
<p>(SIP) From/To MS Pool – BT/BTIP On the Ribbon SBC gateway WebUi Interface: ✓ Settings >Signaling Group > SIP Signaling Group</p>	<p>Description: SIP From/To MS Pool – BT/BTIP Call Routing Table: From MS Pool No. of Channels: 60 (Default) SIP Server Table: From/To MS Pool –BT/BTIP Signalling/Media Source IP :Ribbon BT/BTIP</p>

Menu	Value
	interface IP address Listen Ports: 5067 /TLS TLS Profile: Select the TLS Profile created above Federated IP/FQDN: MS Pools IP/FQDN
<p>(SIP) From/To BT/BTIP-MS Pool</p> <p>On the Ribbon SBC gateway WebUi Interface:</p> <ul style="list-style-type: none"> ✓ Settings >Signaling Group > SIP Signaling Group 	<p>Description: SIP Froom/To BT/BTIP-MS Pool</p> <p>Call Routing Table: From BT/BTIP</p> <p>No. of Channels: 60 (Default)</p> <p>SIP Server Table: From/To BT/BTIP –MS Pool</p> <p>Signalling/Media Source IP :Ribbon BT/BTIP interface IP address</p> <p>Listen Ports:5060 /TCP</p> <p>Federated IP/FQDN: ACME aSBC nominal IP address</p> <p style="text-align: right;">ACME aSBC backup IP address</p> <p>Message Manipulation: Enabled</p> <p>Outbound Message Manipulation</p> <p>Message Table List: User-Agent</p>
<ul style="list-style-type: none"> ✓ SIP > Message Manipulation > Message Rules Table 	<ul style="list-style-type: none"> ✓ Create new SIP Message Rule Table: <ul style="list-style-type: none"> - Description: User-Agent ✓ Create new Header Rule: <ul style="list-style-type: none"> - Description: User-Agent - Header Action: Modify - Header Name: User-Agent - Header Value: Modify - Add/Edit: <ul style="list-style-type: none"> ○ Type of value: Token ○ Value: user-agent <p>Suffix: \ Skype for Business</p>

5.3 Configuration checklist in case of AudioCodes Mediant 800/1000 E-SBC:

Skype for Business Configuration in case of RS-GW (Topology Builder)	
<p>On the Topology builder interface:</p> <ul style="list-style-type: none"> ✓ Branch Site > SfB Server > Mediation Pools, right click and Edit properties 	<p>Listening ports TLS: 5067 – 5067</p> <p>Note:</p> <p>When both VISIT and B2G offer:</p> <p>Listening ports TLS must be: 5069</p>
<p>On the Topology builder interface:</p> <ul style="list-style-type: none"> ✓ Branch Site > SfB Server > Shared components > PSTN gateways, right click and New IP/PSTN 	<p>FQDN of dedicated gateway for BT/BTIP traffic</p> <p>Specify BT trunk name</p>

Menu	Value
Gateway dedicated for BT/BTIP Then click Next to define root trunk	Listening port for IP/PSTN gateway: 5067 SIP Transport protocol: TLS Associated Mediation Server: Mediation Pool FQDN Associated Mediation Server port: 5067 Note: When both VISIT and B2G offer: Listening ports TLS must be: 5069
Skype for Business Configuration in case of RS-SBA (Topology Builder)	
On the Topology builder interface: ✓ Branch Site > SfB Server > Mediation Pools , right click and Edit properties	Listening ports TCP: 5060 – 5060
On the Topology builder interface: ✓ Branch Site > SfB Server > Shared components > PSTN gateways, right click and New IP/PSTN Gateway dedicated for BT/BTIP Then click Next to define root trunk	FQDN of dedicated gateway for BT/BTIP traffic Specify BT trunk name Listening port for IP/PSTN gateway: 5060 SIP Transport protocol: TCP Associated Mediation Server: SBA FQDN Associated Mediation Server port: 5060
On the Topology builder interface: ✓ Branch Site > SfB Server > Shared components > PSTN gateways, right click and New IP/PSTN Gateway dedicated for E1/analog PSTN & Analog Trunk: ✓ Branch Site > SfB Server > Shared Components > Trunks, right click and New Trunk	FQDN of dedicated gateway for E1/Analog traffic Specify PSTN&Analog trunk name Listening port for IP/PSTN gateway: 5060 SIP Transport protocol: TCP Associated Mediation Server: SBA FQDN Associated Mediation Server port: 5060
Skype for Business Configuration in case of HQ with GW aboard (Topology Builder)	
On the Topology builder interface: ✓ Branch Site > SfB Server > Mediation Pools , right click and Edit properties	Listening ports TCP: 5060 – 5060
On the Topology builder interface: ✓ Branch Site > SfB Server > Shared components > PSTN gateways, right click and New IP/PSTN Gateway dedicated for BT/BTIP Then click Next to define root trunk	FQDN of dedicated gateway for BT/BTIP traffic Specify BT trunk name Listening port for IP/PSTN gateway: 5060 SIP Transport protocol: TCP Associated Mediation Server: MS Pool FQDN Associated Mediation Server port: 5060
AudioCodes Mediant 800/1000 E-SBC configuration	
TLS Context	
On the AudioCodes Mediant WebUi Interface: ✓ Setup > IP Network > Security > TLS Context	Links Tab TLS Context Certificate TLS Context Trusted Certificates
Media	
Voice Settings	
On the AudioCodes Mediant WebUi Interface: ✓ Setup > Signaling & Media > Media > Voice Settings	Silence Suppression: Disable DTMF Transport Type: RFC 2833 Relay DTMF

Menu	Value
Media Security	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Media > Media Security	Media security: Enable
RTP / RTCP Settings	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Media > RTP / RTCP Settings	RTP Base UDP Port: 16400
Coders and Profiles	
Coders	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Coders and Profiles > Coders	Coders Table Coders Name : G711A-law Packetization time : 20 Rate : 64 Payload Type : 8 Silence Suppression : Disabled Coders Name : G711U-law Packetization time : 20 Rate : 64 Payload Type : 0 Silence Suppression : Disabled
Coders Group Settings	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Coders and Profiles > Coders Group Settings	Coders Group ID Coders Name : G711A-law Packetization time : 20 Rate : 64 Payload Type : 8 Silence Suppression : Disabled Coders Name : G711U-law Packetization time : 20 Rate : 64 Payload Type : 0 Silence Suppression : Disabled
IP Profile Settings	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Coders and Profiles > IP Profiles	SBA or SfB IP Profile ID (GW tab) Early Media : Enable Hold : Enable (SBC Media tab) Extension Coders : Coders Group Allowed Audio Coders : Coders Group Allowed Coders Mode : Restriction and Preference BTIP IP Profile ID (GW tab) Early Media : Enable

Menu	Value
	<p>Hold : Enable</p> <p>(SBC Media tab)</p> <p>Extension Coders : Coders Group</p> <p>Allowed Audio Coders : Coders Group</p> <p>Allowed Coders Mode : Restriction and Preference</p>
VoIP Network	
Media Realm Table	
<p>On the AudioCodes Mediant WebUi Interface:</p> <p>Setup > Signaling & Media > Core Entities > Media Realms</p>	<p>Skype Media Realm (SBA or SfB)</p> <p>Name : MRm for Skype</p> <p>IPv4 Interface Name : Mediant IPv4 Interface</p> <p>Port Range Start : 16900</p> <p>Number of Media Session Legs : 50</p> <p>Port Range End : Filled automatically</p> <p>Default Media Realm : Yes</p> <p>BTIP Media Realm</p> <p>Name : MRm for BTIP</p> <p>IPv4 Interface Name : Mediant IPv4 Interface</p> <p>Port Range Start : 16400</p> <p>Number of Media Session Legs : 50</p> <p>Port Range End : Filled automatically</p> <p>Default Media Realm : No</p> <p>This range is used to accept incoming traffic from SBC in case of BTIP incoming calls, the defined range respects the OBS infra recommendations</p>
SRD Table	
<p>On the AudioCodes Mediant WebUi Interface:</p> <p>Setup > Signaling & Media > Core Entities > SRDs</p>	<p>Name : DefaultSRD</p>
SIP Interface Table	
<p>On the AudioCodes Mediant WebUi Interface:</p> <p>Setup > Signaling & Media > Core Entities > SIP Interfaces</p>	<p>One SIP Interface Table for RS SBA</p> <p>Name : SIPInterface_BTIP&SBA</p> <p>SRD : DefaultSRD</p> <p>Network Interface : Mediant IPv4 Interface</p> <p>Application Type : SBC</p> <p>TCP Port : 5060</p> <p>One SIP Interface Table for HQ with GW aboard</p> <p>Name : SIPInterface_BTIP&SBA</p> <p>SRD : DefaultSRD</p> <p>Network Interface : Mediant IPv4 Interface</p> <p>Application Type : SBC</p> <p>TCP Port : 5060</p> <p>Two SIPs Interfaces Tables for RS GW</p> <p>Name : SIPInterface_SfB</p> <p>SRD : DefaultSRD</p>

Menu	Value
	<p>Network Interface : Mediant IPv4 Interface Application Type : SBC TLS Port : 5067 TLS Context Name : TLS Context</p> <p>Name : SIPInterface_BTIP SRD : DefaultSRD Network Interface : Mediant IPv4 Interface Application Type : SBC TCP Port : 5060</p>
Proxy Set Table	
<p>On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > Proxy Sets</p>	<p>Proxy Set Table for Skype traffic (SBA or SfB) Name : ProxySet for Skype Traffic SRD : DefaultSRD Network Interface : Mediant IPv4 Interface SBC IPv4 SIP Interface : SIP Interface for Skype Traffic Proxy Load Balancing Method : Round Robin Proxy Keep-Alive Time : 60 Proxy Keep-Alive : Using OPTIONS</p> <p>(Proxy Address Table) 1 Entries : FQDN or @IP of SBA:5060 TCP (for SBA) X Entries : FQDN or @IPs of Mediation Pool:5060 TCP (for HQ with GW aboard) X Entries : FQDN or @IPs of Mediation Pool:5067 TLS (for SfB)</p> <p>Proxy Set Table for BTIP Traffic Name : ProxySet for BTIP Traffic SRD : DefaultSRD Network Interface : Mediant IPv4 Interface SBC IPv4 SIP Interface : SIP Interface for BTIP Traffic Proxy Keep-Alive Time : 600 Proxy Keep-Alive : Using OPTIONS Redundancy Mode : Homing Proxy Hot swap : Enable</p> <p>(Proxy Address Table) 2 Entries : FQDN or @IP of aSBC ACME:5060 TCP</p>
IP Group Table	
<p>On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > IP Groups</p>	<p>IP Group Table for Skype traffic (SBA or SfB) Name : IPGroup for Skype Traffic Type : Server Proxy Set : Proxy Set for Skype Traffic IP Profile : IP Profile for Skype Traffic Media Realm : Media Realm for Skype traffic</p> <p>IP Group Table for BTIP traffic Name : IPGroup for BTIP Traffic</p>

Menu	Value
Setup > Signaling & Media > Message Manipulation > Message Manipulations and New+	Type : Server Proxy Set : Proxy Set for BTIP Traffic IP Profile : IP Profile for BTIP Traffic Media Realm : Media Realm for BTIP traffic Outbound Message Manipulation : Manipulation Set ID associated to User-Agent Message Manipulation User-Agent Message Manipulation Name: User-Agent Manipulation Set ID: @ID Message Type: Any Action subject: Header.User-Agent Action Type: Modify Action Value : Header.User-Agent.Content + ' \ Skype for Business'
SIP Definitions	
General Parameters	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > SIP Definitions > SIP Definitions General Settings	PRACK Mode : Supported Channel Select Mode : Cyclic Ascending Enable Early Media : Enable
SBC	
Allowed Audio Coders Group	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Coders and Profiles > Allowed Audio Coders Groups	Allowed Audio Coders Group ID Coder Name 1 : G711A-Law Coder Name 2 : G711U-Law
IP-to-IP Routing Table	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > SBC > IP-to-IP Routing	SIP Options rule Name : SIP Options Alternative Route Options: Route Row Source IP Group : Any Request Type : OPTIONS Destination Type : Dest Address Destination IP Group : None Destination SIP Interface : None Destination Address : internal Skype to BTIP rule Name : Skype to BTIP Alternative Route Options: Route Row Source IP Group : Skype IP Group Request Type : All Destination Type : IP Group Destination IP Group : BTIP IP Group Destination SIP Interface : BTIP SIP Interface BTIP to Skype rule

Menu	Value
	<p>Name : BTIP to Skype Alternative Route Options: Route Row Source IP Group : BTIP IP Group Request Type : All Destination Type : IP Group Destination IP Group : BTIP IP Group Destination SIP Interface : Skype SIP Interface</p>
Gateway for PSTN calls (Annex 1) Only for RS SBA and RS GW	
Trunk Group	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Gateway > Trunks & Groups > Trunk Groups	<p>Configure Group Index Module : PRI From/To Trunk : 1 Channels : 1-31 Phone Number : Phone number used for the Trunk Trunk Group ID : Trunk Group ID associated</p>
Trunk Group Settings	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Gateway > Trunks & Groups > Trunk Group Settings	<p>Add Trunk Group Settings Name : E1 PSTN Trunk Group ID : Trunk Group ID associated Channel Selected Mode : Cyclic Descending Registration Mode : Don't Register</p>
Trunk Settings	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Gateway > Trunks & Groups > Trunks	<p>Protocol Type : E1 EURO ISDN Line Code : HDB3 Framing Method : Extend super Frame</p>
VoIP Network Configuration	
Media Realm Table	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > Media Realms	<p>Can be the same as Skype Media Realm Name : MRm for Skype IPv4 Interface Name : Mediant IPv4 Interface Port Range Start : 16900 Number of Media Session Legs : 50 Port Range End : Filled automatically Default Media Realm : Yes</p>
SRD Table	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > SRDs	<p>Same as Skype SRD Table Name : DefaultSRD</p>
SIP Interface Table	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > SIP Interfaces	<p>SIP Interface Table Name : SIPInterface_PSTN SRD : DefaultSRD Network Interface : Mediant IPv4 Interface for E1/Analog Application Type : GW TCP Port : 5060</p>

Menu	Value
Proxy Set Table	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > Proxy Sets	Proxy Set Table for PSTN traffic Name : ProxySet for PSTN Traffic SRD : DefaultSRD Network Interface : Mediant IPv4 Interface for E1/Analog SBC IPv4 SIP Interface : SIP Interface for PSTN Traffic Proxy Load Balancing Method : Round Robin Proxy Keep-Alive Time : 60 Proxy Keep-Alive : Using OPTIONS (Proxy Address Table) 1 Entry : FQDN or @IP of SBA:5060 TCP
IP Group Table	
On the AudioCodes Mediant WebUi Interface: (Advanced mode) Configuration > VoIP > VoIP Network > IP Group Table	IP Group Table for Skype traffic Name : IP Profile for PSTN Traffic Type : Server Proxy Set : Proxy Set for PSTN Traffic IP Profile : IP Profile for Skype Traffic Media Realm : Media Realm for Skype Traffic
Routing	
General Parameters	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Gateway > Routing > Routing Settings	Enable Alt Routing Tel to IP : Enable
IP To Trunk Group Routing	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Gateway > Routing > IP To Tel	Skype To PSTN rule Name : Skype To PSTN Source IP Group : Skype IP Group Source SIP Interface : PSTN SIP Interface Trunk Group ID : PSTN Trunk Group ID Destination Type : Trunk Group
TEL To IP	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Gateway > Routing > TEL To IP	PSTN To Skype rule Name : PSTN To Skype Source Trunk Group ID : PSTN Trunk Group ID Destination IP Group : Skype IP Group SIP Interface : PSTN SIP Interface IP Profile : Skype IP Profile
Gateway for Analog calls (Annex 2)	
Trunk Group	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Gateway > Trunk Group	Configure Group Index Module : FXS Channels : 1 Phone Number : Analog number in e164 format Trunk Group ID : Trunk Group ID for Analog
Trunk Group Settings	
On the AudioCodes Mediant WebUi Interface:	Add Trunk Group Settings

Menu	Value
Setup > Signaling & Media > Gateway > Trunk Group Settings	Name : Analog Trunk Group ID : Trunk Group ID for Analog Channel Selected Mode : By Dest Phone Number Registration Mode : Don't Register
Analog Settings	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Gateway > Analog Gateway > Analog Settings	Analog Metering Type : 12 Khz Sinusoidal bursts FXS Coefficient Type : Europe
VoIP Network Configuration	
Media Realm Table	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > Media Realms	Can be the same as Skype Media Realm Name : MRm for Skype IPv4 Interface Name : Mediant IPv4 Interface Port Range Start : 16900 Number of Media Session Legs : 50 Port Range End : Filled automatically Default Media Realm : Yes
SRD Table	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > SRDs	Same as Skype SRD Table Name : DefaultSRD
SIP Interface Table	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > SIP Interfaces	SIP Interface Table Name : SIPInterface_Analog SRD : DefaultSRD Network Interface : Mediant IPv4 Interface for E1/Analog Application Type : GW TCP Port : 5060
Proxy Set Table	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > Proxy Sets	Proxy Set Table for Analog traffic Name : ProxySet for Analog Traffic SRD : DefaultSRD Network Interface : Mediant IPv4 Interface for E1/Analog SBC IPv4 SIP Interface : SIP Interface for Analog Traffic Proxy Load Balancing Method : Round Robin Proxy Keep-Alive Time : 60 Proxy Keep-Alive : Using OPTIONS (Proxy Address Table) 1 Entries : FQDN or @IP of SBA:5060 TCP
IP Group Table	
On the AudioCodes Mediant WebUi Interface: Setup > Signaling & Media > Core Entities > IP Groups	IP Group Table for Skype traffic Name : IP Profile for Analog Traffic Type : Server Proxy Set : Proxy Set for Analog Traffic IP Profile : IP Profile for Skype Traffic Media Realm : Media Realm for Skype Traffic

Menu	Value
Manipulations	
IP To Trunk Group Routing	
On the AudioCodes Mediant WebUi Interface: (Advanced mode) Setup > Signaling & Media > Gateway > Manipulations > IP To Trunk Group Routing	Skype To Analog manipulation rule Name : Skype To Analog Source IP Group : Skype IP Group Destination Prefix : Analog phone number
TEL To IP	
On the AudioCodes Mediant WebUi Interface: (Advanced mode) Setup > Signaling & Media > Gateway > Manipulations > TEL To IP	Analog To Any manipulation rule Name : Analog To Any Source Trunk Group ID : Analog Trunk Group ID Destination IP Group : Any Prefix to Add : +
Routing	
IP To Trunk Group Routing	
On the AudioCodes Mediant WebUi Interface: (Advanced mode) Setup > Signaling & Media > Gateway > Routing > IP To Trunk Group Routing	Skype To Analog routing rule Name : Skype To Analog Source IP Group : Skype IP Group Source SIP Interface : Analog SIP Interface Destination Phone Prefix : Analog number in e164 Destination Trunk Group : Trunk Group Trunk Group ID : 2
TEL To IP	
On the AudioCodes Mediant WebUi Interface: (Advanced mode) Setup > Signaling & Media > Gateway > Routing > TEL To IP	Analog To Skype routing rule Name : Analog To Skype Source Trunk Group ID : Analog Trunk Group ID Destination IP Group : Skype IP Group SIP Interface : Analog SIP Interface IP Profile : Skype IP Profile

CAC Configuration Checklist

CAC Configuration	
Enable CAC	
SFB PowerShell On the Skype for Business PowerShell Interface: ✓ Set-CsNetworkConfiguration -EnableBandwidthPolicyCheck	SFB PowerShell EnableBandwidthPolicyCheck parameter has to be set to 1
SFB Control Panel On the Skype for Business control panel interface: ✓ Network Configuration > Global	SFB Control Panel Enable call admission control parameter has to be checked
Media bypass configuration (In case of RS SBA and/or RS Default)	

Menu	Value
SFB PowerShell On the Skype for Business PowerShell Interface: <ul style="list-style-type: none"> ✓ \$a= New-CsNetworkMediaBypassConfiguration -alwaysByPass \$false -Enabled \$false ✓ Set-CsNetworkConfiguration –MediaBypassSettings \$a SFB Control Panel On the Skype for Business control panel interface: Network Configuration >Global	SFB PowerShell <ul style="list-style-type: none"> ✓ AlwaysByPass parameter has to be set to false ✓ Enable parameter has to be set to false SFB Control Panel <ul style="list-style-type: none"> ✓ Enable media bypass parameter must not be checked
Media bypass configuration (In case of RS GW or a mix of RS GW, RS SBA and RS Default)	
SFB PowerShell On the Skype for Business PowerShell Interface: <ul style="list-style-type: none"> ✓ \$a= New-CsNetworkMediaBypassConfiguration -alwaysByPass \$ false -Enabled \$true ✓ Set-CsNetworkConfiguration –MediaBypassSettings \$a SFB Control Panel On the Skype for Business control panel interface: <ul style="list-style-type: none"> ✓ Network Configuration >Global 	SFB PowerShell <ul style="list-style-type: none"> ✓ AlwaysByPass parameter has to be set to false ✓ Enable parameter has to be set to true SFB Control Panel <ul style="list-style-type: none"> ✓ Enable media bypass parameter has to be checked ✓ Choose “Use sites and region configuration”
Media bypass Trunk Configuration (Only in case of RS-GW)	
SFB Control Panel On the Skype for Business Control panel interface <ul style="list-style-type: none"> ✓ Voice Routing > Trunk Configuration And then select the RS-GW Trunk to edit Trunk configuration	SFB Control Panel <ul style="list-style-type: none"> ✓ Enable media bypass parameter has to be checked
Trunk configuration (SFB PowerShell) On the Skype for Business PowerShell Interface: <ul style="list-style-type: none"> ✓ Set-CsTrunkConfiguration –Identity <Site> –RTCPActiveCalls \$False ✓ Set-CsTrunkConfiguration –Identity <Site> –RTCPCallsOnHold \$False 	-Site: The name of the site
Network Region	
SFB PowerShell On the Skype for Business PowerShell Interface: <ul style="list-style-type: none"> ✓ New-CsNetworkRegion –Identity <XdsIdentity> -CentralSite <Central_Site> –AudioAlternatePath \$False -Description “All Locations” SFB Control Panel On the Skype for Business control panel interface: <ul style="list-style-type: none"> ✓ Network Configuration >Global 	SFB PowerShell -Identity: The name of the network region -Central site: The name of the central site as defined on SFB topology builder SFB Control Panel Identity: The name of the network region Central site: The name of the central site as defined on SFB topology builder Audio alternate path: Recommended to disable
Bandwidth Policy profiles	

Menu	Value
CAC Onnet – Network sites and Network Region CAC	
SFB PowerShell On the Skype for Business PowerShell Interface: ✓ New-CsNetworkBandwidthPolicyProfile -Identity <BWname> – Description “Descr Name” -AudioBWLIMIT <AudiototalBW> -AudioBWSessionLimit <AudiosessionBW> -VideoBWLIMIT <VideototalBW> -VideoBWSessionLimit <VideoSessionBW> SFB Control Panel On the Skype for Business control panel interface: ✓ Network Configuration >Bandwidth Policy	SFB PowerShell -Identity: The name of the bandwidth region (eg: CAC_basse) -AudioBWLIMIT: The total bandwidth allowed for calls on network sites associated to this BW profile policy -AudioBWSession Limit: The session bandwidth allowed for one call on network site associated to this BW profile policy → has to be set to 100 -VideoBWLIMIT: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) -VideoBWSessionLimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) SFB Control Panel Identity: The name of the bandwidth region (eg: CAC_basse) AudioBWLIMIT: The total bandwidth allowed for calls on network sites associated to this BW profile policy AudioBWSession Limit: The session bandwidth allowed for one call on network site associated to this BW profile policy → has to be set to 100 VideoBWLIMIT: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) VideoBWSessionLimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) on SFB topology builder
CAC SIP Trunk – Inter site CAC	
SFB PowerShell On the Skype for Business PowerShell Interface: ✓ New-CsNetworkBandwidthPolicyProfile -Identity <BWname> – Description “Descr Name” -AudioBWLIMIT <AudiototalBW> -AudioBWSessionLimit <AudiosessionBW> -VideoBWLIMIT <VideototalBW> -VideoBWSessionLimit <VideoSessionBW> SFB Control Panel On the Skype for Business control panel interface: ✓ Network Configuration >Bandwidth Policy	SFB PowerShell -Identity: The name of the bandwidth region (eg: CAC_SIPTrunk) -AudioBWLIMIT: The total bandwidth allowed for calls on network sites associated to this BW profile policy -AudioBWSession Limit: The session bandwidth allowed for one call on network site associated to this BW profile policy → has to be set to 97 -VideoBWLIMIT: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) -VideoBWSessionLimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) SFB Control Panel Identity: The name of the bandwidth region

Menu	Value
	(eg: CAC_SIPTrunk) AudioBWLlimit: The total bandwidth allowed for BT/BTIP calls on network sites associated to this BW profile policy AudioBWSession Limit: The session bandwidth allowed for one BT/BTIP call on network site associated to this BW profile policy → has to be set to 97 VideoBWLlimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) VideoBWSessionLimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) on SFB topology builder
CAC Zero – BT/BTIP network site to Network region CAC	
SFB PowerShell On the Skype for Business PowerShell Interface: ✓ New-CsNetworkBandwidthPolicyProfile -Identity <BWname> – Description “Descr Name” -AudioBWLlimit <AudiototalBW> -AudioBWSessionLimit <AudiosessionBW> -VideoBWLlimit <VideototalBW> -VideoBWSessionLimit <VideoSessionBW>	SFB PowerShell -Identity: The name of the bandwidth region (eg: CAC_Zero) -AudioBWLlimit: The total bandwidth allowed for calls on network sites associated to this BW profile policy → parameter has to be set to 0 -AudioBWSession Limit: The session bandwidth allowed for one call on network site associated to this BW profile policy → has to be set to 40 -VideoBWLlimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) -VideoBWSessionLimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation)
SFB Control Panel On the Skype for Business control panel interface: ✓ Network Configuration >Bandwidth Policy	SFB Control Panel Identity: The name of the bandwidth region (eg: CAC_Zero) AudioBWLlimit: The total bandwidth allowed for BT/BTIP calls on network sites associated to this BW profile policy → parameter has to be set to 0 AudioBWSession Limit: The session bandwidth allowed for one BT/BTIP call on network site associated to this BW profile policy → has to be set to 40 VideoBWLlimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) VideoBWSessionLimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation) on SFB topology builder
CAC Edge – Edge network site to Network region CAC	
SFB PowerShell	SFB PowerShell -Identity: The name of the bandwidth region

Menu	Value
<p>On the Skype for Business PowerShell Interface:</p> <ul style="list-style-type: none"> ✓ New-CsNetworkBandwidthPolicyProfile -Identity <BWname> -Description "Descr Name" -AudioBWLimit <AudiototalBW> -AudioBWSessionLimit <AudiosessionBW> -VideoBWLimit <VideototalBW> -VideoBWSessionLimit <VideoSessionBW> <p>SFB Control Panel</p> <p>On the Skype for Business control panel interface:</p> <ul style="list-style-type: none"> ✓ Network Configuration > Bandwidth Policy 	<p>(eg: CAC_Edge)</p> <p>-AudioBWLimit: The total bandwidth allowed for calls on network sites associated to this BW profile policy → parameter has to be set to 9999999999</p> <p>-AudioBWSession Limit: The session bandwidth allowed for one call on network site associated to this BW profile policy → has to be set to 100</p> <p>-VideoBWLimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation)</p> <p>-VideoBWSessionLimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation)</p> <p>SFB Control Panel</p> <p>Identity: The name of the bandwidth region (eg: CAC_Edge)</p> <p>AudioBWLimit: The total bandwidth allowed for BT/BTIP calls on network sites associated to this BW profile policy → parameter has to be set to 9999999999</p> <p>AudioBWSession Limit: The session bandwidth allowed for one BT/BTIP call on network site associated to this BW profile policy → has to be set to 100</p> <p>VideoBWLimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation)</p> <p>VideoBWSessionLimit: Not applied with BT/BTIP (used for onnet calls refer to B2G documentation)</p> <p>on SFB topology builder</p>
Network Sites	
<p>SFB PowerShell</p> <p>On the Skype for Business PowerShell Interface:</p> <ul style="list-style-type: none"> ✓ New-CsNetworkSite -NetworkSiteID <NSname> -Description "Descr Name" -NetworkRegionID <NRname> -BWPolicyProfileID <BWPname> <p>SFB Control Panel</p> <p>On the Skype for Business control panel interface:</p> <ul style="list-style-type: none"> ✓ Network Configuration > Site 	<p>SFB PowerShell</p> <p>-NetworkSiteID: The name of the network site</p> <p>-Description: Optional</p> <p>-NetworkRegionID: Select the network region to associate to created network site</p> <p>-BWPolicyProfileID: Select the bandwidth profile policy to associate to created network site</p> <p>SFB Control Panel</p> <p>-NetworkSiteID: The name of the network site</p> <p>-Description: Optional</p> <p>-NetworkRegionID: Select the network region to associate to created network site</p> <p>-BWPolicyProfileID: Select the bandwidth profile policy to associate to created network site</p>

Menu	Value
Inter Site Policy	
SFB PowerShell On the Skype for Business PowerShell Interface: ✓ New-CsNetworkInterSitePolicy-Identity <NetworkInterSitename>-BWPolicyProfileID <SIPTRUNK_BWPname> -NetworkSiteID1 <NS1name>- NetworkSiteID2 <BTIP_NS_name>	SFB PowerShell -Identity: The name of the network inter site policy -BWPolicyProfileID: Select the bandwidth profile policy to associate to created network inter site policy -NetworkSiteID1: parameter has to correspond to the network site 1 (SFB component) to associate to BTIP using inter site policy -NetworkSiteID2: parameter has to correspond to the BT/BTIP network site name WARNING: NO Inter site for Remote site Gateway
Subnets	
SFB PowerShell On the Skype for Business PowerShell Interface: ✓ New-CsNetworkSubnet-SubnetID <firstsubnetIPaddress>- MaskBits <maskwo/> -NetworkSiteID <associated NS_name> SFB Control Panel On the Skype for Business control panel interface: Network Configuration > Subnet	SFB PowerShell -SubnetID: The first IP address of the corresponding subnet -MaskBits: The subnet mask to associate to subnet to create without / (eg:32) -NetworkSiteID: Select the network site name from the drop down list to associate to this subnet (eg: BTIP) SFB Control Panel -SubnetID: The first IP address of the corresponding subnet -MaskBits: The subnet mask to associate to subnet to create without / (eg:32) -NetworkSiteID: Select the network site name from the drop down list to associate to this subnet (eg: BTIP)
Configuration requirements (warnings)	
Configuring Clients ports range for LPE and SoftPhone	
SFB PowerShell On the Skype for Business PowerShell Interface Set-CsConferencingConfiguration -ClientMediaPortRangeEnabled \$true -ClientAudioPort 50060 -ClientAudioPortRange 48	SFB PowerShell -ClientMediaPortRangeEnable : must be enabled in order to use the specific range -ClientAudioPort : corresponds to the first port used for audio -ClientAudioPortRange : corresponds to the audio range
Configuring Clients ports range for VVX	

Menu	Value
<ul style="list-style-type: none"> ✓ Using VVX Web UI : - Navigate through the VVX Web Interface: <a href="http://<VVX_IP_Address>">http:<VVX_IP_Address> - Go to Settings tab > Network menu > RTP - Configure the Port Range Start to: 50060 	VVX WebUI
<ul style="list-style-type: none"> ✓ Using VVX configuration file (.cfg) - Configure the following line in the VVX configuration file : tcpIpApp.port.rtp.mediaPortRangeStart="50060" - Import the new configuration file to the VVX using the WebUI or through the IIS server 	VVX WebUI or IIS Server
Others Devices	
<ul style="list-style-type: none"> ✓ Check that the audio range port respect the OBS recommendations <p>The default audio range is: 50060-50107.</p>	

6 AudioCodes FAX configuration checklist

6.1 FXS fax on Mediant configuration

6.1.1 Telephony profile

The FXS ports with fax devices connected requires dedicated configuration for fax. To create TelProfile go to **SETUP > SIGNALING & MEDIA > CODERS & PROFILES > Tel Profiles**.

Create new profile by pressing  and set:

Parameter	Value	Description
Name	TelProfile_FXS FAX	Profile name
Fax Signaling Method	T.38 Relay	Select T.38 protocol for fax transmission

6.1.2 FXS port configuration update

Go to **SETUP > SIGNALING & MEDIA > GATEWAY > Trunks & Groups > Trunk Groups**

Update TEL PROFILE NAME on chosen trunk group to **TelProfile_FXS FAX**

6.1.3 Update IP Profile

Go to **SETUP > SIGNALING & MEDIA > CODERS & PROFILES > IP Profiles**.

Select profile defined for Business Talk IP Group and update parameters:

Parameter	Value	Description
MEDIA SECURITY		
SBC Media Security Mode	RTP	Disable secured RTP to avoid TLS in SDP
Gateway Media Security Mode	Disable	Disable secured RTP to avoid TLS in SDP
GATEWAY FAX AND MODEM		
Fax Signaling Method	T.38 Relay	Use T38 for fax transmission

6.1.4 General fax parameters

Go to **SETUP > SIGNALING & MEDIA > MEDIA > Fax/Modem/CID Settings** and update:

Parameter	Value	Description
Fax Transport Mode	T.38 Relay	Use T38 for fax transmission
Fax Relay Redundancy Depth	1	Set pages transmission redundancy
Fax Relay Enhanced Redundancy Depth	4	Set fax negotiation redundancy

6.1.5 Routing

The routing of fax calls must be reconfigured to bypass SBA. Go to **SETUP > SIGNALING & MEDIA > GATEWAY > Routing > Tel->IP Routing**. Select line assigned to chosen FXS or create new one:

Parameter	Value	Description
Source Trunk Group IP	<i><trunkID></i>	Trunk ID for selected FXS port
Destination IP Group	<i><BT IP Group></i>	IP Group for Business Talk aSBC
SIP Interface	<i><SIP Interface></i>	SIP Interface for Business Talk aSBC access

Go to **SETUP > SIGNALING & MEDIA > GATEWAY > Routing > IP->Tel Routing**. Create new entry:

Parameter	Value	Description
Source SIP Interface	<i><SIP Interface></i>	SIP Interface for Business Talk aSBC access
Destination Phone Pattern	<i><FAX DID></i>	Set FAX DID accessed by BT
Destination Type	Trunk Group	
Trunk Group ID	<i><Trunk Group IP></i>	Trunk ID for selected FXS port
Source IP Group	<i><BT IP Group></i>	IP Group for Business Talk aSBC

Go to **SETUP > SIGNALING & MEDIA > SBC > Routing > IP-to-IP Routing**. Create new entry:

Parameter	Value	Description
Source IP Group	<i><BT IP Group></i>	IP Group for Business Talk aSBC
Destination Username Pattern	<i><FAX DID></i>	Set FAX DID accessed by BT
Destination Type	Gateway	

When created please move new entry before default Business Talk route.

6.1.6 V34-fax-transport-type

The next, V34FaxTransportType parameter can be set only using CLI/configuration file and is not visible in web application. To set this parameter go to dedicated configuration page: <https://<MediantIP>/AdminPage> (note: subpage address is case sensitive).

Go to "ini Parameters" subsite using left sided menu.

Parameter name: **V34FAXTRANSPORTTYPE**

Enter value: **1**

Click "Apply New Value".

If parameter is set correctly you should see output:

Parameter Name: V34FAXTRANSPORTTYPE
Parameter New Value: 1
Parameter Description:Determines the V.34 fax transport method.

6.1.7 Analog device on Skype

There is no need to define analog device on Skype since signalization goes directly between Mediant and Business Talk.

6.2 FXS fax on MediaPack cascaded behind Mediant

The fax integration on MediaPack with Business Talk through Mediant is based on assumption that fax calls are not sent to SBA. In such scenario Mediant gateway only mediates in communication.

6.2.1 MediaPack configuration

The MediaPack gateway must be first integrated directly with Mediant. The MediaPack endpoints are registered to Mediant using SIP REGISTER

6.2.1.1 Telephony Profile

The telephony profile assigned to FXS port must be updated to enable T.38 protocol. Go to **VoIP -> Coders and Profiles -> Tel Profile Settings**. Select appropriate profile (or create new one) and update **Fax Signaling Method** to **T.38 Relay**:

Note: Assigned Tel Profile can be checked under **VoIP -> GW and IP to IP -> Hunt Group -> Endpoint Phone Number**

6.2.1.2 Configure fax transmission parameters

Go to **VoIP -> Media -> Fax/Modem/CID Settings** and set following parameters:

Parameter	Value	Description
Fax Transport Mode	T.38 Relay	Enable T.38
V.34 Modem Transport Type	Disable	Disable V.34 signals (block SG3 fax)
Fax Relay Redundancy Depth	1	Redundancy of transmitting pages
Fax Relay Enhanced Redundancy Depth	4	Redundancy of fax signalization

6.2.2 Mediant configuration

Configuration starts from integration with MediaPack.

6.2.2.1 IP to IP Routing

Click **New** to create routing for outgoing fax calls from MediaPack to BT/BTIP

Parameter	Value	Description
General > Name	MediaPack_AD_to_BT	
Match > Source IP Group	IPG_MediaPack_AD	
Match > Request Type	All	
Action > Destination Type	IP Group	
Action > Destination IP Group	<BT IP Group>	IP Group for Business Talk aSBC
Action > Destination SIP Interface	<SIP Interface>	SIP Interface for Business Talk aSBC access

Click **New** to create routing for incoming fax calls from BT/BTIP to MediaPack

Parameter	Value	Description
General > Name	BT_to_MediaPack_AD	
Match > Source IP Group	<BT IP Group>	
Match > Request Type	All	
Match > Destination Username	<Fax phone number>	
Action > Destination Type	All Users	

Note: place these rules before default entry forwarding calls to Skype

Also, calls must be routed directly:

- From IP Group defined for calls from MediaPack towards Business Talk
- From IP Group defined for calls from Business Talk towards "All Users" destination (if MediaPack is configured to register FXSW ports on Mediant)

7 Skype for Business Online – AudioCodes Cloud Connector Edition configuration checklist

7.1 Generic configuration

Menu	Value
TCP Mediation Server	
The TCP Mediation Server must be 5068: On the PowerShell interface execute the following command: Set-CSMediationServer -Identity <MediationServer:MS-FQDN> -SipClientTcpPort <5068>	<u>Identity</u> : must match corresponding mediation server FQDN <u>SipClientTcpPort</u> : must be set to 5068
PSTN Gateway	
During Cloud Connector Edition Trunk must be created for SBC	<u>SIP Transport protocol</u> : TCP <u>Mediation Server port</u> : 5068
O365 Cloud Connector Edition	
Register Check Open an online session on the PowerShell, then execute: Get-CsTenantFederationConfiguration	<u>SharedSipAddressSpace</u> : must be set to \$true
Open an online session on the PowerShell, then execute: Get-CsTenantHybridConfiguration	<u>UseOnPremiseDialPlan</u> : must be set to \$false
CCE admin account association Open an online session on the PowerShell, then execute: Set-CsHybridMediationServer -Id <UserName> -FQDN <MSFQDN> -AccessProxyExternalFqdn <EdgeExterationFQDN>	<u>ID</u> : must be filled with CCE admin account SIP address <u>FQDN</u> : must be filled with the associated Mediation Server FQDN <u>AccessProxyExternalFqdn</u> : must be filled with the Edge Server External access FQDN
User Management	
User creation in O365 Active Directory Connect to O365 tenant and create a new user.	<u>DNS</u> : must be the customer DNS 'Not the xxx.onmicrosoft.com default domain' <u>User country</u> : must be filled 'important for dial plan usage' <u>Assign appropriate License</u> : Plan E3 with CloudPBX add-on option Or Plan E5 'CloudPBX included by default'
Policies assignment and phone number attribution to User Open an online session on the PowerShell, then execute: Set-CsUser -Identity <UserName> -EnterpriseVoiceEnabled \$true -HostedVoiceMail \$true -OnPremLineURI <tel:+PhoneNumber>	<u>Identity</u> : User name <u>EnterpriseVoiceEnabled</u> : \$true <u>HostedVoiceMail</u> : \$true <u>OnPremLineUri</u> : tel:+E164 format number
User Association to appropriate Cloud Connector Edition Open an online session on the PowerShell, then execute: Set-CsUserPstnSettings -Id <UserName> -HybridPSTNSite <PSTNSiteName>	<u>Id</u> : User name <u>HybridPSTNSite</u> : appropriate CCE where the user will be associated

7.2 Standalone specific configuration

Menu	Value
Cloud Connector Edition Wizard (version 2.1.0.22)	
CCE General Information (step) During wizard installation ensure that CCE is deployed on standalone mode	<u>Installation Type</u> : Standalone CCE or First CCE in HA <u>Site Directory</u> : path to shared directory where CCE files will be stored <u>User</u> : Skype for Business Online admin user name <u>Password</u> : Skype for Business Online admin password
CCE Gateway configuration (step) During the CCE gateway configuration, following mediation server options must be configured	<u>EnableReferSupport</u> : False <u>EnableFastFailoverTimer</u> : False <u>ForwardPAL</u> : False <u>ForwardCallHistory</u> : True
Mediation Server "Manual configuration" Following mediation server parameters must be configured manually through PowerShell Online Interface In addition to above configured parameters To configure the mediation server trunk with VISIT SIP parameters: <ul style="list-style-type: none"> - Logon the mediation server using the CCE domain - Open PS console and execute the following cmdlet Set-CsTrunkconfiguration -RTCPActiveCalls <i>\$false</i> -RTCPCallsOnHold <i>\$false</i> -SRTPMode <i>Optional</i>	<u>RTCPActiveCalls</u> : \$False <u>RTCPCallsOnHold</u> : \$False <u>SRTPMode</u> : Optional WARNING: The manual configuration will be lost after each CCE update.
AudioCodes SBC Configuration Wizard (wizard version min 2.20)	
Product (Step 1 of 7) Choose product type and version:	<u>Product</u> : Mediant 800, 1000 or software depending on the Gateway type used for the deployment <u>Version</u> : 7.2 Use defaults from template must be checked <u>End Customer</u> : corresponds to customer name ex: "OBS" <u>Country</u> : corresponds to customer country ex: "France" <u>Integrator</u> : if needed corresponds to integrator name ex: "OBS" <u>Installer</u> : if needed corresponds to installer name ex: "OBS"
General Setup (Step 2 of 7) Choose application type, configuration template and network setup	<u>Application</u> : Cloud Connector (CCE) Appliance <u>Equipment (interop)</u> : SIP Trunk <u>SIP Trunk</u> : Orange BTIP SIP Trunk <u>Network Setup</u> : One port:LAN
System Configuration (Step 3 of 7) Configure system parameters	<u>Primary NTP Server</u> : "Optional" NTP server IP address <u>Secondary NTP Server</u> : "Optional" backup NTP server IP address <u>Time Zone</u> : depending on customer local time zone "default value GMT" <u>Web Interface</u> : HTTPS

Menu	Value
	<u>CLI Interface:</u> SSH <u>Enable Syslog:</u> Checked <u>Syslog IP:</u> IP address of the syslog server <u>Local DNS Table:</u> Unchecked
User Management	
LAN Interface Configuration (Step 4 of 7) Configure LAN network interface	<u>Physical Port:</u> Group 1(GE_1) <u>Vlan ID:</u> Untagged <u>IP address:</u> SBC IP address (ex: 192.168.0.2) <u>Subnet mask:</u> SBC subnet mask (ex:255.255.0.0) <u>Default Gateway:</u> SBC default gateway ip address (ex:192.168.0.1) <u>Primary DNS:</u> IP address of the DNS server used by the SBC <u>Secondary DNS:</u> "Optional" <u>OAM Interface:</u> LAN
IP-PBX Configuration (Step 5 of 7) Configure Microsoft Skype CCE address and communication protocol details	<u>Address:</u> Mediation Server IP address <u>Backup Address:</u> Empty <u>SIP Domain:</u> CCE FQDN <u>Keep Alive:</u> Checked <u>Transport Type:</u> TCP <u>Destination Port:</u> 5068 <u>Listening Port:</u> 5068 <u>Media Protocol:</u> RTP <u>Base Port:</u> 6000 <u>Number of Sessions:</u> 1000
SIP Trunk Configuration (Step 6 of 7) Configure Orange BTIP SIP Trunk Address and communication protocol details	<u>Address:</u> aSBC Nominal Address <u>Backup Address:</u> aSBC Backup Address <u>SIP Domain:</u> Empty <u>Keep Alive:</u> Checked <u>Transport Type:</u> TCP <u>Destination Port:</u> 5060 <u>Listening Port:</u> 5060 <u>Media Protocol:</u> RTP <u>Base Port:</u> 16400 <u>Number of Sessions:</u> 1000 <u>Account Type:</u> None <u>Trunk Main Line:</u> Empty
Number Manipulation and routing (Step 7 of 7) "Optional" Configure number manipulation rules and routing policy	Check needed manipulation type and fill: Prefix Remove: corresponds to number of digits to remove Add: corresponds to number of digits to add

7.3 High availability specific configuration

Menu	Value
Cloud Connector Edition 1 Wizard (version 2.1.0.22)	
CCE General Information (step) During wizard installation ensure that CCE is deployed on standalone mode	<u>Installation Type</u> : Standalone CCE or First CCE in HA <u>Site Directory</u> : path to shared directory where CCE 1 files will be stored <u>User</u> : Skype for Business Online admin user name <u>Password</u> : Skype for Business Online admin password
CCE Gateway configuration (step) During the CCE gateway configuration, following mediation server options must be configured	<u>EnableReferSupport</u> : False <u>EnableFastFailoverTimer</u> : False <u>ForwardPAL</u> : False <u>ForwardCallHistory</u> : True
Mediation Server "Manual configuration" Following mediation server parameters must be configured manually through PowerShell Online Interface In addition to above configured parameters To configure the mediation server trunk with VISIT SIP parameters: <ul style="list-style-type: none"> - Logon the mediation server using the CCE domain - Open PS console and execute the following cmdlet Set-CsTrunkconfiguration -RTCPActiveCalls <i>\$false</i> -RTCPCallsOnHold <i>\$false</i> -SRTPMode <i>Optional</i>	<u>RTCPActiveCalls</u> : \$False <u>RTCPCallsOnHold</u> : \$False <u>SRTPMode</u> : Optional WARNING: The manual configuration will be lost after each CCE update.
Cloud Connector Edition 2 Wizard (version 2.1.0.22)	
CCE General Information (step) During wizard installation ensure that CCE is deployed on standalone mode	<u>Installation Type</u> : HA <u>Site Directory</u> : path to shared directory where CCE 1 installation files were stored <u>User</u> : Skype for Business Online admin user name <u>Password</u> : Skype for Business Online admin password
CCE Gateway configuration (step) During the CCE gateway configuration, following mediation server options must be configured	<u>EnableReferSupport</u> : False <u>EnableFastFailoverTimer</u> : False <u>ForwardPAL</u> : False <u>ForwardCallHistory</u> : True
Mediation Server "Manual configuration" Following mediation server parameters must be configured manually through PowerShell Online Interface In addition to above configured parameters To configure the mediation server trunk with VISIT SIP parameters: <ul style="list-style-type: none"> - Logon the mediation server using the CCE domain - Open PS console and execute the following cmdlet Set-CsTrunkconfiguration -RTCPActiveCalls <i>\$false</i> -RTCPCallsOnHold <i>\$false</i> -SRTPMode <i>Optional</i>	<u>RTCPActiveCalls</u> : \$False <u>RTCPCallsOnHold</u> : \$False <u>SRTPMode</u> : Optional WARNING: The manual configuration will be lost after each CCE update.
AudioCodes SBC 1 Configuration Wizard (wizard version min 2.20)	
Product (Step 1 of 7) Choose product type and version:	<u>Product</u> : Mediant 800, 1000 or software depending on the Gateway type used for the deployment <u>Version</u> : 7.2

Menu	Value
	<p>Use defaults from template must be checked</p> <p><u>End Customer</u>: corresponds to customer name ex: "OBS"</p> <p><u>Country</u>: corresponds to customer country ex: "France"</p> <p><u>Integrator</u>: if needed corresponds to integrator name ex: "OBS"</p> <p><u>Installer</u>: if needed corresponds to installer name ex: "OBS"</p>
<p>General Setup (Step 2 of 7)</p> <p>Choose application type, configuration template and network setup</p>	<p><u>Application</u>: Cloud Connector (CCE) Appliance</p> <p><u>Equipment (interop)</u>: SIP Trunk</p> <p><u>SIP Trunk</u>: Orange BTIP SIP Trunk</p> <p><u>Network Setup</u>: One port:LAN</p>
<p>System Configuration (Step 3 of 7)</p> <p>Configure system parameters</p>	<p><u>Primary NTP Server</u>: "Optional" NTP server IP address</p> <p><u>Secondary NTP Server</u>: "Optional" backup NTP server IP address</p> <p><u>Time Zone</u>: depending on customer local time zone "default value GMT"</p> <p><u>Web Interface</u>: HTTPS</p> <p><u>CLI Interface</u>: SSH</p> <p><u>Enable Syslog</u>: Checked</p> <p><u>Syslog IP</u>: IP address of the syslog server</p> <p><u>Local DNS Table</u>: Unchecked</p>
User Management	
<p>LAN Interface Configuration (Step 4 of 7)</p> <p>Configure LAN network interface</p>	<p><u>Physical Port</u>: Group 1(GE_1)</p> <p><u>Vlan ID</u>: Untagged</p> <p><u>IP address</u>: SBC IP address (ex: 192.168.0.2)</p> <p><u>Subnet mask</u>: SBC subnet mask (ex:255.255.0.0)</p> <p><u>Default Gateway</u>: SBC default gateway ip address (ex:192.168.0.1)</p> <p><u>Primary DNS</u>: IP address of the DNS server used by the SBC</p> <p><u>Secondary DNS</u>: "Optional"</p> <p><u>OAM Interface</u>: LAN</p>
<p>IP-PBX Configuration (Step 5 of 7)</p> <p>Configure Microsoft Skype CCE address and communication protocol details</p>	<p><u>Address</u>: Mediation Server IP address</p> <p><u>Backup Address</u>: Empty</p> <p><u>SIP Domain</u>: CCE FQDN</p> <p><u>Keep Alive</u>: Checked</p> <p><u>Transport Type</u>: TCP</p> <p><u>Destination Port</u>: 5068</p> <p><u>Listening Port</u>: 5068</p> <p><u>Media Protocol</u>: RTP</p> <p><u>Base Port</u>: 6000</p> <p><u>Number of Sessions</u>: 1000</p>
<p>SIP Trunk Configuration (Step 6 of 7)</p> <p>Configure Orange BTIP SIP Trunk Address and communication protocol details</p>	<p><u>Address</u>: aSBC Nominal Address</p> <p><u>Backup Address</u>: aSBC Backup Address</p> <p><u>SIP Domain</u>: Empty</p> <p><u>Keep Alive</u>: Checked</p>

Menu	Value
	<u>Transport Type:</u> TCP <u>Destination Port:</u> 5060 <u>Listening Port:</u> 5060 <u>Media Protocol:</u> RTP <u>Base Port:</u> 16400 <u>Number of Sessions:</u> 1000 <u>Account Type:</u> None <u>Trunk Main Line:</u> Empty
Number Manipulation and routing (Step 7 of 7) "Optional" Configure number manipulation rules and routing policy	Check needed manipulation type and fill: <u>Prefix</u> Remove: corresponds to number of digits to remove Add: corresponds to number of digits to add
SBC 1 High Availability IP interface configuration Configure IP interface for HA mode: On the SBC1 WebUi interface > Setup menu > IP network > IP interface > Add new IP interface for HA	<u>Name:</u> HA <u>Application Type:</u> MAINTENANCE <u>Ethernet Device:</u> HA Interface <u>IP Address:</u> SBC IP address to use for HA <u>Prefix Length:</u> Subnet length prefix (ex:30)
SBC 1 High Availability Ethernet Device configuration Configure Ethernet device for HA mode: On the SBC1 WebUi interface > Setup menu > IP network > Ethernet devices > Add new Ethernet device for HA	<u>Name:</u> HA <u>VLAN ID:</u> 99 <u>Underlying interface:</u> HA Group <u>Tagging:</u> Untagged <u>Prefix Length:</u> 1500
SBC 1 High Availability Ethernet Group configuration Configure Ethernet group for HA mode: On the SBC1 WebUi interface > Setup menu > IP network > Ethernet groups > Add new Ethernet group for HA	<u>Index:</u> The number of index (ex:3) <u>Mode:</u> Single or REDUN_2RX1_1TX <u>Member1:</u> HA Physical port <u>Member2:</u> Only in case of redundant mode, HA second port
SBC 1 High Availability Settings On the SBC1 WebUi interface > Setup menu > IP network > HA settings	<u>HA Remote Address:</u> The IP address of the second SBC(ex:192.168.1.1) <u>HA Device name:</u> The local SBC device name (ex: SBC2) <u>Redundant HA device name:</u> The distant SBC HA device name (ex: SBC1)
SBC 1 High Availability .INI configuration file export Export the SBC1 .INI file including HA availability configuration	Check needed manipulation type and fill: <u>Prefix</u> Remove: corresponds to number of digits to remove Add: corresponds to number of digits to add
SBC 1 High Availability .INI configuration file modification Modify the SBC1 .INI file including HA availability configuration	<u>HA Remote Address:</u> The IP address of the second SBC(ex:192.168.1.2) <u>HAUnitIdName:</u> The local SBC device name (ex: SBC1)
SBC 2 High Availability settings Access the SBC2 using its default IP address	Import the modified .INI file configuration on the SBC2

7.4 Nominal/backup mode specific configuration

Menu	Value
Cloud Connector Edition Wizard (version 2.1.0.22)	
CCE General Information (step) During wizard installation ensure that CCE is deployed on standalone mode	<u>Installation Type:</u> Standalone CCE or First CCE in HA <u>Site Directory:</u> path to shared directory where CCE files will be stored <u>User:</u> Skype for Business Online admin user name <u>Password:</u> Skype for Business Online admin password
CCE Gateway configuration (step) During the CCE gateway configuration, following mediation server options must be configured	<u>EnableReferSupport:</u> False <u>EnableFastFailoverTimer:</u> False <u>ForwardPAL:</u> False <u>ForwardCallHistory:</u> True
Mediation Server "Manual configuration" Following mediation server parameters must be configured manually through PowerShell Online Interface In addition to above configured parameters To configure the mediation server trunk with VISIT SIP parameters: <ul style="list-style-type: none"> - Logon the mediation server using the CCE domain - Open PS console and execute the following cmdlet Set-CsTrunkconfiguration -RTCPActiveCalls <i>\$false</i> -RTCPCallsOnHold <i>\$false</i> -SRTPMode <i>Optional</i>	<u>RTCPActiveCalls:</u> \$False <u>RTCPCallsOnHold:</u> \$False <u>SRTPMode:</u> Optional WARNING: The manual configuration will be lost after each CCE update.
Same configuration steps must be performed on All needed CCEs	
AudioCodes SBC Configuration Wizard (wizard version min 2.20)	
Product (Step 1 of 7) Choose product type and version:	<u>Product:</u> Mediant 800, 1000 or software depending on the Gateway type used for the deployment <u>Version:</u> 7.2 Use defaults from template must be checked <u>End Customer:</u> corresponds to customer name ex: "OBS" <u>Country:</u> corresponds to customer country ex: "France" <u>Integrator:</u> if needed corresponds to integrator name ex: "OBS" <u>Installer:</u> if needed corresponds to installer name ex: "OBS"
General Setup (Step 2 of 7) Choose application type, configuration template and network setup	<u>Application:</u> Cloud Connector (CCE) Appliance <u>Equipment (interop):</u> SIP Trunk <u>SIP Trunk:</u> Orange BTIP SIP Trunk <u>Network Setup:</u> One port:LAN
System Configuration (Step 3 of 7) Configure system parameters	<u>Primary NTP Server:</u> "Optional" NTP server IP address <u>Secondary NTP Server:</u> "Optional" backup NTP server IP address <u>Time Zone:</u> depending on customer local time zone "default value GMT"

Menu	Value
	<u>Web Interface:</u> HTTPS <u>CLI Interface:</u> SSH <u>Enable Syslog:</u> Checked <u>Syslog IP:</u> IP address of the syslog server <u>Local DNS Table:</u> Unchecked
User Management	
LAN Interface Configuration (Step 4 of 7) Configure LAN network interface	<u>Physical Port:</u> Group 1(GE_1) <u>Vlan ID:</u> Untagged <u>IP address:</u> SBC IP address (ex: 192.168.0.2) <u>Subnet mask:</u> SBC subnet mask (ex:255.255.0.0) <u>Default Gateway:</u> SBC default gateway ip address (ex:192.168.0.1) <u>Primary DNS:</u> IP address of the DNS server used by the SBC <u>Secondary DNS:</u> "Optional" <u>OAM Interface:</u> LAN
IP-PBX Configuration (Step 5 of 7) Configure Microsoft Skype CCE address and communication protocol details	<u>Address:</u> Mediation Server IP address <u>Backup Address:</u> Empty <u>SIP Domain:</u> CCE FQDN <u>Keep Alive:</u> Checked <u>Transport Type:</u> TCP <u>Destination Port:</u> 5068 <u>Listening Port:</u> 5068 <u>Media Protocol:</u> RTP <u>Base Port:</u> 6000 <u>Number of Sessions:</u> 1000
SIP Trunk Configuration (Step 6 of 7) Configure Orange BTIP SIP Trunk Address and communication protocol details	<u>Address:</u> aSBC Nominal Address <u>Backup Address:</u> aSBC Backup Address <u>SIP Domain:</u> Empty <u>Keep Alive:</u> Checked <u>Transport Type:</u> TCP <u>Destination Port:</u> 5060 <u>Listening Port:</u> 5060 <u>Media Protocol:</u> RTP <u>Base Port:</u> 16400 <u>Number of Sessions:</u> 1000 <u>Account Type:</u> None <u>Trunk Main Line:</u> Empty
Number Manipulation and routing (Step 7 of 7) "Optional" Configure number manipulation rules and routing policy	Check needed manipulation type and fill: <u>Prefix</u> <u>Remove:</u> corresponds to number of digits to remove <u>Add:</u> corresponds to number of digits to add
SBC 1 Nominal and Backup configuration On the SBC1 WebUi interface > Setup menu > Signalling & Media > Proxy > Skype proxy set	<u>Name:</u> ProxySet_Skype <u>SBC IPv4 SIP interface:</u> SIP interface Skype <u>Proxy Hot Swap:</u> Enable <u>Proxy Load Balancing Method:</u> Random Weights
Same configuration steps must be performed on both SBCs	

7.5 Round-Robin mode specific configuration

Menu	Value
Cloud Connector Edition Wizard (version 2.1.0.22)	
CCE General Information (step) During wizard installation ensure that CCE is deployed on standalone mode	<u>Installation Type:</u> Standalone CCE or First CCE in HA <u>Site Directory:</u> path to shared directory where CCE files will be stored <u>User:</u> Skype for Business Online admin user name <u>Password:</u> Skype for Business Online admin password
CCE Gateway configuration (step) During the CCE gateway configuration, following mediation server options must be configured	<u>EnableReferSupport:</u> False <u>EnableFastFailoverTimer:</u> False <u>ForwardPAL:</u> False <u>ForwardCallHistory:</u> True
Mediation Server "Manual configuration" Following mediation server parameters must be configured manually through PowerShell Online Interface In addition to above configured parameters To configure the mediation server trunk with VISIT SIP parameters: <ul style="list-style-type: none"> - Logon the mediation server using the CCE domain - Open PS console and execute the following cmdlet Set-CsTrunkconfiguration -RTCPActiveCalls <i>\$false</i> -RTCPCallsOnHold <i>\$false</i> -SRTPMode <i>Optional</i>	<u>RTCPActiveCalls:</u> \$False <u>RTCPCallsOnHold:</u> \$False <u>SRTPMode:</u> Optional WARNING: The manual configuration will be lost after each CCE update.
Same configuration steps must be performed on both CCEs	
AudioCodes SBC Configuration Wizard (wizard version min 2.20)	
Product (Step 1 of 7) Choose product type and version:	<u>Product:</u> Mediant 800, 1000 or software depending on the Gateway type used for the deployment <u>Version:</u> 7.2 Use defaults from template must be checked <u>End Customer:</u> corresponds to customer name ex: "OBS" <u>Country:</u> corresponds to customer country ex: "France" <u>Integrator:</u> if needed corresponds to integrator name ex: "OBS" <u>Installer:</u> if needed corresponds to installer name ex: "OBS"
General Setup (Step 2 of 7) Choose application type, configuration template and network setup	<u>Application:</u> Cloud Connector (CCE) Appliance <u>Equipment (interop):</u> SIP Trunk <u>SIP Trunk:</u> Orange BTIP SIP Trunk <u>Network Setup:</u> One port:LAN
System Configuration (Step 3 of 7) Configure system parameters	<u>Primary NTP Server:</u> "Optional" NTP server IP address <u>Secondary NTP Server:</u> "Optional" backup NTP server IP address <u>Time Zone:</u> depending on customer local time zone "default value GMT"

Menu	Value
	<u>Web Interface:</u> HTTPS <u>CLI Interface:</u> SSH <u>Enable Syslog:</u> Checked <u>Syslog IP:</u> IP address of the syslog server <u>Local DNS Table:</u> Unchecked
User Management	
LAN Interface Configuration (Step 4 of 7) Configure LAN network interface	<u>Physical Port:</u> Group 1(GE_1) <u>Vlan ID:</u> Untagged <u>IP address:</u> SBC IP address (ex: 192.168.0.2) <u>Subnet mask:</u> SBC subnet mask (ex:255.255.0.0) <u>Default Gateway:</u> SBC default gateway ip address (ex:192.168.0.1) <u>Primary DNS:</u> IP address of the DNS server used by the SBC <u>Secondary DNS:</u> "Optional" <u>OAM Interface:</u> LAN
IP-PBX Configuration (Step 5 of 7) Configure Microsoft Skype CCE address and communication protocol details	<u>Address:</u> Mediation Server IP address <u>Backup Address:</u> Empty <u>SIP Domain:</u> CCE FQDN <u>Keep Alive:</u> Checked <u>Transport Type:</u> TCP <u>Destination Port:</u> 5068 <u>Listening Port:</u> 5068 <u>Media Protocol:</u> RTP <u>Base Port:</u> 6000 <u>Number of Sessions:</u> 1000
SIP Trunk Configuration (Step 6 of 7) Configure Orange BTIP SIP Trunk Address and communication protocol details	<u>Address:</u> aSBC Nominal Address <u>Backup Address:</u> aSBC Backup Address <u>SIP Domain:</u> Empty <u>Keep Alive:</u> Checked <u>Transport Type:</u> TCP <u>Destination Port:</u> 5060 <u>Listening Port:</u> 5060 <u>Media Protocol:</u> RTP <u>Base Port:</u> 16400 <u>Number of Sessions:</u> 1000 <u>Account Type:</u> None <u>Trunk Main Line:</u> Empty
Number Manipulation and routing (Step 7 of 7) "Optional" Configure number manipulation rules and routing policy	Check needed manipulation type and fill: <u>Prefix</u> <u>Remove:</u> corresponds to number of digits to remove <u>Add:</u> corresponds to number of digits to add
SBC 1 Nominal and Backup configuration On the SBC1 WebUi interface > Setup menu > Signalling & Media > Proxy > Skype proxy set	<u>Name:</u> ProxySet_Skype <u>SBC IPv4 SIP interface:</u> SIP interface Skype <u>Proxy Hot Swap:</u> Enable <u>Proxy Load Balancing Method:</u> Round Robin
Same configuration steps must be performed on both SBCs	

